

Faber FFSD 6PR 8S Ace

Faber FFSD 6PR 8S Ace Dishwasher User Manual

Model: FFSD 6PR 8S Ace

1. INTRODUCTION

Thank you for choosing the Faber FFSD 6PR 8S Ace Dishwasher. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions carefully before using the dishwasher and retain them for future reference.

This compact dishwasher is designed for convenience and efficiency, offering 8 place settings and multiple wash programs to suit various dishwashing needs.

2. SAFETY INFORMATION

General Safety:

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged or malfunctioning.
- Keep children away from the dishwasher, especially when it is operating or when the door is open.
- Dishwasher detergents are corrosive; keep them out of reach of children.
- Only use detergents and rinse aids specifically designed for automatic dishwashers.
- Do not touch the heating element during or immediately after use.

Electrical Safety:

- Connect the appliance to a properly rated power supply.
- Do not use extension cords or adapter plugs.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

Water Safety:

- Ensure water inlet and outlet hoses are securely connected to prevent leaks.
- The maximum inlet water temperature should not exceed 60°C.

3. PRODUCT OVERVIEW

The Faber FFSD 6PR 8S Ace Dishwasher is a freestanding unit designed for efficient dish cleaning. It features an intuitive control panel and a spacious interior for various dish sizes.

Exterior View



Figure 3.1: Front view of the Faber FFSD 6PR 8S Ace Dishwasher.

Control Panel



Figure 3.2: Close-up of the control panel, showing the LED display and program selection buttons.

Interior Components



Figure 3.3: Interior view displaying the upper and lower racks, and the multifunction 3rd layer cutlery tray.

4. SETUP AND INSTALLATION

The Faber FFSD 6PR 8S Ace Dishwasher is a freestanding unit. Proper installation is crucial for optimal performance and safety.

Dimensions

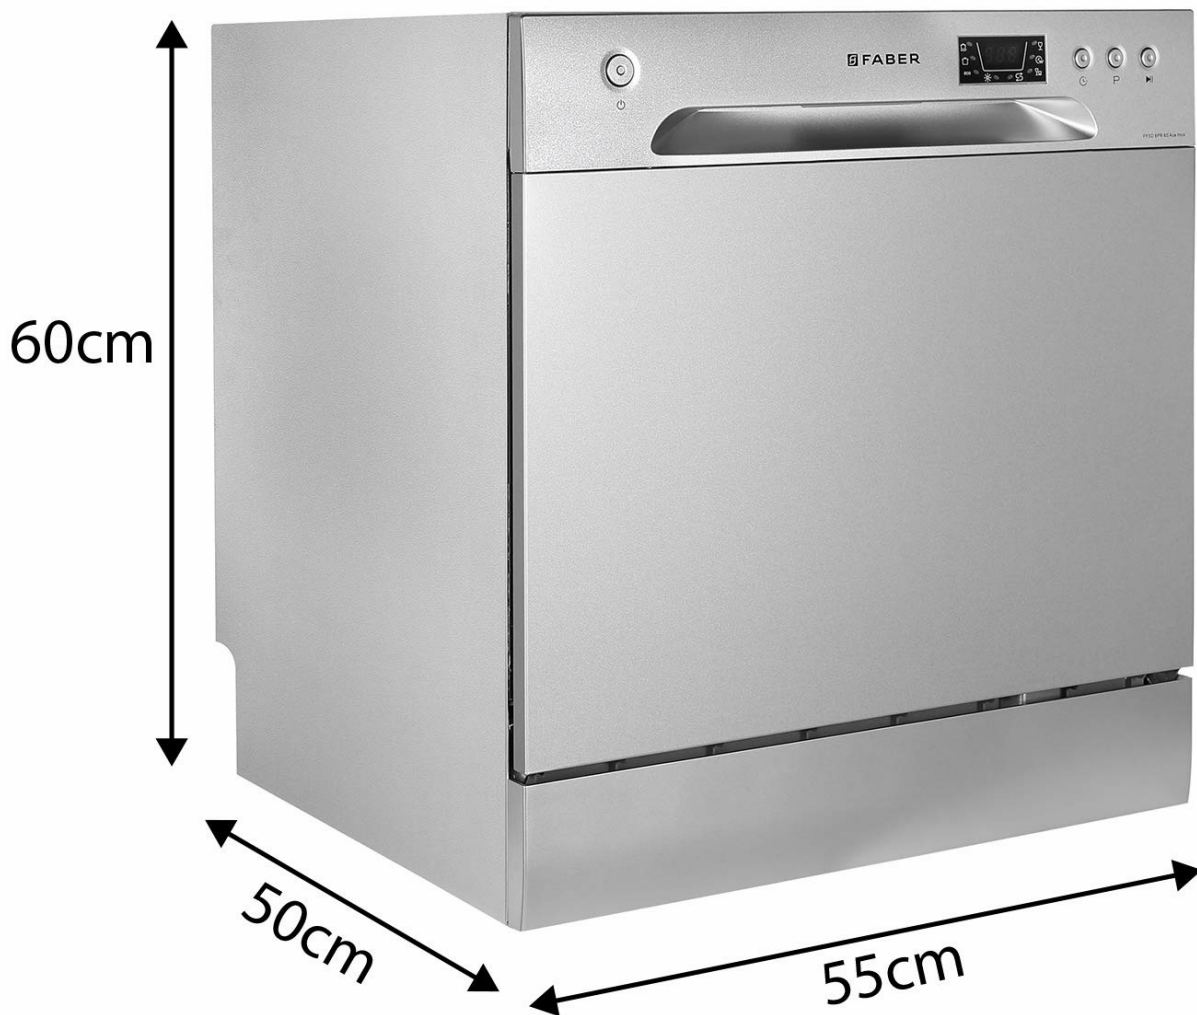


Figure 4.1: Dishwasher dimensions for placement planning.

- **Product Dimensions (D x W x H):** 50D x 60W x 55H Centimeters
- **Installation Type:** Freestanding

Installation Steps (Summary):

1. **Positioning:** Place the dishwasher on a level, stable surface near water and electrical connections.
2. **Water Inlet Connection:** Connect the water inlet hose to a cold water supply tap. Ensure the connection is tight to prevent leaks.
3. **Water Outlet Connection:** Connect the drain hose to a suitable drain pipe or sink trap. Ensure the hose is not kinked.
4. **Electrical Connection:** Plug the dishwasher into a grounded electrical outlet.
5. **Leveling:** Adjust the appliance's feet to ensure it is perfectly level.

For detailed installation instructions, please refer to the separate installation guide provided with your appliance.

5. OPERATING INSTRUCTIONS

Follow these steps for effective and efficient dishwashing.

Loading Dishes

The dishwasher has an 8 place setting capacity, suitable for various Indian kitchen utensils. Proper loading ensures optimal cleaning results.



Figure 5.1: Example of a loaded dishwasher interior.

- **Scrape Off Food:** Remove large food particles from dishes before loading. Pre-rinsing is generally not required for most programs.
- **Lower Rack:** Ideal for dinner plates, serving dishes, pots, and pans. Ensure items do not block the spray arm.
- **Upper Rack:** Suitable for glasses, cups, smaller plates, and bowls. The upper shelf is adjustable to create space for larger utensils in the lower rack.
- **Cutlery Tray:** Use the multifunction 3rd layer on top for cutlery (knives, forks, spoons). Arrange them separately to

ensure thorough cleaning.

- **Avoid Overloading:** Do not overcrowd the racks, as this can hinder water circulation and cleaning performance.

Adding Detergent and Rinse Aid

- **Detergent:** Fill the detergent dispenser with the recommended amount of dishwasher detergent. Close the dispenser lid securely.
- **Rinse Aid:** Check the rinse aid indicator. If low, refill the rinse aid dispenser. Rinse aid helps with drying and prevents water spots.

Selecting a Wash Program

The dishwasher offers 6 wash programs. Select the program that best suits the soil level and type of dishes.



Figure 5.2: Visual representation of some wash programs.

Program	Description	Water Consumption (approx.)
---------	-------------	-----------------------------

Program	Description	Water Consumption (approx.)
Intensive	For heavily soiled dishes, pots, pans, and bakeware with dried-on food.	8 liters
Normal	For normally soiled dishes, suitable for everyday use.	8 liters
Eco	Energy and water-saving program for normally soiled dishes.	8 liters
Glass	For lightly soiled glassware and delicate items.	8 liters
90min	For lightly to normally soiled dishes requiring a quicker wash.	8 liters
Rapid	A short program for lightly soiled dishes that do not need drying.	8 liters

Starting a Wash Cycle:

1. Load dishes and add detergent/rinse aid.
2. Close the dishwasher door firmly.
3. Press the Power button.
4. Select the desired wash program using the program selection button.
5. Press the Start/Pause button to begin the cycle.

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

- **Cleaning Filters:** Regularly check and clean the filter system at the bottom of the dishwasher to remove food debris.
- **Cleaning Spray Arms:** Ensure the spray arm nozzles are not clogged. Remove and clean them if necessary.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- **Interior Cleaning:** Periodically run an empty cycle with a dishwasher cleaner to remove grease and limescale buildup.
- **Door Seal:** Clean the door seal regularly to prevent food particles from accumulating.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a program and press Start.
Dishes are not clean	Improper loading; Insufficient detergent; Clogged spray arms/filters; Incorrect program.	Reload dishes correctly; Add more detergent; Clean spray arms and filters; Select a more intensive program.
Water not draining	Clogged drain hose or filter; Drain pump malfunction.	Clean the filter and check the drain hose for kinks; If problem persists, contact service.

Problem	Possible Cause	Solution
White spots on dishes	Lack of rinse aid; Hard water.	Refill rinse aid dispenser; Consider using dishwasher salt if applicable (check model features).
Unusual noise	Dishes hitting spray arms; Foreign object in pump.	Rearrange dishes; Inspect the bottom of the dishwasher for foreign objects.

If the problem persists after attempting these solutions, please contact Faber customer service.

8. SPECIFICATIONS

Feature	Specification
Brand	Faber
Model Name	FFSD 6PR 8S Ace Inox
Installation Type	Freestanding
Product Dimensions (D x W x H)	50D x 60W x 55H Centimeters
Capacity	8 Place Settings
Noise Level	49 Decibels
Controls Type	intensive, normal, eco, 90min, glass and rapid
Number Of Settings	6 (Wash Programs)
Water Consumption	8 litres per cycle
Material Type	Stainless Steel
Finish Type	Stainless Steel
Included Components	1 Dishwasher, User Manual

9. WARRANTY AND SUPPORT

Warranty Information:

- This product comes with a **2-year comprehensive warranty** on the product.
- Additionally, there is a **5-year warranty** on the inner cavity (rust through only).

Customer Support:

For any service requests, technical assistance, or warranty claims, please contact Faber customer service. Ensure you have your product model number and purchase details ready when contacting support.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question