

PLAY 1

PLAY Playgo Kitchen Mixer Pretend Home Kitchen Appliances Set

Model: 1 | Brand: PLAY

INTRODUCTION

This instruction manual provides essential information for the safe and proper use of your Playgo Kitchen Mixer Pretend Home Kitchen Appliances Set. Designed for children aged 3 years and up, this set offers a realistic and engaging pretend play experience, encouraging interaction and imaginative role-play in the kitchen. Please read this manual thoroughly before allowing children to play with the set.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Always supervise children during play.
- Ensure all parts are securely assembled before use.
- Do not use real food or liquids in the appliances unless specified.
- Keep batteries out of reach of small children.

PACKAGE CONTENTS

Your Playgo Kitchen Mixer Pretend Home Kitchen Appliances Set includes the following items:

- 1x Kitchen Mixer (convertible to handheld)
- 1x Mixer Bowl
- 2x Mixer Beaters
- 1x Coffee Maker
- 1x Detachable Coffee Pot
- 1x Toaster
- 2x Play Bread Slices
- 1x Blender
- 2x Play Cups

- 2x Play Plates
- 2x Play Spoons

SETUP

Some appliances in this set feature battery-operated functions for enhanced realism. Please refer to the individual appliance for specific battery requirements (type and quantity) and installation instructions, typically located on the underside or back of the unit.

Note: The product specifications indicate 2 AAA batteries are included for certain functions. Additional batteries may be required for other electronic components.

OPERATING INSTRUCTIONS

1. Kitchen Mixer



Image: The Playgo Kitchen Mixer, showcasing its design with a mixing bowl and beaters.

The mixer can be used as a stand mixer or a portable hand mixer. The beaters are designed to rotate for realistic play. To operate, ensure batteries are installed (if applicable) and activate the power switch. The mixer body can be easily removed from its stand for handheld use.



Image: A hand demonstrating the portable handheld mixer function.

2. Coffee Maker

The coffee maker features a detachable coffee pot. Fill the top compartment with play water (not included) and press the power button (if battery-operated) to simulate brewing with realistic lights and sounds.

3. Toaster

Insert the two play bread slices into the toaster slots. Push down the lever (if applicable) and turn the dial to simulate toasting. The bread slices will pop up when the 'toasting' cycle is complete.

4. Blender

The blender has a removable lid. Place play items (not included) inside the blender cup. Press the power button (if battery-operated) to activate the spinning action and light effects, simulating a real blender.

MAINTENANCE

- Clean all plastic parts with a damp cloth and mild soap. Do not immerse electronic components in water.
- Ensure all parts are dry before storing.
- Remove batteries from electronic appliances if the toy will not be used for an extended period.

TROUBLESHOOTING

Appliance Not Functioning (Electronic Parts)

- Check if batteries are correctly installed with the proper polarity.
- Replace old or depleted batteries with new ones.
- Ensure the power switch is in the 'ON' position.

SPECIFICATIONS

- **Product Dimensions:** 5.98 x 3.35 x 6.14 inches
- **Item Weight:** 11.5 ounces
- **Item Model Number:** 1
- **Manufacturer Recommended Age:** 36 months - 10 years
- **Batteries:** 2 AAA batteries required (included for mixer, check individual appliances for others)
- **Material:** Durable high-quality plastic
- **Manufacturer:** Midos Toys Distributor
- **Release Date:** January 13, 2021

WARRANTY AND SUPPORT

For any questions or concerns regarding your Playgo Kitchen Mixer Pretend Home Kitchen Appliances Set, please refer to the product packaging for manufacturer contact information. Keep your purchase receipt for any potential warranty claims.