

manuals.plus /

› **CAMAKT** /

› **CAMAKT Hidden Spy Camera USB Charger Camera Instruction Manual**

CAMAKT 8414852541956

CAMAKT Hidden Spy Camera USB Charger Camera Instruction Manual

Model: 8414852541956

1. PRODUCT OVERVIEW

The CAMAKT Hidden Spy Camera USB Charger Camera is a compact device designed for discreet video recording. It functions as a standard USB wall charger while housing a 1080P HD camera with motion detection capabilities. This device records video to an SD card (not included) and does not require an app or Wi-Fi connection for operation.

1080P HD VIDEO



The camera features 1920 * 1080P HD resolution, you can see exactly what's happened in the video.

Image: The CAMAKT Hidden Spy Camera USB Charger Camera, a black rectangular device with a USB port and electrical prongs.

2. PACKAGE CONTENTS

- CAMAKT Hidden Spy Camera USB Charger Camera
- User Manual

Note: An SD card (up to 128GB) is required for recording and is not included in the package.

3. SETUP INSTRUCTIONS

Follow these steps to set up your CAMAKT Hidden Spy Camera:

1. **Open the Front Cover:** Gently slide open the front cover of the charger camera to reveal the SD card slot and recording mode switch.
2. **Insert SD Card:** Insert a formatted micro SD card (up to 128GB, not included) into the designated slot. Ensure the card is inserted correctly until it clicks into place.
3. **Select Recording Mode:** Locate the switch labeled 'L' and 'M'.
 - Set to 'L' for **Continuous Recording**.
 - Set to 'M' for **Motion Detection Recording**.
4. **Plug into Outlet:** Plug the camera into a standard wall outlet. Ensure the USB port faces downwards for correct orientation and optimal recording angle.



Open the front cover



Insert your TF card
into the camera
(NOT INCLUDED)



Choose recording
mode
(L - continuous, recording
M - motion detection)



Plug in camera
to outlet

Image: A four-panel diagram illustrating the setup process: 1. Opening the front cover, 2. Inserting the TF card, 3. Choosing the recording mode (L for continuous, M for motion detection), and 4. Plugging the camera into an outlet.

Correctly plug in the camera to the outlet



Image: A diagram showing the correct way to plug the camera into an electrical outlet, with the USB port facing downwards, indicated by a green checkmark. An incorrect orientation with the USB port facing upwards is shown with a red 'X'.

4. OPERATING INSTRUCTIONS

4.1 Recording Modes

- **Continuous Recording (L):** The camera will record video continuously as long as it is plugged into a power source and has sufficient SD card space.
- **Motion Detection Recording (M):** The camera will only record when motion is detected. This mode conserves power and SD card space.

4.2 Video Quality and Features

- **Full HD 1080P:** Records video in 1920 x 1080P resolution.
- **70° Lens:** Features a center-located 70-degree lens for horizontal video recording.
- **Loop Recording:** When the SD card is full, the camera automatically overwrites the oldest video files with

new recordings.

- **No Audio Recording:** Due to Federal Law and Amazon policy, this device does not record audio.

EASY TO USE THE CHARGER CAMERA



1. Remove the cover.



2. Install SD card (not included).



3. Choose the recording mode you need



4. Plug in the power supply.

Image: An example of 1080P HD video quality, showing a clear view of a room with plants on a shelf.

3. Open this file and edit the date and time to the current values in the specified format (e.g., YYYY-MM-DD HH:MM:SS).
4. Save the file and safely eject the SD card.
5. Reinsert the SD card into the camera. The new date and time will be applied to subsequent recordings.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera's exterior. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **SD Card Management:** Regularly back up important footage and format the SD card periodically to maintain optimal recording performance and prevent data corruption.
- **Power Source:** Ensure the camera is always plugged into a stable power source during operation.

6. TROUBLESHOOTING

- **Camera Not Recording:**
 - Ensure an SD card is properly inserted and has sufficient free space.
 - Verify the recording mode switch (L/M) is set correctly.
 - Confirm the camera is securely plugged into a working power outlet.
 - Try formatting the SD card (this will erase all data).
- **Poor Video Quality / Pixelated Footage:**
 - Ensure the lens is clean and free from dust or smudges.
 - Verify the lighting conditions in the recording area are adequate. While the camera has a 'Low Light' feature, it is not an infrared night vision camera.
 - Ensure the SD card is not corrupted. Try using a different SD card.
- **Incorrect Date/Time Stamp:**
 - Follow the instructions in Section 4.4 to manually set the date and time via the configuration file on the SD card.
- **Camera Appears Obvious / Not Hidden:**
 - The camera is designed to blend in as a standard USB charger. The lens is a physical component and may be visible upon close inspection. Consider placement in less conspicuous locations.

7. SPECIFICATIONS

Feature	Specification
Model Number	8414852541956
Video Capture Resolution	1080p (Full HD)
Photo Sensor Technology	CMOS
Flash Memory Type	SD (up to 128GB, not included)
Video Capture Format	MP4
Connectivity Technology	USB
Special Feature	Low Light capability
Color	Black
Item Weight	4.2 ounces
Package Dimensions	4.76 x 3.66 x 1.34 inches
Manufacturer	Shenzhen LDTEK Technology Co.,Ltd

8. WARRANTY AND SUPPORT

CAMAKT offers a **12-month refund or replacement policy** for this product. Additionally, whole-life technical support is provided.

For any problems or questions regarding the use of your camera, please contact CAMAKT customer support. Refer to your purchase documentation or the seller's information on the platform where you purchased the product for specific contact details.