

[Manuals.plus](#) /

› [EverNice](#) /

› EverNice Bobbin Case Instruction Manual for Brother and Babylock Sewing Machines (Models XC0066051 / XC0066021)

## EverNice XC0066051 / XC0066021

# EverNice Bobbin Case Instruction Manual

Models: XC0066051 / XC0066021

## 1. INTRODUCTION

This manual provides essential instructions for the proper installation, operation, and maintenance of your EverNice Bobbin Case (Part Numbers XC0066051 / XC0066021). This high-quality bobbin case is designed to ensure smooth and consistent stitching for compatible sewing machines.

Please read this manual thoroughly before using the bobbin case to ensure optimal performance and longevity.

## 2. COMPATIBILITY

The EverNice Bobbin Case is compatible with a range of Brother and Babylock sewing machine models. Verify your machine model against the lists below to ensure proper fit and function.

### Compatible Babylock Sewing Machine Models:

- BL37
- BL6300
- BL6800

### Compatible Brother Sewing Machine Models:

- PS2250, PS2360, PS2470
- PS3100, PS3700
- PS53, PS55, PS57
- XL6040, XL6050, XL6060
- XL6452, XL6462
- XL6552, XL6562
- XR46, XR46C, XR52, XR52C, XR65T, XRX55

### 3. SETUP AND INSTALLATION

Before installing the new bobbin case, ensure your sewing machine is turned off and unplugged for safety. Refer to your sewing machine's specific manual for detailed instructions on accessing the bobbin area.

1. **Prepare the Machine:** Turn off and unplug your sewing machine. Open the bobbin cover or remove the free arm extension to access the bobbin area.
2. **Remove Old Bobbin Case (if applicable):** If replacing an existing bobbin case, carefully remove the old one. Note its orientation for easier installation of the new one.
3. **Inspect the New Bobbin Case:** Examine the EverNice Bobbin Case for any visible damage or defects.
4. **Insert the Bobbin:** Place a wound bobbin into the new bobbin case. Ensure the thread unwinds in the correct direction (usually counter-clockwise when viewed from the top of the bobbin).
5. **Thread the Bobbin Case:** Guide the bobbin thread through the tension spring and into the small slot on the side of the bobbin case. Pull the thread gently to ensure it moves freely and has proper tension.
6. **Install the Bobbin Case:** Carefully insert the bobbin case into its designated position in your sewing machine. It should click or seat firmly into place. Ensure it is correctly oriented and fully engaged.
7. **Close the Bobbin Area:** Close the bobbin cover or reattach the free arm extension.
8. **Test:** Plug in and turn on your sewing machine. Perform a few test stitches on scrap fabric to verify proper bobbin thread pickup and tension.



*Figure 1: Top-down view of the EverNice Bobbin Case, highlighting the metal tension spring and the central bobbin housing. This view is important for understanding bobbin placement and threading.*

### 4. OPERATION

Once installed, the bobbin case functions as an integral part of your sewing machine's lower threading system.

Proper operation relies on correct bobbin winding and threading.

### Key Operational Points:

- **Bobbin Winding:** Always wind bobbins evenly and smoothly according to your sewing machine's instructions. Unevenly wound bobbins can cause tension issues and tangles.
- **Bobbin Insertion:** Ensure the bobbin is inserted into the bobbin case so that the thread unwinds in the direction specified by your sewing machine manual (typically counter-clockwise).
- **Thread Tension:** The bobbin case has a built-in tension spring. If you experience consistent tension problems, first check your upper threading and needle. Only adjust the bobbin case tension screw as a last resort and with extreme care, as minor adjustments can significantly impact stitch quality.
- **Thread Pickup:** After inserting the bobbin case, lower the needle manually to pick up the bobbin thread, bringing it up through the needle plate before you begin sewing.



*Figure 2: Angled view of the EverNice Bobbin Case, illustrating its side profile and the opening where the bobbin thread exits after passing through the tension spring.*

## 5. MAINTENANCE

Regular maintenance of your bobbin case will help prevent common sewing issues and extend its lifespan.

- **Cleaning:** Periodically remove the bobbin case and use a small brush or lint remover to clean out any lint, dust, or thread fragments that may accumulate around the tension spring and inside the case. Accumulation can affect thread tension and cause skipped stitches.
- **Inspection:** Regularly inspect the bobbin case for any signs of wear, such as nicks, burrs, or damage to the tension spring. A damaged bobbin case can snag thread and lead to poor stitch quality.
- **Lubrication:** The bobbin case itself typically does not require lubrication. Refer to your sewing machine's manual for specific lubrication points within the bobbin area.



Figure 3: Bottom view of the EverNice Bobbin Case, showing the underside and attachment points. This perspective can be helpful during installation to ensure correct seating.

## 6. TROUBLESHOOTING

If you encounter issues while sewing, consider the following common troubleshooting steps related to the bobbin case:

Problem	Possible Cause	Solution
<b>Skipped Stitches</b>	Incorrect bobbin insertion, lint in bobbin case, damaged bobbin case.	Re-insert bobbin correctly, clean bobbin case, inspect for damage and replace if necessary.
<b>Thread Breakage (Bobbin)</b>	Bobbin wound too tightly/loosely, burrs on bobbin case, incorrect thread path.	Rewind bobbin, inspect bobbin case for rough spots, ensure thread is correctly routed through tension spring.

Problem	Possible Cause	Solution
<b>Uneven Stitching / Looping</b>	Incorrect bobbin tension, lint under tension spring.	Clean tension spring area, adjust bobbin tension screw slightly (turn clockwise for more tension, counter-clockwise for less). Test thoroughly.
<b>Bobbin Case Not Seating Properly</b>	Incorrect orientation, obstruction.	Ensure correct orientation as per machine manual, remove any lint or debris obstructing its path.

*Always refer to your sewing machine's primary instruction manual for comprehensive troubleshooting steps, as issues can often stem from other parts of the machine.*

## 7. SPECIFICATIONS

---

- **Part Numbers:** XC0066051 / XC0066021
- **Brand:** EverNice
- **Compatibility:** Refer to Section 2 for a complete list of compatible Brother and Babylock sewing machine models.
- **Material:** Durable plastic with metal tension spring.
- **First Available:** May 29, 2018

## 8. WARRANTY INFORMATION

---

Specific warranty details for this EverNice Bobbin Case are not provided in this manual. Please refer to the product packaging or contact the retailer/manufacturer directly for information regarding warranty coverage and terms.

## 9. CUSTOMER SUPPORT

---

For further assistance or inquiries regarding your EverNice Bobbin Case, please contact your point of purchase or visit the EverNice brand store online. When contacting support, please have your product model numbers (XC0066051 / XC0066021) and your sewing machine model readily available.

You can visit the EverNice Store at: [EverNice Store on Amazon](#)