

GDZ60-98E

ZOKOP GDZ60-98E Household Dryer User Manual

Model: GDZ60-98E

INTRODUCTION

Thank you for choosing the ZOKOP GDZ60-98E Household Dryer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before using the dryer and keep it for future reference.

The ZOKOP GDZ60-98E is a compact and efficient front-loading drum dryer designed for household use. It features a durable stainless steel drum, an LED display for easy control, and a built-in filter system. Its design allows for flexible placement, including solid horizontal surfaces or wall-mounted installations, making it suitable for various living spaces such as apartments, dormitories, and RVs.



Figure 1: Front view of the ZOKOP GDZ60-98E Household Dryer.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Read all instructions before using the appliance.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the drying compartment.
- Do not reach into the appliance if the drum is moving.

- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual.
- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.

SETUP AND INSTALLATION

Unpacking

Carefully remove the dryer from its packaging. Inspect the dryer for any shipping damage. The package includes:

- 1 x ZOKOP GDZ60-98E Household Dryer
- 1 x Instruction Manual (this document)
- 1 x Filter Cotton

Placement

The dryer can be placed on a solid, horizontal floor or rack. It can also be wall-mounted. Ensure the chosen location has adequate ventilation and is away from direct sunlight or heat sources.



Figure 2: Dryer dimensions for placement planning. Dimensions are approximately 23.62 inches (L) x 18.90 inches (W) x 26.77 inches (H).

Electrical Connection

Ensure the dryer is connected to a grounded 110 Volt power outlet. Do not use extension cords or adapters.

OPERATING INSTRUCTIONS

Loading the Dryer

Open the dryer door. Load clothes into the drum, ensuring not to overload. Overloading can reduce drying efficiency and potentially damage the appliance. The dryer has a 6kg capacity.



Figure 3: Dryer drum with door open, showing the lint filter location.

Control Panel Overview

The dryer features an LED control panel for easy operation.



Figure 4: Close-up of the LED control panel, displaying time and program options.

Drying Programs and Settings

The dryer offers various drying times, typically ranging from 30 to 170 minutes. Select the appropriate program based on the fabric type and desired dryness level.

- **Program Selection:** Use the "Program" button to cycle through available drying cycles.
- **Heat Setting:** Adjust the heat level using the "Heat" button.
- **Start/Pause:** Press "Start/Pause" to begin or temporarily stop a cycle.
- **Power:** Use the "Power" button to turn the dryer on or off.

The dryer also features a high-temperature cycle capable of killing up to 99% of certain household germs and bacteria without the need for harsh chemicals.

THE HIGH TEMPERATURE CYCLE KILLS UP TO 99% OF CERTAIN HOUSEHOLD GERMS AND BACTERIA WITHOUT THE NEED FOR HARSH CHEMICALS

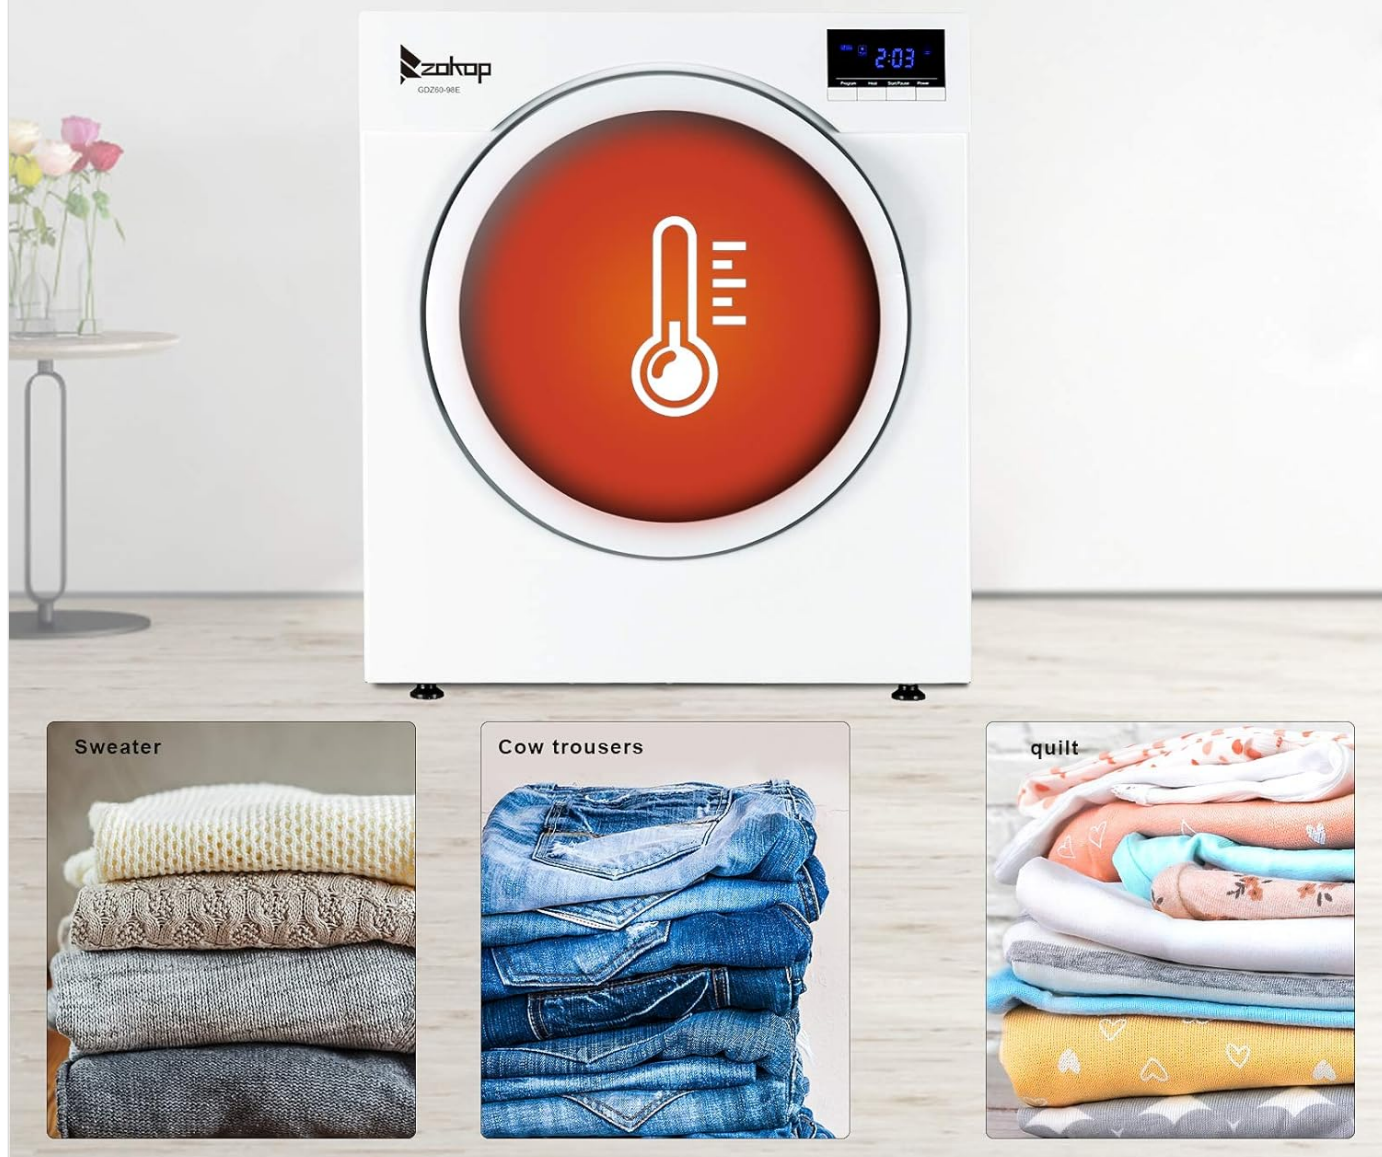


Figure 5: Illustration of the high-temperature drying cycle, effective against germs and bacteria.

Anti-Wrinkle Feature

The built-in anti-wrinkle feature helps to reduce creases in clothes by tumbling them intermittently after the drying cycle completes, preventing them from sitting static in the drum.

MAINTENANCE AND CARE

Cleaning the Lint Filter

For optimal drying performance and safety, clean the lint filter after every load. The filter is located inside the drum, near the door opening.

1. Open the dryer door.
2. Remove the lint filter by pulling it out.
3. Remove any accumulated lint from the filter.
4. Reinsert the clean filter firmly into its position.

Cleaning the Dryer Exterior

The exterior of the dryer can be easily cleaned and maintained with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Vent Cleaning

Periodically check and clean the back vent to ensure proper airflow and prevent lint buildup, which can be a fire hazard. The dryer uses a back-vented discharge method.

TROUBLESHOOTING

If you encounter issues with your dryer, refer to the following common problems and solutions before contacting customer support.

Problem	Possible Cause	Solution
Dryer does not start	Not plugged in; circuit breaker tripped; door not closed properly.	Ensure power cord is securely plugged in; check circuit breaker; close door firmly.
Clothes not drying properly	Lint filter clogged; overloaded dryer; incorrect program/heat setting; poor ventilation.	Clean lint filter; reduce load size; select appropriate program; check and clear dryer vent.
Unusual noise during operation	Foreign objects in drum; dryer not level.	Check drum for loose items; ensure dryer is on a level surface.
Dryer stops mid-cycle	Overheating (78°C over-temperature alarm); power interruption.	Allow dryer to cool down; check power supply. Ensure proper ventilation.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model	GDZ60-98E
Dimensions (L x W x H)	23.62 x 18.90 x 26.77 inches (60 x 48 x 68 cm)
Weight	57.32 lbs (26 kg)
Material	Stainless Steel and ABS
Color	White
Noise Level	58~62 dB
Discharge Method	Back Vented
Drying Time Range	30-170 minutes
Capacity	6 kg
Voltage	110 Volts

Feature	Detail
Heating Type	PTC Heating
Safety Features	Dual temperature switches, 78°C over-temperature alarm

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact the retailer. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical assistance or service inquiries, please contact ZOKOP customer service through their official channels. Details can typically be found on the product packaging or the retailer's website.