

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Paw Patrol](#) /
- › [Paw Patrol Chase RC Movie Motorcycle Instruction Manual](#)

## Paw Patrol 6062733

# Paw Patrol Chase RC Movie Motorcycle Instruction Manual

Model: 6062733

[Introduction](#)

[What's in the Box](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Safety Information](#)

[Warranty & Support](#)

## 1. INTRODUCTION

The Paw Patrol Chase RC Movie Motorcycle is a full-function remote control vehicle designed for children aged 3 and up. This toy allows users to recreate scenes from PAW Patrol: The Movie with Chase molded into the driver's seat. The easy-to-use controller makes it suitable for beginners.

## 2. WHAT'S IN THE BOX

- 1 Chase RC Motorcycle
- 1 Controller
- 1 Instruction Guide



Image: The product packaging for the Paw Patrol Chase RC Movie Motorcycle, illustrating the motorcycle, remote control, and instruction guide.

### 3. SETUP

#### 3.1 Battery Installation

The Chase RC Motorcycle requires 4 AA batteries. The controller requires 2 AAA batteries. Batteries are not included and must be purchased separately.

1. Locate the battery compartment on the underside of the RC Motorcycle and the back of the controller.
2. Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert the required batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

#### 3.2 Power On

Once batteries are installed, locate the ON/OFF switch on both the motorcycle and the controller. Switch both to the 'ON' position to establish a connection.

### 4. OPERATING THE RC MOTORCYCLE

The remote control operates on a 2.4GHz frequency, allowing control from up to 100 feet away. The controller features an easy-to-use design with two joysticks for intuitive movement.



Image: A child on the floor operating the Paw Patrol Chase RC Movie Motorcycle with the remote control. The motorcycle is in motion on a wooden floor.

#### 4.1 Basic Controls

- **Forward/Reverse:** Use the left joystick to move the motorcycle forward or backward.
- **Steering:** Use the right joystick to steer the motorcycle left or right.



Image: A side view of the Paw Patrol Chase RC Movie Motorcycle, highlighting its blue and white design with Chase in the driver's seat.

## 4.2 Driving Tips

- Practice in an open area to get accustomed to the controls.
- The motorcycle performs best on smooth, hard surfaces. Thick carpets may reduce performance.
- Avoid driving near water or in wet conditions.

Your browser does not support the video tag.

Video: An official video from Spin Master, Inc. showcasing various Paw Patrol toys, including the Chase RC Movie Motorcycle, demonstrating their features and playability.

## 5. MAINTENANCE

- Wipe the motorcycle and controller with a clean, damp cloth to remove dust and dirt.
- Do not immerse the toy in water.
- Remove batteries if the toy will not be used for an extended period to prevent leakage.
- Store in a cool, dry place away from direct sunlight.

## 6. TROUBLESHOOTING

Problem	Solution
Motorcycle not responding to controller.	Ensure both the motorcycle and controller are switched ON. Check that batteries are correctly installed and not depleted. Replace batteries if necessary. Ensure you are within the 100-foot operating range.
Motorcycle moves slowly or erratically.	Batteries may be low. Replace batteries in both the motorcycle and controller. Ensure the surface is smooth and clear of obstructions.
Motorcycle does not move on carpet.	The RC motorcycle is designed for optimal performance on hard, smooth surfaces. Thick carpets may impede movement.

## 7. SPECIFICATIONS

- **Model Number:** 6062733
- **Product Dimensions:** 5 x 12 x 7.5 inches
- **Item Weight:** 1.63 pounds
- **Manufacturer Recommended Age:** 36 months - 9 years
- **Motorcycle Batteries:** 4 AA batteries (not included)
- **Controller Batteries:** 2 AAA batteries (not included)
- **Frequency:** 2.4GHz
- **Operating Range:** Up to 100 feet
- **Manufacturer:** Spin Master
- **Release Date:** July 15, 2021

## 8. SAFETY INFORMATION

- **WARNING: CHOKING HAZARD** - Small parts. Not for children under 3 years.
- Adult supervision is recommended during play.
- Do not operate the toy near stairs, furniture, or other objects that could cause damage or injury.
- Keep fingers, hair, and loose clothing away from moving wheels.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Dispose of used batteries responsibly.

## 9. WARRANTY & SUPPORT

This product is covered by the Spin Master Care Commitment. For full details regarding warranty, returns, and customer support, please refer to the official Spin Master website or contact their customer service directly. Contact information can typically be found on the product packaging or the manufacturer's website.

© 2024 Paw Patrol. All rights reserved. Manufactured by Spin Master.