

UpStart Components RC-RC057-DL1

UpStart Components RC-057 Remote Control User Manual

For Coby LEDTV1926 TV

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your UpStart Components RC-057 Replacement Remote Control. This remote is designed to be compatible with the Coby LEDTV1926 television model.

Important Note: This is an UpStart Components brand replacement part and is not an Original Equipment Manufacturer (OEM) product. All mentions of brand names or model descriptions are made strictly to illustrate compatibility. All brand names and logos are registered trademarks of their respective owners. This product is not affiliated with any brands and is not covered under any warranties offered by the original manufacturers. Any warranties for this product are offered solely by UpStart Components.

PACKAGE CONTENTS

- 1 x UpStart Components RC-057 Remote Control
- *Note: Batteries are not included.*

SETUP

Installing Batteries

The RC-057 remote control requires two (2) AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.







Image: Rear view of the RC-057 remote control, illustrating the battery compartment location and how to open it for battery installation.

First Use

This replacement remote control is designed for immediate use with your Coby LEDTV1926 TV. No programming or pairing is required. Simply install the batteries, point the remote at your television, and begin operation.

OPERATING THE REMOTE CONTROL

The RC-057 remote control provides full functionality for your Coby LEDTV1926 TV. Familiarize yourself with the button layout and their respective functions.





Image: Front view of the RC-057 remote control, displaying all buttons and their labels for easy identification.

Button Functions

Button	Function
Power (Red)	Turns the TV on or off.
Mute	Mutes or unmutes the TV audio.
0-9 (Number Buttons)	Direct channel selection.
P-SIZE	Adjusts the picture size/aspect ratio.
P-MODE	Cycles through picture modes (e.g., Standard, Dynamic, Movie).
RETURN	Returns to the previous menu or channel.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms selections in menus.
EXIT	Exits the current menu or function.
SLEEP	Sets the sleep timer for the TV.

Button	Function
VOL +/-	Adjusts the volume level.
CH +/-	Changes the TV channel.
MENU	Opens the main TV menu.
M / CH LIST / FAV	Accesses various menu options, channel lists, or favorite channels.
GUIDE	Displays the electronic program guide (if available).
CC (Closed Caption)	Toggles closed captions on or off.
MTS (Multi-channel Television Sound)	Selects audio modes (e.g., Stereo, SAP).
SOUND	Cycles through sound modes (e.g., Standard, Music, Movie).
SOURCE	Selects the input source (e.g., HDMI, AV, TV).
LIGHT	Activates backlight on the remote (if applicable).
INFO	Displays information about the current program or input.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the remote is pointed directly at the TV's infrared sensor.
 - Check if there are any obstructions between the remote and the TV.
 - Replace the batteries with fresh AAA batteries.
- **Intermittent response:**
 - Batteries may be low; replace them.
 - Ensure the battery compartment cover is securely closed.
- **Specific buttons not working:**
 - Clean the remote control surface, especially around the unresponsive buttons, to remove any dirt or debris.
 - If cleaning and battery replacement do not resolve the issue, the remote may require replacement.

SPECIFICATIONS

- **Model Number:** RC-RC057-DL1
- **Compatible Devices:** Coby LEDTV1926 Television
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

Any warranties for this UpStart Components RC-057 Remote Control are offered solely by UpStart Components. This product is not covered under any warranties offered by the original manufacturers of the compatible television.

For support or warranty inquiries, please refer to the contact information provided with your purchase or visit the UpStart Components official website.