

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components RC-057 Remote Control Instruction Manual for Coby TFTV4025 TV

UpStart Components RC-RC057-DL9

UpStart Components RC-057 Remote Control Instruction Manual

For Coby TFTV4025 Television

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your UpStart Components RC-057 Replacement Remote Control. This remote is specifically designed to be compatible with the Coby TFTV4025 television model, offering a direct replacement for your original remote control.

The RC-057 remote control is engineered for ease of use, requiring no complex programming. Simply insert batteries, and it is ready for immediate operation with your compatible Coby television.



Figure 1.1: UpStart Components RC-057 Remote Control, front view with branding. This image displays the remote control with the UpStart Components logo, highlighting its design and button layout.

2. SETUP

2.1 Battery Installation

The RC-057 remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.

2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 2.1: Rear view of the RC-057 remote control, illustrating the battery compartment. This image shows the location and mechanism for opening the battery cover.

2.2 Initial Use

No programming is required for the RC-057 remote control. Once the batteries are correctly installed, the remote is ready to operate your Coby TFTV4025 television. Point the remote directly at the television's infrared sensor and press the desired function button.

3. OPERATING INSTRUCTIONS

The RC-057 remote control features a standard layout for intuitive operation. Refer to the diagram below for button identification and their primary functions.





Figure 3.1: Front view of the RC-057 remote control, displaying all buttons and their labels. This image provides a clear overview of the remote's interface for operational guidance.

3.1 Key Functions

- **Power ():** Turns the television on or off.
- **Number Buttons (0-9):** Directly select television channels.
- **Volume Up/Down (VOL +/-):** Adjusts the audio volume level.
- **Channel Up/Down (CH +/-):** Changes the television channel sequentially.
- **Mute ():** Mutes or unmutes the television audio.
- **Menu:** Accesses the television's main menu for settings and options.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Navigate through menu options.
- **OK:** Confirms selections within menus.
- **Exit:** Exits the current menu or on-screen display.
- **Sleep:** Sets a timer for the television to automatically turn off.
- **P-SIZE:** Adjusts the picture size or aspect ratio.
- **P-MODE:** Cycles through preset picture modes (e.g., Standard, Dynamic, Movie).
- **RETURN:** Returns to the previous channel or menu screen.
- **GUIDE:** Displays the electronic program guide (if supported by the TV and broadcast).
- **CC (Closed Caption):** Toggles closed captions on or off.
- **MTS (Multi-channel Television Sound):** Selects audio modes (e.g., Stereo, SAP).

- **SOUND:** Cycles through preset sound modes (e.g., Standard, Music, Movie).
- **SOURCE:** Selects the input source (e.g., HDMI, AV, Component).
- **LIGHT:** (Functionality may vary or be for backlight on some remotes, if applicable).
- **INFO:** Displays current channel information or program details.

4. MAINTENANCE

4.1 Cleaning

To maintain the remote control's performance and appearance, clean it regularly. Use a soft, dry cloth to wipe the surface. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's finish or internal components.

4.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or improper operation. Dispose of used batteries according to local regulations.

4.3 Storage

If the remote control will not be used for an extended period, it is recommended to remove the batteries to prevent potential leakage and damage to the remote. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If you experience issues with your RC-057 remote control, refer to the following common problems and solutions:

- **Remote is not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the television's infrared sensor.
 - Make sure you are within the effective operating range and pointing the remote directly at the TV.
- **Specific buttons are not working:**
 - This could indicate a worn-out button or internal issue. If replacing batteries does not resolve the issue, the remote may need replacement.
- **Television does not respond to any remote control:**
 - Ensure the television itself is powered on and not in standby mode.
 - Check the television's user manual for troubleshooting steps related to its infrared receiver.

6. SPECIFICATIONS

- **Model Number:** RC-RC057-DL9
- **Compatible Devices:** Coby TFTV4025 Television
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)

- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1 (Coby TFTV4025 TV)

7. WARRANTY AND SUPPORT

This RC-057 replacement remote control is manufactured by UpStart Components. Any warranties for this product are offered solely by UpStart Components. This product is not affiliated with Coby, and is not covered under any warranties offered by the original manufacturers of the Coby TFTV4025 television.

For support or warranty inquiries regarding your UpStart Components RC-057 remote control, please contact UpStart Components directly through their official channels. Refer to the packaging or their website for specific contact information.

© 2025 UpStart Components. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08T6H7QQB>

More documents and user manuals: <https://manuals.plus/>