

[Manuals.plus](#) /

› [ASONPAO](#) /

› ASONPAO CMXZDCG453 Universal Garage Door Opener Remote Manual

ASONPAO CMXZDCG453 139.30498

ASONPAO CMXZDCG453 Universal Garage Door Opener Remote Manual

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your ASONPAO CMXZDCG453 Universal Garage Door Opener Remote. This remote is designed for universal replacement and is compatible with various Sears Craftsman, Liftmaster, and Chamberlain garage door openers produced from 1993 to current, featuring Yellow, Purple, Red/Orange, or Green Learn buttons. Please read this manual thoroughly before use to ensure proper functionality and safety.

Note: This remote does not support dip switch garage door openers.

2. SAFETY INFORMATION

- Keep the remote control out of reach of children.
- Operate the garage door only when it is in full view and free of obstructions.
- Do not allow children to play with the garage door opener or remote control.
- Ensure the garage door is fully closed before leaving the premises.
- If the garage door opener does not activate, do not repeatedly press the remote button. Refer to the troubleshooting section.

3. PACKAGE CONTENTS

Your package should contain the following items:

- ASONPAO Universal Garage Door Opener Remote (2 units)
- CR2032 Lithium Batteries (pre-installed)
- Visor Clip
- User Manual

4. PRODUCT OVERVIEW

The ASONPAO CMXZDCG453 remote features a compact design with three buttons for controlling up to three different garage door openers. It includes an LED indicator for programming feedback and operates on a 240mAh lithium battery for extended life. The remote utilizes Rolling Code technology for enhanced security.

UNIVERSAL COMPATIBILITY

Notice: Not sure about compatibility?
Feel free to contact us!

For3 Brand



LIFTMASTER




CHAMBERLAIN



SEARS CRAFTSMAN

For5 Learn Button

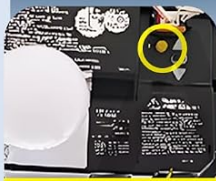

2011+



2005-2014



1997-2005



1997-2005



1997-2005



15 years
manufacturing
experience



NOT WORKS FOR DIP SWITCH

Image: ASONPAO Universal Garage Door Opener Remote, showing its three buttons and compact design.

5. SETUP AND PROGRAMMING

Follow these steps to program your ASONPAO universal remote to your garage door opener.

5.1. Choose Garage Door Opener Type

1. Press and hold buttons 2 and 3 on the remote simultaneously until the remote's LED goes OFF (approximately 3 seconds). Then release the buttons. The remote is now in programming mode.
2. Press and release the desired remote control button (1, 2, or 3) the number of times that corresponds to your garage door opener type:
 - **1 time:** 891LM Yellow Learn Button (2011-Current)
 - **2 times:** 371LM Purple Learn Button (2005-Current 315mhz)
 - **3 times:** 971LM Orange or Red Learn Button (1997-2005 390mhz)
 - **4 times:** 81LM Green Learn Button (1993-1996 390mhz)


- **5 times:** Genie Overhead Door Intellicode (1995-Current 315mhz)
- **6 times:** Genie Overhead Door Intellicode (2005-Current 390mhz)
- **7 times:** Linear Mega-Code (1997-Current 318mhz)

3. Once you have finished programming, wait approximately 3 seconds. The remote's LED will flash, then turn OFF, indicating that programming mode has automatically exited and programming is complete.

SIMPLE TO SET UP AND SYNC

1

Locate the Learn Button and identify the color on the opener.

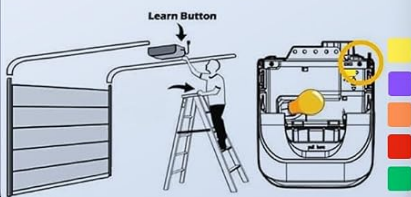

2


Using the Visor Clip to press the 'PROG' button on the back of the remote until the led light of remote turns on.




3

Choose the button you wish to program and press it 1-4 times based on the color of the learn button. Then press and release any OTHER button to exit 'PROG' mode.

Learn Button Color ■ ■ ■ ■ ■
Press Times 1 2 3 3 4

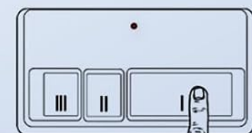

4

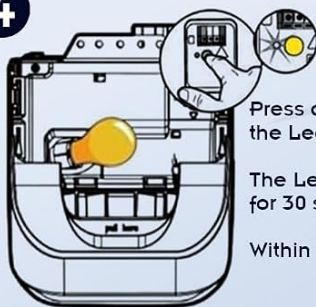


Press and immediately release the Learn button on the opener.

The Learn LED will glow steadily for 30 seconds.

Within 30 seconds...

5

Press and hold the same button from step 3 until the opener lights blink or 2 clicks are heard, indicating the remote is successfully programmed.

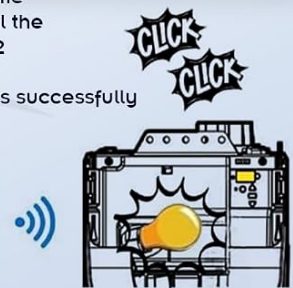

TROUBLE SHOOTING

Why does the remote not sync with garage door opener successfully ?

Solution1

Please double check the exact colour of learn button on your garage door opener.

Solution2

Please make sure your garage door opener fully closed first then start to program remote, otherwise programming maybe failed. please get close to garage door opener to program remote

Solution3

The memory of your opener maybe full, please press and hold the learn button on garage door opener several seconds until LED off then release, now all memory cleared, then re-program remote with garage door opener again refer to user manual.

Image: Visual guide for programming the remote, showing how to enter programming mode and select the garage door opener type based on the learn button color.

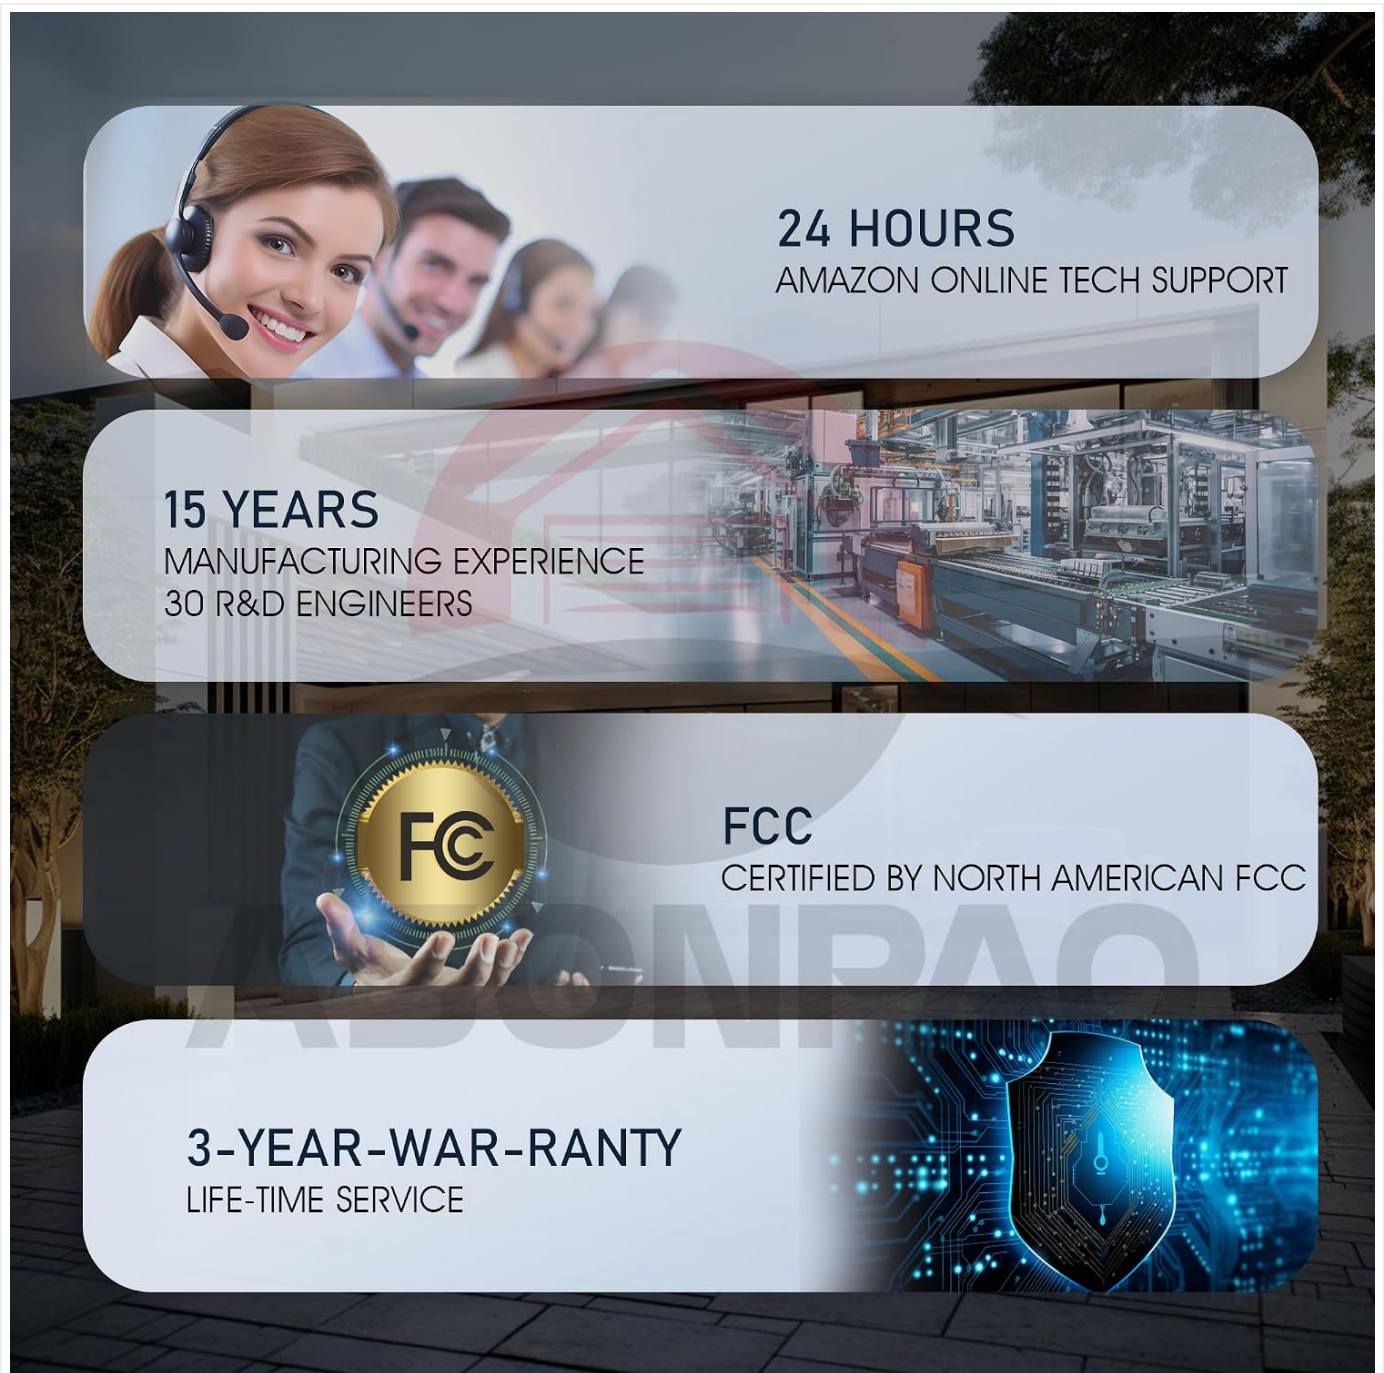


Image: Chart detailing universal compatibility with Liftmaster, Chamberlain, and Sears Craftsman garage door openers, categorized by learn button color and year of manufacture.

5.2. Sync Remote with Garage Door Opener

1. Press and release the "Learn" button on your garage door opener. The learn LED light will glow steadily for 30 seconds.
2. Within 30 seconds, get close to your garage door opener and press the programmed button of your remote. The garage door opener lights will flash or two clicks will be heard, indicating that it has learned the code.
3. To test, press the programmed remote button. The garage door opener should activate. If the opener does not activate, repeat the above programming steps.

Your browser does not support the video tag.

Video: ASONPAO CMXZDCG453/139.30498 New Programming Video. This video demonstrates the step-by-step process of programming the universal remote with a garage door opener, including identifying the learn button and syncing the remote.

6. OPERATING INSTRUCTIONS


Once programmed, simply press the corresponding button on your ASONPAO remote to open or close your garage door. The remote offers a control range of up to 164 feet.

7. MAINTENANCE

7.1. Battery Replacement

The remote uses a CR2032 lithium battery. When the remote's range decreases or the LED indicator does not light up, it's time to replace the battery. To replace, carefully open the remote casing, remove the old battery, and insert a new CR2032 battery with the positive (+) side facing up. Ensure the battery is securely seated before closing the casing.

PRODUCT PARAMETER

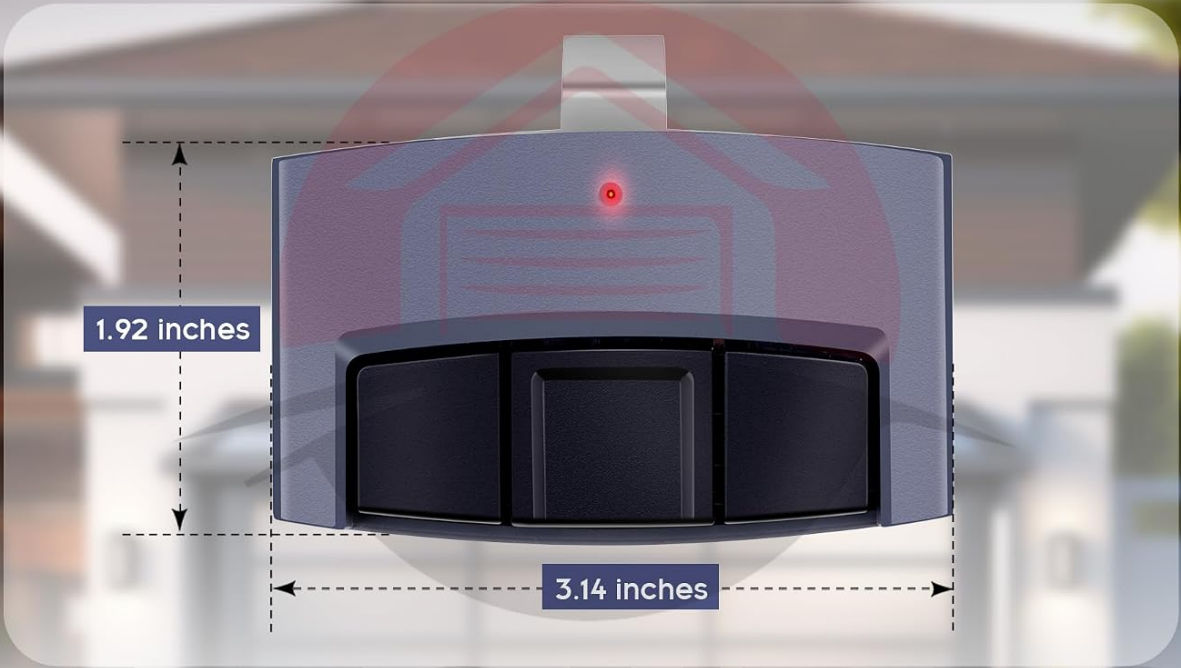

Model: CMXZDCG453/139.30498	Shell Material: ABS
Working Range: 164Feet	Product Size: 3.14*1.92*0.59 inches
Working Voltage: DC3V	Product weight: 0.066lbs
Frequency: 310/315/390MHZ	Warranty: 3 years
Channel: 3	Colour: gray
Battery Model: 3V CR2032	Code: Security 2.0+ rolling code

Image: Diagram illustrating how to open the remote and replace the CR2032 battery.

8. TROUBLESHOOTING

If your remote does not sync with the garage door opener, consider the following solutions:

- **Solution 1:** Double-check the exact color of the learn button on your garage door opener and ensure you selected the correct programming sequence for that type.

- **Solution 2:** Make sure your garage door opener is fully closed before starting the programming process. Otherwise, programming may fail. Get close to the garage door opener when pressing the programmed remote button.
- **Solution 3:** Perform the programming steps quickly. If you wait too long (a few seconds) between steps, the process may time out and programming will fail.
- **Solution 4:** The memory of your garage door opener might be full. Press and hold the learn button on the garage door opener for several seconds until the LED turns OFF. This clears all memory. Then, re-program the remote with the garage door opener again.

9. SPECIFICATIONS

Model:	CMXZDCG453 139.30498
Brand:	ASONPAO
Shell Material:	ABS
Working Range:	164 Feet
Working Voltage:	DC3V
Frequency:	310/315/390MHz
Channel:	3
Battery Model:	CR2032 (included)
Security Code:	Security 2.0+ Rolling Code
Product Size:	3.14*1.92*0.59 inches
Item Weight:	2.96 Ounces

10. WARRANTY AND SUPPORT

The ASONPAO CMXZDCG453 Universal Garage Door Opener Remote comes with a 3-year warranty. For any technical assistance or support, please contact ASONPAO customer service. 24-hour Amazon technical support is also available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question