

Manuals.plus /

› WINFLIKE /

› WINFLIKE SM-1LC Universal Replacement Remote Control for Samsung TV User Manual

WINFLIKE SM-1LC

WINFLIKE SM-1LC Universal Replacement Remote Control for Samsung TV

Model: **SM-1LC** | Brand: **WINFLIKE**

1. INTRODUCTION

This manual provides comprehensive instructions for the WINFLIKE SM-1LC Universal Replacement Remote Control. This remote is specifically designed to function as a direct replacement for a wide range of Samsung TV remote models without requiring any programming for initial use. It also features a learning function for advanced customization.

2. SAFETY INFORMATION

- Keep the remote control away from water and other liquids to prevent damage.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not expose the remote control to direct sunlight or excessive heat.
- **Battery Safety:**
 - Use only AAA alkaline batteries.
 - Do not mix old and new batteries, or different types of batteries.
 - Ensure batteries are inserted with correct polarity (+/-).
 - Remove batteries if the remote control will not be used for an extended period to prevent leakage.
 - Dispose of used batteries responsibly according to local regulations.

3. PACKAGE CONTENTS

- 1 x WINFLIKE SM-1LC Universal Replacement Remote Control

Note: Batteries are not included and must be purchased separately.

4. SETUP: BATTERY INSTALLATION AND INITIAL USE

4.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.





Image 1: Front view of the SM-1LC remote control. The battery compartment is located on the back.

4.2 Initial Use (No Programming Required)

The WINFLIKE SM-1LC remote control is pre-programmed for a wide range of Samsung TV models. Once batteries are correctly installed, the remote is ready for immediate use with your compatible Samsung television. No additional setup or code entry is required for basic functions.

5. OPERATING INSTRUCTIONS

5.1 Basic Functions

The remote control features standard buttons for navigating your Samsung TV. Refer to the image below for button layout and common functions:





Image 2: Angled view of the SM-1LC remote control, showing various function buttons.

- **Power ():** Turns the TV on or off.
- **TV/HDMI/SOURCE:** Selects input sources.
- **Number Buttons (0-9):** Direct channel selection.
- **Volume (+/-):** Adjusts the volume level.
- **Channel (CH List / P ▲/▼):** Changes channels and accesses the channel list.
- **Mute ():** Mutes or unmutes the TV sound.
- **Smart Hub:** Accesses the Samsung Smart Hub for apps and streaming services.

- **Menu:** Opens the TV's main menu.
- **Tools:** Accesses quick settings or tools menu.
- **Info:** Displays information about the current program or input.
- **Directional Pad (▲ ▼ ◀ ▶):** Navigates through menus and options.
- **Enter (●):** Confirms selections.
- **Return (↶):** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or application.
- **Color Buttons (A, B, C, D):** Functionality varies by TV model and application.
- **Netflix, Amazon:** Direct access buttons for these streaming services.

5.2 Learning Function

The SM-1LC remote includes a learning function, allowing it to copy infrared (IR) signals from another remote control. This feature is useful for consolidating functions from other devices onto this remote. Specific instructions for activating and using the learning function are typically provided by the manufacturer or can be found on the product support page. Generally, this involves placing the two remotes head-to-head and pressing corresponding buttons to transfer the IR signal.

6. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Follow the battery installation steps in Section 4.1.
- **Storage:** Store the remote in a cool, dry place when not in use for extended periods.

7. TROUBLESHOOTING

- **Remote not working:**
 - Check if the batteries are inserted correctly with the right polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's IR receiver.
 - Confirm the remote is pointed directly at the TV's IR receiver.
- **Some buttons are unresponsive:**
 - This may indicate low battery power; try replacing the batteries.
 - Ensure the remote is compatible with your specific TV model for all functions. Some advanced or smart features may require the original remote or specific TV settings.
- **Remote range is limited:**
 - Ensure batteries are fresh.
 - The maximum effective range is approximately 33 feet (10 meters). Operating beyond this distance may result in unresponsiveness.

8. SPECIFICATIONS

Brand	WINFLIKE
Model Name	SM-1LC
Connectivity Technology	Infrared
Compatible Devices	Television (Samsung)
Number of Batteries Required	2
Battery Type	AAA
Maximum Range	33 Feet (approx. 10 meters)
Button Quantity	46
Item Weight	3 Ounces
Item Dimensions (L x W x H)	5"L x 1"W x 0.5"H

9. COMPATIBILITY

The WINFLIKE SM-1LC remote control is compatible with a wide range of Samsung TV models and replaces several original Samsung remote models. Some examples of compatible original remote models include:

- AA59-00854A, AA59-00507A, AA59-00825A, AA59-00588A
- BN59-01175N, BN59-01198Q, BN59-01199G
- AA83-00653A, AA59-00515A, AA59-00441A, AA59-00790A
- And many other Samsung TV remote models.

It is also compatible with numerous Samsung TV series, including but not limited to:

- UN48JU650DFXZA, UN50JU6500, UN55JU6500FXZA
- UN40JU6500, UN60JU6500FXZA, UN65JU6500
- UN75JU6500FXZA, UN43NU7100F, UN49NU7100F
- UN55NU7300F, UN65NU7100F, UN75NU7100F
- UA32J5500AW, UA40J5500AW, UA60J6200AW
- UN32J525DAFXZA, UN32M4500AFXZA, UN40J5200AFXZA
- And many other Samsung TV models.

For a complete list of compatible models, please refer to the product listing or contact WINFLIKE customer support.

10. WARRANTY AND SUPPORT

For information regarding product warranty, technical support, or any inquiries not covered in this manual, please contact WINFLIKE customer service directly. Details for contacting support are typically available on the product packaging or the official WINFLIKE website.

