

AEG E6WHPED4

AEG E6WHPED4 Universal Base Kit with Bottom Compartment User Manual

Model: E6WHPED4

1. INTRODUCTION

Thank you for choosing the AEG E6WHPED4 Universal Base Kit. This base is designed to elevate your washing machine or tumble dryer, providing a more ergonomic height for loading and unloading laundry. It also features an integrated bottom compartment with dividers, offering convenient storage for detergents, fabric softeners, and other laundry accessories, thereby contributing to a more organized laundry area.

This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new base kit. Please read it thoroughly before installation and keep it for future reference.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury and damage to the product or other property.

- Ensure the base is placed on a stable, level surface capable of supporting the combined weight of the base, the appliance, and its contents.
- Do not attempt to install the base or place an appliance on it alone. Always use appropriate lifting techniques and seek assistance.
- Verify that the dimensions of your appliance are compatible with the base before installation.
- Do not overload the bottom compartment. Distribute weight evenly.
- Keep children and pets away from the base during installation and operation.
- Regularly check the stability of the appliance on the base.

3. PACKAGE CONTENTS

Before beginning installation, please check that all components are present and undamaged.

- AEG E6WHPED4 Universal Base Kit with integrated bottom compartment.
- Installation instructions (this manual).
- Any included fasteners or anti-slip pads (check packaging for specifics).

If any parts are missing or damaged, do not proceed with installation. Contact your retailer or AEG customer support.

4. SETUP AND INSTALLATION

This section outlines the steps for safely installing your AEG E6WHPED4 Universal Base Kit and placing your appliance on it.

4.1. Preparation

1. Choose a suitable location: The base and appliance must be placed on a firm, level floor.
2. Clear the area: Ensure there is enough space around the installation site for safe maneuvering.
3. Unpack the base: Carefully remove the base from its packaging.
4. Inspect for damage: Check the base for any signs of damage incurred during transit.

4.2. Placing the Base

1. Position the base: Place the base in the desired location.
2. Level the base: Use a spirit level to ensure the base is perfectly level. Adjust any integrated feet if available, or use shims if necessary. Proper leveling is critical for the stable operation of the appliance placed on top.

4.3. Placing the Appliance on the Base

Caution: This step requires at least two people due to the weight of most washing machines and tumble dryers. Improper lifting can cause serious injury.

1. Prepare the appliance: Ensure your washing machine or tumble dryer is disconnected from power and water supplies (if applicable).
2. Lift the appliance: Carefully lift the appliance and center it onto the top surface of the AEG E6WHPED4 base.
3. Align the appliance: Ensure the appliance's feet are securely seated within any designated recesses or anti-slip pads on the base.
4. Verify stability: Gently rock the appliance to confirm it is stable and does not wobble on the base. If unstable, re-level the base and reposition the appliance.
5. Reconnect utilities: Once stable, reconnect your appliance to power and water (if applicable) according to its own instruction manual.

5. OPERATING INSTRUCTIONS: BOTTOM COMPARTMENT

The integrated bottom compartment provides convenient storage for your laundry essentials.



This image displays the AEG E6WHPED4 Universal Base Kit with its integrated bottom compartment drawer fully extended. Inside the drawer, various laundry accessories are organized: two tall bottles of liquid detergent, a small blue container holding laundry clips, a rectangular white box, and a neatly folded white and blue striped towel. The compartment is designed to store detergents and other laundry essentials, contributing to a more organized laundry area.

5.1. Opening and Closing the Drawer

- To open: Gently pull the handle on the front of the drawer.
- To close: Push the drawer firmly until it clicks securely into place.

5.2. Organizing the Compartment

- The compartment may include adjustable dividers. Arrange these to suit the size and shape of your items.
- Store laundry detergents, fabric softeners, dryer sheets, stain removers, and other small laundry accessories.
- Avoid storing heavy or sharp objects that could damage the drawer or its contents.

6. MAINTENANCE

Regular cleaning and care will help maintain the appearance and functionality of your base kit.

- **Cleaning the exterior:** Wipe the exterior surfaces with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive materials that could damage the varnish finish.
- **Cleaning the interior compartment:** Remove all items from the drawer. Wipe the interior with a damp cloth. Ensure it is dry before replacing items.

- **Checking stability:** Periodically check that the base remains level and that the appliance on top is stable. Re-level if necessary.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your base kit.

7.1. Appliance Wobbles on Base

- **Cause:** The base or the appliance is not level.
- **Solution:** Ensure the base is on a firm, level surface. Use a spirit level to check and adjust the base's feet or use shims if needed. Verify the appliance's feet are properly seated and adjusted according to its own manual.

7.2. Drawer is Difficult to Open or Close

- **Cause:** Drawer is overloaded, items are obstructing the mechanism, or the base is not level.
- **Solution:** Remove some items from the drawer to reduce weight. Check for any items that might be caught in the drawer slides. Ensure the base is level as described in the setup section.

8. SPECIFICATIONS

Brand	AEG
Model	E6WHPED4
Item Model Number	902980211
Color	White
Material	Wood material
Exterior Finish	Varnish
Device Dimensions (W x D x H)	595 mm x 615 mm x 312 mm (23.43 x 24.13 x 12.01 inches)
Net Weight	21 kg (approx. 46.3 lbs)
Gross Weight (Packaging)	23 kg (approx. 50.7 lbs)
Packaging Dimensions (W x D x H)	645 mm x 665 mm x 350 mm

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or spare parts, please refer to the warranty card included with your purchase or visit the official AEG website. You may also contact your local retailer for assistance.

Please have your model number (E6WHPED4) and item model number (902980211) ready when contacting support.

© 2023 AEG. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question