

## Ikea TORSBY

# Ikea TORSBY High-Gloss Table Instruction Manual

Model: TORSBY (135x85 cm)

## 1. PRODUCT OVERVIEW

The Ikea TORSBY table features a high-gloss white surface and a sturdy chrome-plated metal frame. Designed for durability and modern aesthetics, this table is suitable for various indoor settings, including dining and utility use. Its surface is engineered to be resistant to liquids, food stains, oil, heat, scratches, and bumps, ensuring long-lasting performance.



Figure 1: The Ikea TORSBY table, showcasing its high-gloss white top and chrome-plated legs.

### Key Features:

- **High-Gloss Surface:** Reflects light, providing a vibrant and modern appearance.
- **Sturdy Construction:** Features a durable chrome-plated metal frame.
- **Resistant Surface:** Designed to withstand liquids, food stains, oil, heat, scratches, and bumps.
- **Seating Capacity:** Comfortably seats 4 individuals.
- **Easy Maintenance:** Simple to clean and maintain for prolonged use.

## 2. SETUP AND ASSEMBLY

The Ikea TORSBY table is designed for self-assembly. It arrives in two packages: one for the underframe (legs) and one for the tabletop. Ensure all components are present before beginning assembly.

### Components Included:

- Tabletop (1 piece)
- Underframe/Legs (1 set)
- Assembly hardware (screws, etc.)

### Assembly Instructions:

1. **Unpack Components:** Carefully remove all parts from their packaging. Place them on a soft, clean surface to prevent scratches.
2. **Identify Parts:** Refer to the included graphical instructions (if provided in the physical package) to identify each component.
3. **Assemble Underframe:** Attach the legs to the underframe structure according to the instructions. Ensure all connections are secure but do not overtighten screws initially.
4. **Attach Tabletop:** Carefully place the tabletop onto the assembled underframe. Align the pre-drilled holes on the tabletop with the underframe. Secure the tabletop using the provided screws.
5. **Final Tightening:** Once the table is fully assembled, systematically tighten all screws to ensure maximum stability. Avoid overtightening to prevent damage.
6. **Periodic Check:** For optimal quality and stability, re-tighten all screws periodically, especially after the first few weeks of use.



Figure 2: Detail of the table's chrome-plated frame and corner connection, illustrating the sturdy construction.

## 3. OPERATING AND USAGE

The Ikea TORSBY table is designed for indoor use as a dining table or utility surface. Its robust construction and resistant surface make it suitable for daily activities.

## Usage Guidelines:

- **Seating:** The table is designed to comfortably seat 4 people.
- **Surface Protection:** While the tabletop is resistant to various elements, it is recommended to use placemats, coasters, or tablecloths to provide additional protection against scratches, heat, and spills, thereby extending the table's lifespan and maintaining its appearance.
- **Weight Distribution:** Distribute weight evenly across the tabletop to prevent undue stress on any single point.
- **Indoor Use Only:** This table is intended for indoor environments. Exposure to outdoor elements can cause damage.



Figure 3: The TORSBY table in a typical dining room setup, demonstrating its capacity and aesthetic.

## 4. MAINTENANCE AND CARE

Proper care and maintenance will help preserve the appearance and functionality of your Ikea TORSBY table for many years.

### Cleaning Instructions:

- **Tabletop:**
  - Wipe dry with a clean, soft cloth.
  - For spills or stains, wipe clean with a soft cloth dampened in water and a mild, non-abrasive washing-up detergent or soap.
  - Ensure the surface is thoroughly dried after cleaning to prevent water spots.
- **Metal Frame (Chrome-plated):**
  - Wipe clean with a cloth dampened in a mild cleaner specifically designed for metal or chrome surfaces.
  - Immediately wipe dry with a clean, soft cloth to prevent water marks or tarnishing.
  - Avoid abrasive cleaners or scouring pads, as these can scratch the chrome finish.

General Care:

- **Screw Tightening:** Periodically check and re-tighten all assembly screws to maintain the table's stability and structural integrity.
- **Avoid Harsh Chemicals:** Do not use strong chemical cleaners, solvents, or polishes that are not specifically recommended for high-gloss or chrome surfaces, as they may cause damage.
- **Heat Protection:** Always use heat-resistant mats or trivets under hot dishes to prevent heat damage to the tabletop.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your Ikea TORSBY table.

| Problem                             | Possible Cause                                                   | Solution                                                                                                                                                                                                                                                                      |
|-------------------------------------|------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Table feels wobbly or unstable.     | Loose assembly screws. Uneven floor surface.                     | <ul style="list-style-type: none"><li>• Re-tighten all assembly screws securely.</li><li>• Ensure the table is placed on a flat, even surface. Use furniture glides or shims if necessary to level the table.</li></ul>                                                       |
| Stains or marks on the tabletop.    | Food spills, liquid marks, or general dirt.                      | <ul style="list-style-type: none"><li>• Refer to the "Maintenance and Care" section for appropriate cleaning methods using a mild detergent and soft cloth.</li><li>• Avoid abrasive cleaners.</li></ul>                                                                      |
| Scratches on the tabletop or frame. | Sharp objects, abrasive contact, or lack of protective measures. | <ul style="list-style-type: none"><li>• While resistant, deep scratches can occur. Use placemats and coasters to prevent future damage.</li><li>• For minor scratches on the high-gloss surface, specialized repair kits might be available (consult manufacturer).</li></ul> |

6. SPECIFICATIONS

|                        |                                                              |
|------------------------|--------------------------------------------------------------|
| Brand                  | Ikea                                                         |
| Model Name             | TORSBY                                                       |
| Dimensions (L x W)     | 135 cm x 85 cm (53 1/8" x 33 1/2")                           |
| Tabletop Material      | Particleboard, Plastic foil (High-gloss white finish)        |
| Frame Material         | Steel, Chrome-plated                                         |
| Color                  | High-gloss white (tabletop), Chrome (frame)                  |
| Seating Capacity       | 4 persons                                                    |
| Package 1 (Underframe) | Width: 14 cm, Height: 8 cm, Length: 147 cm, Weight: 13.15 kg |
| Package 2 (Tabletop)   | Width: 90 cm, Height: 3 cm, Length: 144 cm, Weight: 17.72 kg |
| Assembly Required      | Yes (Do-it-yourself)                                         |

|                      |        |
|----------------------|--------|
| Indoor/Outdoor Usage | Indoor |
|----------------------|--------|

## 7. WARRANTY AND SUPPORT

Specific warranty details for the Ikea TORSBY table were not provided in the product information. For warranty inquiries, product support, or to report any issues, please contact Ikea customer service directly or the retailer from whom the product was purchased.

You can typically find contact information on the official Ikea website or on your purchase receipt.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question