

[manuals.plus](#) /› [KESIEME](#) /› [KESIEME A9S Wireless Earbuds User Manual](#)

KESIEME A9S

KESIEME A9S Wireless Earbuds User Manual

Model: A9S

INTRODUCTION

This manual provides detailed instructions for the KESIEME A9S Wireless Earbuds. Please read thoroughly before use to ensure proper operation and maintenance. These earbuds feature Bluetooth 5.0 connectivity, a digital LED battery display, up to 30 hours of total playtime with the charging case, and an IPX5 waterproof rating, making them suitable for sports and active lifestyles.

PACKAGE CONTENTS

- KESIEME A9S Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- Multiple Sizes of Ear Tips
- User Manual



Image: KESIEME A9S Wireless Earbuds in their charging case, showcasing the product and its components.

PRODUCT OVERVIEW

The KESIEME A9S earbuds are designed for comfort and performance, featuring ear hooks for secure fit during activities. The charging case includes a dual LED display to show battery levels for both the case and individual earbuds.

Dual LED Battery Display

Convenient to take a quick look at the current remaining capacity and for easier tracing and recharging



Image: The charging case with its dual LED display showing battery percentages for the case and individual earbuds.

Advanced Bluetooth 5.0



Wireless connection



High-speed transmission



Low latency



Image: A visual representation highlighting the advanced Bluetooth 5.0 technology for stable, high-speed, and low-latency wireless connection.

SETUP

1. Initial Charge and Preparation

- Remove Insulating Film:** Before first use, open the charging case and carefully remove the protective insulating film from the charging contacts on both earbuds.
- Full Charge:** Place both earbuds back into the charging case and close the lid. Connect the charging case to a power source using the provided USB cable. Ensure the earbuds and case are fully charged before initial use. The LED display will indicate charging progress and completion.

Your browser does not support the video tag.

Video: Demonstrates unboxing, removing insulating film, initial charging, wearing the earbuds, pairing, and basic controls.

2. Wearing the Earbuds

- Select Ear Tips:** Choose the ear tips that provide the most comfortable and secure fit for your ears. Different sizes are included in the package.
- Positioning:** Gently insert the earbud into your ear canal.

3. **Secure with Ear Hook:** Twist the earbud slightly and hook the ear hook over the top of your ear to secure it in place. Adjust for optimal comfort and sound quality.



Image: A person wearing the earbuds during a workout, illustrating the secure fit and IPX5 waterproof design.

3. Bluetooth Pairing

1. **Power On:** Open the charging case. The earbuds will automatically power on and enter pairing mode. The right earbud's indicator light will flash red and blue alternately, while the left earbud's light will flash blue.
2. **Enable Bluetooth:** On your device (smartphone, tablet, etc.), go to the Bluetooth settings and enable Bluetooth.
3. **Select Device:** Search for "prtukyt-A9S" in the list of available devices and tap to connect.
4. **Confirmation:** Once successfully connected, the blue light on the earbuds will turn on for 2 seconds and then turn off. You will hear a voice prompt indicating successful connection.
5. **Automatic Reconnection:** After initial pairing, the earbuds will automatically reconnect to the most recently connected device when taken out of the charging case.

OPERATING INSTRUCTIONS

1. Basic Controls

- **Play/Pause:** Click either earbud's large button once.
- **Volume Control:** Click the left earbud's button three times for volume down (L-). Click the right earbud's button three times for volume up (R+).
- **Next Track:** Double-click the right earbud's button.
- **Previous Track:** Double-click the left earbud's button.
- **Answer/End Call:** Click either earbud's large button once.
- **Reject Call:** Long press either earbud's large button for 2 seconds.
- **Voice Assistant:** Long press either earbud's large button for 1 second to activate your device's voice assistant (e.g., Siri, Google Assistant).

2. Charging the Earbuds and Case

- **Earbud Charging:** Place the earbuds into the charging case. They will automatically begin charging. The LED display on the case will show the individual earbud battery levels.
- **Case Charging:** Connect the provided USB charging cable to the charging port on the case and to a USB power adapter (not included). The LED display will show the charging case's battery percentage.
- **Battery Life:** The earbuds provide approximately 6 hours of playtime on a single charge. The charging case can recharge the earbuds up to 4 times, extending total playtime to about 30 hours.



Image: An illustration detailing the 6-hour earbud playtime and the charging case's ability to provide up to 30 hours of total

listening time.

MAINTENANCE

- **Cleaning:** Regularly clean the earbuds, ear tips, and charging contacts with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged.
- **Water Exposure:** While IPX5 waterproof, avoid prolonged submersion in water. Dry thoroughly if exposed to sweat or splashes.

TROUBLESHOOTING

- **Earbuds Not Pairing:**
 - a. Ensure the insulating film has been removed from the earbuds' charging contacts.
 - b. Make sure both earbuds are fully charged.
 - c. Turn off Bluetooth on all other nearby devices.
 - d. Place both earbuds back in the charging case, close the lid, then open it again to re-enter pairing mode.
 - e. If issues persist, try resetting the earbuds (refer to manufacturer's website for specific reset instructions if not in manual).
- **Only One Earbud Working:**
 - a. Ensure both earbuds are charged.
 - b. Place both earbuds back in the charging case, close the lid, then open it again. This often re-syncs them.
 - c. If necessary, unpair the earbuds from your device and repeat the pairing process.
- **Charging Case Not Charging:**
 - a. Verify the USB cable is securely connected to both the case and the power adapter.
 - b. Try a different USB cable or power adapter.
 - c. Ensure the charging port on the case is clean and free of debris.
- **Poor Sound Quality:**
 - a. Ensure ear tips are correctly sized and provide a good seal in your ear canal.
 - b. Clean any earwax or debris from the earbud speakers.
 - c. Check the audio source device's volume and equalizer settings.
 - d. Ensure you are within the Bluetooth range (up to 10 meters) of your connected device.

SPECIFICATIONS

Brand	KESIEME
Model Name	A9S
Connectivity Technology	Wireless (Bluetooth 5.0)

Bluetooth Range	10 Meters
Battery Life (Earbuds)	6 Hours
Total Playtime (with Case)	Up to 30 Hours
Water Resistance Level	IPX5 Waterproof
Ear Placement	In Ear (with ear hooks)
Control Method	Touch / Button
Audio Driver Type	Dynamic Driver (10mm speaker)
Included Components	Charging Case
Material	Plastic
Item Weight	5 ounces

Superior Clear Hi-Fi Stereo Sound

With powerful 10MM Moving coil driver to ensure Stereo surrounds HIFI sound quality



Image: A cutaway view of the earbud, highlighting the 10mm speaker for superior stereo sound quality.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official KESIEME website. Keep your purchase receipt for warranty claims.