

YISSVIC YISSVIC 1200W 3-in-1 Immersion Hand Blender

YISSVIC 1200W 3-in-1 Immersion Hand Blender

Instruction Manual

1. INTRODUCTION

Thank you for choosing the YISSVIC 1200W 3-in-1 Immersion Hand Blender. This versatile appliance is designed to simplify your kitchen tasks, offering powerful blending, whisking, and frothing capabilities. Please read this manual carefully before use to ensure safe and efficient operation.



Figure 1.1: YISSVIC 3-in-1 Immersion Hand Blender with its various attachments.

2. SAFETY INSTRUCTIONS

WARNING: Read all safety warnings and instructions before using this appliance.

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Do not immerse the motor unit in water or other liquids. Only the blending shaft, whisk, and frother attachments are washable.
- This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- Avoid blending extremely hot liquids to prevent splashing and burns.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Ensure the appliance is placed on a stable, dry, and level surface during operation.
- Do not use attachments not recommended or sold by the manufacturer.

3. PRODUCT COMPONENTS

The YISSVIC 3-in-1 Immersion Hand Blender includes the following components:



Motor Unit: The main body containing the motor and speed controls.



Blending Shaft: Stainless steel shaft with a 4-leaf blade for blending.



Whisk Attachment: For whipping eggs, cream, and other light mixtures.



Milk Frother: For creating foam for coffee and other beverages.

Measuring Cup: A 700ml measuring cup for convenient blending and measuring.

4. SETUP AND ASSEMBLY

Before first use, wash all detachable parts in warm soapy water, rinse thoroughly, and dry. The motor unit should only be wiped with a damp cloth.

4.1 Attaching the Blending Shaft

1. Align the blending shaft with the motor unit.
2. Twist the blending shaft clockwise until it locks securely into place. You should hear a click.



Figure 4.1: Aligning and twisting the blending shaft onto the motor unit.

4.2 Attaching the Whisk/Frother

1. Insert the whisk or frother into its adapter.
2. Align the adapter with the motor unit.
3. Twist the adapter clockwise until it locks securely into place.

Your browser does not support the video tag.

Video 4.1: Demonstration of attaching the blending shaft and using the frother and whisk attachments.

5. OPERATING INSTRUCTIONS

The YISSVIC Hand Blender features 12-speed control and a Turbo function for various blending needs.

5.1 Speed Control

The blender offers a spiral speed controller at the top of the motor unit and two buttons for Low Speed and High Speed (Turbo).



Spiral Speed Controller: Rotate the dial at the top to adjust the speed from 1 to 12.



Low Speed Button: Press for continuous low-speed operation. The spiral controller adjusts speed within this range.

High Speed (Turbo) Button: Press and hold for maximum power. This overrides the spiral speed setting.

5.2 Blending Function (Immersion Blender)

1. Attach the blending shaft to the motor unit.
2. Place ingredients into the measuring cup or a suitable container.
3. Immerse the blending head into the ingredients.
4. Plug in the appliance.
5. Press and hold the Low Speed button or the High Speed (Turbo) button to begin blending. Adjust speed with the spiral controller if using Low Speed.
6. Blend until desired consistency is achieved.

7. Release the button to stop. Unplug after use.



Figure 5.1: Using the immersion blender to create a smoothie.

5.3 Whisking Function

1. Attach the whisk attachment to the motor unit.
2. Place ingredients (e.g., egg whites, cream) into a bowl.
3. Plug in the appliance.
4. Immerse the whisk into the ingredients.
5. Press and hold the Low Speed button or High Speed (Turbo) button to begin whisking.

- Whisk until desired consistency is achieved.
- Release the button to stop. Unplug after use.

Egg Whisk

Whipping egg whites and creams faster



Milk Frother

Make milk foam for your coffee



Figure 5.2: The whisk attachment is ideal for whipping egg whites or cream.

5.4 Frothing Function

- Attach the milk frother to the motor unit.
- Pour milk into a cup or container.
- Plug in the appliance.

4. Immerse the frother into the milk.
5. Press and hold the Low Speed button to begin frothing.
6. Froth until desired foam consistency is achieved.
7. Release the button to stop. Unplug after use.

Your browser does not support the video tag.

Video 5.1: Comprehensive demonstration of the YISSVIC Hand Blender's various functions, including blending, whisking, and frothing.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your appliance.

- Always unplug the appliance before cleaning.
- **Motor Unit:** Wipe the motor unit with a damp cloth. Do NOT immerse it in water or any other liquid.
- **Blending Shaft, Whisk, Frother:** These attachments are dishwasher safe. Alternatively, they can be washed by hand in warm soapy water, rinsed, and dried thoroughly.
- **Measuring Cup:** Wash in warm soapy water or place in the dishwasher.
- For stubborn food residue on the blending shaft, fill the measuring cup with warm water and a drop of dish soap, then operate the blender for a few seconds. Rinse thoroughly.



Figure 6.1: The detachable blending shaft is easy to clean under running water.

7. TROUBLESHOOTING

If you encounter issues with your YISSVIC Hand Blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; motor unit not properly attached.	Ensure the appliance is securely plugged in. Test the outlet with another device. Re-attach the motor unit to the chosen attachment until it clicks.
Poor blending/whisking performance.	Too much food; ingredients too large/hard; incorrect speed setting.	Reduce the amount of ingredients. Cut larger ingredients into smaller pieces. Use a higher speed setting or the Turbo function.

Problem	Possible Cause	Solution
Attachments are difficult to remove.	Food residue buildup; improper attachment.	Ensure the appliance is unplugged. Gently twist and pull. Clean any residue around the connection points.
Unusual noise or odor during operation.	Overheating; foreign object; motor issue.	Stop operation immediately and unplug. Allow to cool down. Check for any obstructions. If the issue persists, contact customer support.

8. SPECIFICATIONS

Brand: YISSVIC

Model: 1200W 3-in-1 Immersion Hand Blender

Power: 1200 Watts

Speed Control: 12 Variable Speeds + Turbo

Material: Stainless Steel (blending shaft, blades, whisk, frother)

Blade Type: 4-Leaf Blade

Safety Features: Temperature Control, BPA-Free Materials

Dishwasher Safe Parts: Blending shaft, whisk, frother, measuring cup

9. WARRANTY AND SUPPORT

YISSVIC products are manufactured to high-quality standards. For warranty information, technical support, or service inquiries, please refer to the contact information provided with your purchase or visit the official YISSVIC website. Please retain your proof of purchase for warranty claims.