

Gimars 88-TMJ01-2

Gimars 2-in-1 Pet Grooming Clippers (Model 88-TMJ01-2) User Manual

Model: 88-TMJ01-2

1. INTRODUCTION

Thank you for choosing the Gimars 2-in-1 Pet Grooming Clippers. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new pet grooming device. Please read these instructions thoroughly before first use and retain them for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the clippers are turned off before cleaning, attaching/detaching blades, or when not in use.
- Do not immerse the main body of the clippers in water. The blades are washable, but the motor unit is not.
- Keep the device out of reach of children and pets.
- Use only the provided charging cable and adapter.
- Do not operate the clippers if the cord or plug is damaged, or if the device is malfunctioning.
- Avoid using the clippers on wet hair to prevent electrical hazards and ensure optimal performance.
- Regularly check blades for damage or dullness. Replace if necessary to prevent pulling hair or causing discomfort to your pet.
- Always groom your pet in a calm and well-lit environment.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Gimars Pet Grooming Clippers (Main Unit)

- Wide Blade
- Narrow Blade
- 4 Guide Combs (3mm, 6mm, 9mm, 12mm)
- USB Charging Cable
- Cleaning Brush
- Lubricating Oil
- User Manual

4. PRODUCT FEATURES

- **2-in-1 Swappable Blades:** Includes a wide blade for body grooming and a narrow blade for delicate areas like paws, ears, face, and rump.



Image: The clippers feature two interchangeable blades: a wide blade for general body grooming and a narrow blade for precise trimming around paws, ears, eyes, and hips.

- **Powerful 3.0 Motor:** Delivers up to 7000 RPM for efficient, snag-free trimming through thick and matted pet hair.

Snag-Free Smooth Trims

Upgrade Motor Up to
7000 RPM Perfect
for All PET Hairs



Image: An illustration of the clipper's internal motor, highlighting its 7000 RPM capability for smooth and efficient grooming on all pet hair types.

- **Low Noise & Vibration:** Operates at less than 55dB, minimizing stress and fear for pets during grooming.

Quiet <55dB

Low Vibrations, No Afraid



Image: A visual comparison showing the clipper's low noise output (below 55dB) relative to other household sounds, indicating a quiet grooming experience for pets.

- **Safe Ceramic & Titanium Blades:** High-quality 33-tooth titanium fixed blade and ceramic movable blade ensure sharp, safe cutting without pulling hair or causing skin irritation.

Effortless Grooming for Thick Hair

No Pulling Hair,
No Skin Damage,
No Rust



Image: A close-up of the clipper's ceramic and stainless steel blade, illustrating the adjustable cutting lengths from 0.8mm to 2.0mm for precise grooming.

- **Cordless & Rechargeable:** USB rechargeable with a UL certified charging base, offering up to 3 hours of continuous use on a full charge.



Cordless Pet Grooming

Anytime, Anywhere -
Indoors or Outdoors



Detachable Washable Blade **US Charger 3 Hours Fast Charging** **LCD Display**

Image: The cordless pet grooming clippers, highlighting its detachable washable blade, included US charger, and clear LCD display for battery status.

- **Adjustable Cutting Lengths:** 5 adjustable cutting lengths (0.8mm, 1.2mm, 1.4mm, 1.7mm, 2mm) directly on the blade, plus 4 guide combs (3mm, 6mm, 9mm, 12mm) for varied hair lengths.

4 Guide Combs

Make Your Fur Baby in Varied Looks



Image: The clippers displayed with four different guide combs (3mm, 6mm, 9mm, 12mm), illustrating their use for various hair lengths and pet breeds.

- **3 Speed Levels:** Allows for customized grooming based on pet hair thickness and sensitivity.
- **LCD Display:** Shows battery life and speed settings.

5. SETUP

5.1 Initial Charging

1. Before first use, fully charge the clippers. Connect the USB charging cable to the charging base and plug it into a suitable USB power adapter (not included, but a standard phone charger works).
2. Place the clippers onto the charging base. The LCD display will indicate charging status.
3. A full charge typically takes approximately 3 hours and provides up to 3 hours of continuous use.

5.2 Attaching/Detaching Blades

1. Ensure the clippers are turned off.
2. To detach a blade: Push the blade firmly upwards with your thumb until it clicks off.
3. To attach a blade: Align the blade with the slot on the clipper head and push down until it clicks securely into place. Ensure it is flush with the clipper body.

5.3 Attaching Guide Combs

1. Ensure the clippers are turned off and a blade is securely attached.
2. Select the desired guide comb (3mm, 6mm, 9mm, or 12mm).
3. Slide the guide comb onto the blade until it locks into position. Ensure it is firmly attached.
4. To remove, gently pull the comb upwards from the blade.

6. OPERATING INSTRUCTIONS

6.1 Preparing Your Pet

- Brush your pet's fur thoroughly to remove any tangles or mats before clipping. This prevents pulling and ensures a smoother cut.
- Ensure your pet is calm and comfortable. Introduce the clippers slowly, allowing them to get used to the sound and vibration.

6.2 Using the Clippers

1. Turn on the clippers by pressing the power button. The LCD display will light up.
2. Adjust the speed setting (3 levels available) by pressing the power button repeatedly. Start with a lower speed for sensitive areas or nervous pets, and increase as needed for thicker hair.
3. Adjust the cutting length directly on the blade (0.8mm, 1.2mm, 1.4mm, 1.7mm, 2mm) using the lever on the side of the clipper, or attach a guide comb for longer cuts.
4. Hold the clippers firmly and move them against the direction of hair growth for an even cut. Use smooth, steady strokes.
5. For body grooming, use the wide blade and appropriate guide comb.
6. For delicate areas like paws, face, ears, and around the rump, switch to the narrow blade and use caution.

How to Groom Your Pet?



Image: A visual guide demonstrating the process of grooming a pet, including using the clippers for body hair, a grooming comb, and scissors for finishing touches around sensitive areas.

7. Periodically clear accumulated hair from the blade during grooming to maintain performance.
8. After use, turn off the clippers and proceed to cleaning.

7. MAINTENANCE AND CLEANING

7.1 Cleaning the Blades

1. Ensure the clippers are turned off and unplugged from the charger.
2. Detach the blade from the clipper body.
3. Use the provided cleaning brush to remove any loose hair from the blade and the clipper head.
4. The ceramic blade is washable. Rinse the detached blade under running water. Ensure it is completely dry before reattaching or storing.
5. Apply a few drops of lubricating oil (provided) to the blade teeth after each cleaning and before each use. This ensures smooth operation and extends blade life.

7.2 Cleaning the Clipper Body

- Wipe the clipper body with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.

- Do not immerse the clipper body in water.

7.3 Storage

- Store the clippers in a cool, dry place, away from direct sunlight and moisture.
- Ensure the clippers are fully charged before long-term storage to maintain battery health.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clippers not turning on.	Low battery.	Charge the clippers fully.
Clippers not turning on.	Device malfunction.	Contact customer support.
Poor cutting performance / pulling hair.	Blades are dull or dirty.	Clean and lubricate blades. Replace if dull.
Poor cutting performance / pulling hair.	Hair is matted or tangled.	Brush pet's hair thoroughly before clipping.
Excessive vibration or noise.	Blades not properly aligned or lubricated.	Ensure blades are securely attached and lubricated.
Clippers get hot during use.	Prolonged use or dirty blades.	Take breaks during long grooming sessions. Clean and lubricate blades.

9. SPECIFICATIONS

Feature	Detail
Model Name	88-TMJ01-2
Brand	Gimars
Power Source	Battery Powered (Cordless, USB Rechargeable)
Motor Speed	Up to 7000 RPM (3 Speed Levels)
Noise Level	< 55dB
Blade Material	Ceramic & Titanium
Adjustable Cutting Lengths	0.8mm, 1.2mm, 1.4mm, 1.7mm, 2mm
Guide Combs Included	3mm, 6mm, 9mm, 12mm
Battery Life	Up to 3 hours continuous use
Charging Time	Approx. 3 hours
Item Weight	520 Grams

Feature	Detail
Dimensions (L x W x H)	66 x 14 x 21.1 centimetres
Included Components	Blades, Guide Combs, Hair Clipper, USB Cable, Cleaning Brush, Oil

10. WARRANTY AND SUPPORT

Gimars products are manufactured with quality and performance in mind. For any questions, concerns, or technical support regarding your pet grooming clippers, please refer to the retailer's return policy or contact Gimars customer service through their official channels. Please retain your proof of purchase for warranty claims.

Note: The product's return policy typically allows for returns within 30 days of purchase. Specific warranty details may vary by region and retailer.