

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GRUNDIG](#) /

› [Grundig 40 GFB 5000 LED TV User Manual](#)

GRUNDIG 40 GFB 5000

Grundig 40 GFB 5000 LED TV User Manual

Model: 40 GFB 5000

1. INTRODUCTION

Thank you for choosing the Grundig 40 GFB 5000 LED TV. This manual provides essential information for the safe and efficient operation of your television. Please read these instructions thoroughly before using the product and retain them for future reference. Your Grundig 40 GFB 5000 TV features a 40-inch Full HD LED display, integrated Triple Tuner (DVB-T2/C/S2), and multiple HDMI inputs for versatile connectivity.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- **Power Supply:** Connect the TV only to an AC power outlet with the specified voltage. Do not overload power outlets.
- **Ventilation:** Ensure adequate ventilation around the TV. Do not block ventilation openings. Maintain a minimum distance of 10 cm (4 inches) from walls or other objects.
- **Placement:** Place the TV on a stable, level surface to prevent it from falling. Avoid placing it in direct sunlight, near heat sources, or in areas with high humidity or dust.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Cleaning:** Unplug the TV before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Foreign Objects:** Never push objects of any kind into the TV through openings, as they may touch dangerous voltage points or short-out parts.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Please check that all items are present in the packaging:

- Grundig 40 GFB 5000 LED TV
- Remote Control with Batteries
- Power Cable
- Table Stand (if applicable)

- User Manual (this document)
- Quick Start Guide

4. SETUP

4.1 Unpacking

Carefully remove the TV from its packaging. It is recommended to keep the original packaging for future transport or storage.

4.2 Stand Installation

If you are not wall-mounting the TV, attach the provided table stand. Follow these general steps:

1. Place the TV face down on a soft, clean surface to prevent screen damage.
2. Align the stand with the mounting holes on the bottom of the TV.
3. Secure the stand using the screws provided. Ensure all screws are tightened firmly.



Image 1: Side view of the Grundig 40 GFB 5000 LED TV, illustrating the attached table stand.

4.3 Wall Mounting (Optional)

The TV is compatible with VESA wall mounts. For wall mounting, remove the table stand. It is highly recommended to use a professional installer for wall mounting to ensure safety and proper installation.

4.4 Connections

Before making any connections, ensure the TV and all external devices are turned off and unplugged from the power outlet.



Image 2: Front view of the Grundig 40 GFB 5000 LED TV, showing the display and bezel.

- **Power Connection:** Connect the power cable to the TV's power input and then to a wall outlet.
- **Antenna/Cable Connection:** Connect your terrestrial, cable, or satellite antenna cable to the appropriate input on the TV (DVB-T2/C/S2).
- **HDMI Devices:** Connect external devices such as Blu-ray players, game consoles, or set-top boxes to the HDMI ports using HDMI cables.
- **USB Devices:** Insert USB storage devices into the USB port for media playback.
- **Audio Output:** Use the audio output ports (e.g., optical digital audio out) to connect to external sound systems or soundbars.

5. OPERATING

5.1 First Time Setup

After connecting all cables and plugging in the TV, press the power button on the remote control or the TV. The TV will guide you through the initial setup process, which typically includes:

- Language selection
- Country selection
- Channel scan (for DVB-T2/C/S2)
- Time zone settings

5.2 Remote Control

The remote control allows you to access all TV functions. Familiarize yourself with the buttons:

- **Power Button:** Turns the TV on or off (standby).
- **Volume +/-:** Adjusts the volume level.
- **Channel +/-:** Changes TV channels.
- **Source/Input:** Selects the input source (TV, HDMI1, HDMI2, etc.).
- **Menu:** Opens the main on-screen menu.
- **Navigation Buttons (Up/Down/Left/Right) and OK:** Navigate through menus and confirm selections.
- **Exit/Back:** Returns to the previous menu or exits the current menu.

5.3 Basic Functions

- **Power On/Off:** Press the power button on the remote or TV.

- **Volume Adjustment:** Use the Volume +/- buttons.
- **Channel Selection:** Use the Channel +/- buttons or enter channel numbers directly.
- **Input Source Selection:** Press the Source/Input button and select the desired input (e.g., HDMI 1 for a Blu-ray player).

5.4 Menu Navigation

Press the 'Menu' button on your remote control to access the TV's settings. Use the navigation buttons to move through options and 'OK' to select. Common menu categories include Picture, Sound, Channel, Network, and System settings.

5.5 Triple Tuner

Your TV is equipped with a Triple Tuner, allowing reception of digital terrestrial (DVB-T2), cable (DVB-C), and satellite (DVB-S2) broadcasts without an external receiver. During the initial setup, the TV will scan for available channels based on your connection type.

5.6 HDMI Usage

HDMI (High-Definition Multimedia Interface) provides a high-quality digital connection for audio and video. Connect your HDMI-enabled devices to the HDMI ports on the TV. Select the corresponding HDMI input using the 'Source' button on your remote control.

6. MAINTENANCE

6.1 Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner (apply to cloth, not directly to screen).
- **Cabinet:** Wipe the TV cabinet with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.

Important: Always unplug the TV from the power outlet before cleaning.

6.2 Storage

If you need to store the TV for an extended period, unplug it, disconnect all cables, and ideally repack it in its original packaging. Store in a dry, cool place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter problems with your TV, refer to the following common issues and solutions:

Problem	Possible Solution
No power	Check if the power cable is securely connected to the TV and the wall outlet. Try a different outlet. Ensure the power button on the TV or remote is pressed.
No picture, but sound is present	Check the input source. Ensure external devices are powered on and connected correctly. Try a different HDMI cable.

Problem	Possible Solution
No sound, but picture is present	Check the volume level. Ensure Mute is not activated. Check audio settings in the TV menu. If using external speakers, check their connections and power.
Remote control not working	Check and replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Poor picture quality	Check antenna/cable connection. Adjust picture settings (brightness, contrast, sharpness) in the TV menu. If using an external device, check its output resolution.

If the problem persists after trying these solutions, please contact Grundig customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	GRUNDIG
Model	40 GFB 5000
Screen Size	40 Inches (102 cm)
Display Technology	LED
Resolution	1080p (Full HD)
Refresh Rate	400 Hz (Motion Picture Improvement)
Connectivity Technology	HDMI
Tuner Type	Triple Tuner (DVB-T2/C/S2)
Mounting Type	Cabinet Mount (Table Stand)

9. WARRANTY AND SUPPORT

Your Grundig 40 GFB 5000 LED TV is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical support, service, or warranty claims, please contact Grundig customer service. Contact information can typically be found on the Grundig official website or on your warranty documentation.