

[Manuals.plus](#) /

› [Frigidaire](#) /

› Frigidaire EFR756 Retro Refrigerator with Top Freezer - User Manual

Frigidaire EFR756

Frigidaire EFR756 Retro Refrigerator with Top Freezer - User Manual

Model: EFR756

INTRODUCTION

This manual provides essential instructions for the safe installation, efficient operation, and proper maintenance of your Frigidaire EFR756 Retro Refrigerator. Please read this manual thoroughly before using the appliance to ensure optimal performance and longevity. Keep this manual for future reference.



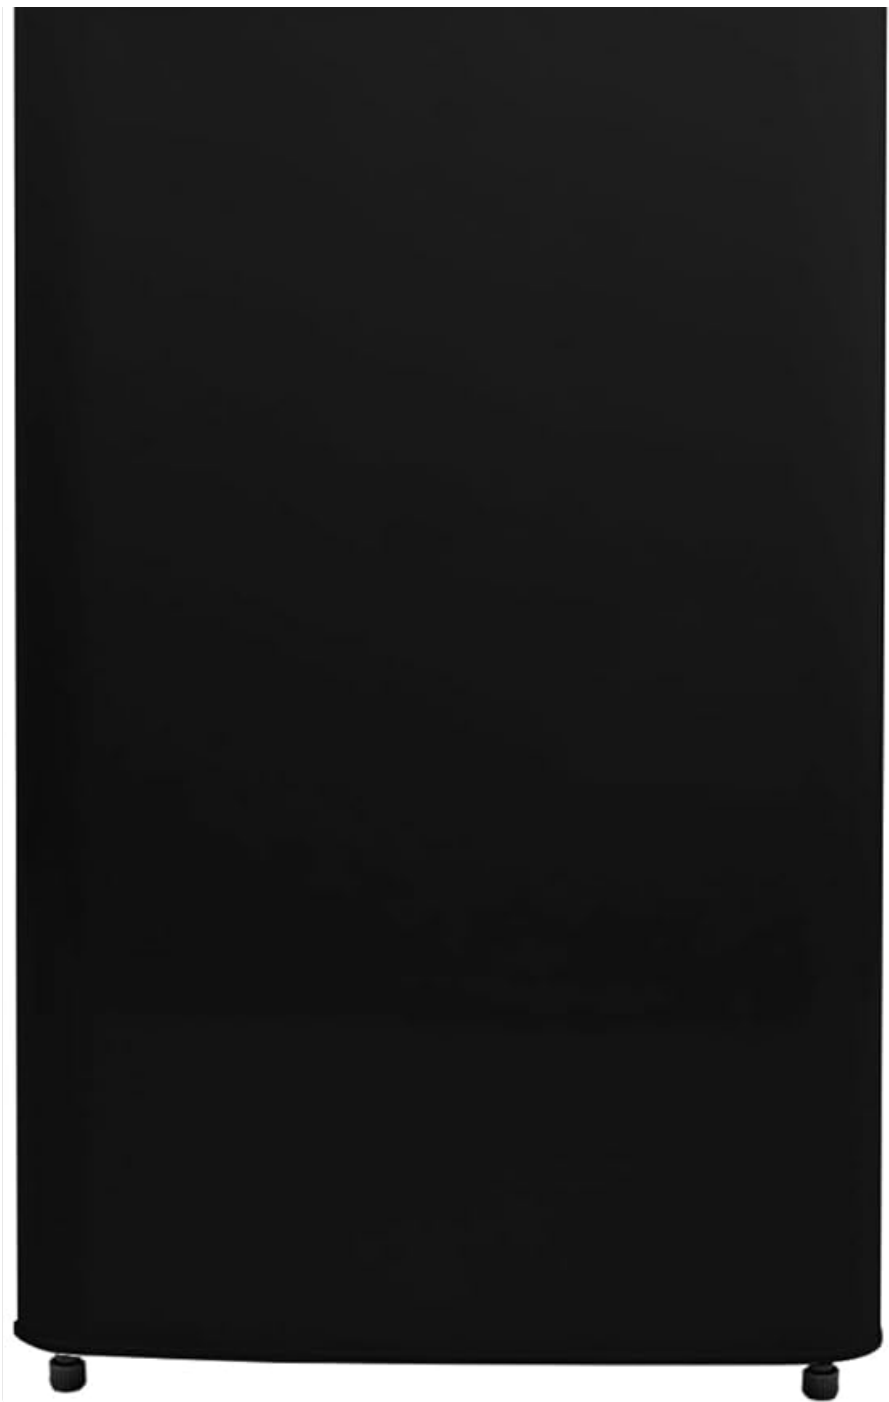


Figure 1: Front view of the Frigidaire EFR756 Retro Refrigerator.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. This appliance is designed for household use only.

- Ensure the refrigerator is properly grounded.
- Do not operate the appliance with a damaged power cord or plug.
- Unplug the refrigerator before cleaning or performing any maintenance.
- Keep ventilation openings clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

SETUP AND INSTALLATION

Unpacking

1. Remove all packaging materials, including foam and adhesive tape.
2. Inspect the refrigerator for any shipping damage. Report any damage to your retailer immediately.
3. Clean the interior and exterior surfaces with a soft cloth and mild detergent before use.

Placement

Select a location that is strong enough to support the refrigerator when fully loaded. Ensure adequate air circulation around the unit. The refrigerator features a smooth back design, allowing for installation against a wall.

- Allow at least 4 inches (10 cm) of space at the back and sides for proper ventilation.
- Avoid direct sunlight or heat sources.
- This appliance is suitable for various environments including kitchens, offices, dormitories, or garages.



Figure 2: Refrigerator in a kitchen, illustrating key features and placement considerations.

Leveling

The refrigerator is equipped with two front-mounted adjustable leveling legs and two castors at the back for easy

movement. To level the unit:

1. Turn the leveling legs clockwise to raise the refrigerator, or counter-clockwise to lower it.
2. Adjust until the refrigerator is stable and level on the floor.

Door Reversibility

The door hinges are reversible, allowing you to change the door swing direction to best suit your space. Refer to the detailed diagram in the full product manual for specific instructions on reversing the door.

Initial Power On

After placement and leveling, plug the refrigerator into a dedicated 120V electrical outlet. Allow the unit to cool for at least 2-4 hours before loading food items.

OPERATING INSTRUCTIONS

Temperature Control

The refrigerator features easy-to-use mechanical controls for temperature adjustment. The adjustable thermostat allows you to set the desired cooling level for both the refrigerator and freezer compartments.

- Locate the thermostat dial inside the refrigerator compartment.
- Turn the dial to a higher number for colder temperatures, and a lower number for warmer temperatures.
- Start with a medium setting and adjust as needed based on food load and ambient temperature.

Storage Organization

The 7.5 cu. ft. capacity provides ample storage. The interior is designed for organized and convenient storage of various food and beverage items.

- **Adjustable Glass Shelves:** Three removable glass shelves in the refrigerator compartment offer flexibility to customize the interior layout for items of various sizes.
- **Transparent Crisper:** A dedicated crisper bin with a glass cover keeps vegetables fresh and easily accessible.
- **Door Bins:** Full-width door bins provide convenient storage for bottles and smaller items.
- **Freezer Compartment:** The top freezer compartment includes an adjustable/removable wire shelf for organizing frozen goods.

Organized Convenience

This upright fridge provides organized storage for your food and beverage items



Figure 3: Interior layout demonstrating organized storage options.

Interior Lighting

Both the refrigerator and freezer compartments are equipped with interior lighting for improved visibility of contents.

MAINTENANCE

Defrosting

This refrigerator features a manual defrost system. Regular defrosting of the freezer compartment is necessary to maintain efficiency and prevent excessive ice buildup.

1. Unplug the refrigerator from the power outlet.
2. Remove all food items from the freezer and refrigerator compartments. Store frozen items in a cooler to prevent thawing.
3. Leave the freezer door open to allow ice to melt naturally. Place towels at the bottom to absorb water. Do not use sharp objects or heating devices to speed up defrosting.
4. Once all ice has melted, clean and dry the interior thoroughly.

5. Plug the refrigerator back in and allow it to cool before returning food items.

Cleaning

Regular cleaning helps maintain hygiene and appearance.

- **Interior:** Clean with a solution of mild soap and warm water. Rinse with clean water and dry thoroughly. Remove shelves and bins for easier cleaning.
- **Exterior:** Wipe with a soft cloth and mild detergent. For chrome handles and trim, use a non-abrasive cleaner designed for stainless steel or chrome.
- **Door Gaskets:** Clean door gaskets regularly to ensure a proper seal.

Condensation

Condensation may occasionally form on the interior walls, especially during humid conditions. This is normal for manual defrost units. Wipe away excess moisture with a soft cloth to prevent ice buildup and maintain hygiene.

TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate	No power to the unit.	Check if the power cord is securely plugged in. Verify the circuit breaker or fuse.
Refrigerator is not cold enough	Temperature setting is too warm. Door is frequently opened or not sealed properly. Excessive food load.	Adjust the thermostat to a colder setting. Ensure the door is closed completely and gaskets are clean. Reduce food load if overfilled.
Excessive noise	Refrigerator is not level. Items inside are vibrating.	Adjust leveling legs to ensure stability. Rearrange items to prevent contact with walls or shelves.
Water on floor or inside refrigerator	Drain tube is clogged. Excessive condensation.	Clear any obstructions from the drain tube. Wipe away condensation.
Items freezing near back wall	Items placed too close to the cooling element.	Ensure items are not directly touching the back or side walls of the refrigerator compartment.

SPECIFICATIONS

Technical details for the Frigidaire EFR756 Retro Refrigerator:

Feature	Detail
Brand	Frigidaire
Model Number	EFR756
Capacity (Total)	7.5 Cubic Feet

Feature	Detail
Refrigerator Fresh Food Capacity	7 Cubic Feet
Freezer Capacity	0.5 Cubic Feet
Dimensions (D x W x H)	23 x 23.5 x 57 inches
Item Weight	90 Pounds
Installation Type	Freestanding
Form Factor	Freezer Top
Defrost System	Manual
Number of Doors	2
Shelf Type	Glass
Number of Shelves	3 (refrigerator)
Crispers/Drawers	2
Voltage	120 Volts
Annual Energy Consumption	20 Kilowatt Hours
Certification	ETL
Material Type	Plastic



Frigidaire is a pending or registered trademark of Electrolux Home Products and used under license from Electrolux Home Products, Inc.

Figure 4: Product dimensions for planning placement.

WARRANTY AND SUPPORT

Warranty Information

For specific warranty details, please refer to the warranty card included with your product or visit the official Frigidaire website. Keep your proof of purchase for warranty claims.

Customer Support

If you require further assistance or have questions not covered in this manual, please contact Frigidaire customer support. Contact information can typically be found on the Frigidaire website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question