

SINGER M1000.662

SINGER M1000 Mending Machine User Manual

Model: M1000.662 | Brand: SINGER

1. INTRODUCTION AND OVERVIEW

The SINGER M1000 Mending Machine is a compact, lightweight, and portable sewing machine designed for light to medium-weight fabrics and quick repairs. Weighing only 5.5 pounds, it is an ideal companion for sewists who need mobility and easy storage. This machine offers 32 stitch applications, making mending and garment repairs straightforward and efficient.

Key features include preset stitch length and width for ease of use, a top drop-in bobbin for convenient monitoring, and a free arm for sewing tubular items like cuffs and sleeves. The machine comes with essential accessories to get you started immediately.



Figure 1: SINGER M1000 Mending Machine with its accessories, including bobbins, needles, and foot pedal.

2. SETUP

2.1 Unpacking and Placement

Carefully remove the machine from its packaging. Place the machine on a stable, flat surface. Ensure there is adequate space around the machine for fabric handling and comfortable operation. Connect the power cord to the machine and then to a suitable electrical outlet.

2.2 Winding the Bobbin

The SINGER M1000 features a top drop-in bobbin system for easy winding and insertion. Follow the threading guides on the machine to wind thread onto an empty Class 15 transparent bobbin. Ensure the thread is wound evenly to prevent tension issues during sewing.



Figure 2: The transparent top drop-in bobbin cover allows for easy monitoring of thread supply.

2.3 Threading the Machine

Proper threading is crucial for successful sewing. Follow the numbered threading path indicated on the machine for the upper thread. For the bobbin, place the wound bobbin into the bobbin case, ensuring the thread feeds correctly through the tension spring. Pull both the upper and bobbin threads under the presser foot and towards the back of the machine.


3. OPERATING INSTRUCTIONS

3.1 Stitch Selection

The SINGER M1000 offers 32 stitch applications. To select a stitch, simply turn the stitch selection dial located on the front of the machine to the desired stitch pattern. The machine has preset stitch length and width for most applications, simplifying the process for beginners.



Easy Stitch Selection

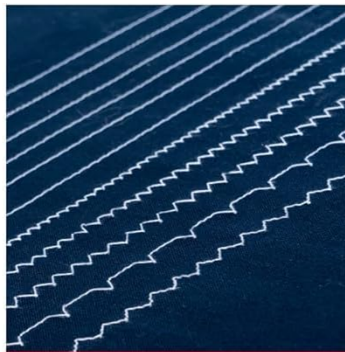

32 Stitch Applications



Reverse Lever to Secure Stitches



Figure 3: The stitch selection dial allows easy choice from 32 stitch applications, including straight and zigzag stitches.

3.2 Starting to Sew

Place your fabric under the presser foot. Lower the presser foot lever. Gently press the foot pedal to begin sewing. To reinforce seams at the beginning and end of your stitching, use the reverse stitch lever. This helps prevent stitches from unraveling.

3.3 Free Arm Functionality

The machine features a built-in free arm, which is ideal for sewing tubular items such as sleeves, cuffs, and pant hems. To access the free arm, simply remove the accessory storage compartment from the base of the machine.



Figure 4: The free arm provides easy access for sewing small, circular projects.

3.4 Fabric Compatibility

The SINGER M1000 is best suited for light to medium-weight fabrics. For thicker materials or heavy-duty projects, a full-size sewing machine is recommended.

4. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your sewing machine.

- **Cleaning:** Periodically clean the bobbin area and feed dogs to remove lint and dust buildup. Use a small brush or lint remover.
- **Needle Replacement:** Replace the needle regularly, especially after 8-10 hours of sewing or if it becomes bent or dull. A dull needle can cause skipped stitches or fabric damage.
- **Storage:** When not in use, cover the machine to protect it from dust. Store it in a dry, cool place.

5. TROUBLESHOOTING

This section addresses common issues you might encounter. For more detailed troubleshooting, refer to the official user manual.

Problem	Possible Cause	Solution
Thread Breaking	Incorrect threading, improper tension, dull or bent needle, poor quality thread.	Re-thread the machine, adjust tension, replace needle, use good quality thread.
Skipped Stitches	Incorrect needle insertion, wrong needle type for fabric, bent needle.	Ensure needle is fully inserted and facing correctly, use appropriate needle, replace needle.
Bobbin Problems (e.g., tangling)	Improper bobbin winding, incorrect bobbin insertion, lint in bobbin case.	Re-wind bobbin evenly, ensure correct bobbin orientation, clean bobbin area.

Problem	Possible Cause	Solution
Machine Not Sewing	Machine not plugged in, bobbin winder engaged, thread tangled.	Check power connection, disengage bobbin winder, clear any thread jams.

6. SPECIFICATIONS

Feature	Detail
Model Number	M1000.662
Dimensions (L x W x H)	11.4 x 5.1 x 9.4 inches
Item Weight	5.5 pounds
Stitch Applications	32
Bobbin Type	Class 15 (Transparent Top Drop-in)
Included Accessories	All-Purpose Foot, Extra Needle, Bobbins, Manual Needle Threader
Power Source	Power Cord (Included)
Free Arm	Yes
LED Light	Yes



Figure 5: The compact dimensions of the SINGER M1000, measuring 11.4 inches in length and 9.4 inches in height.

7. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official SINGER website or the full user manual provided with your product. You can download the comprehensive User Manual (PDF) [here](#). For further assistance, please contact SINGER customer service.

Related Documents - M1000.662

SINGER® HD6380			
English			
Stitch	Symbol	Stitch	Symbol
1. Straight	1	11. Zigzag	11
2. Zigzag	2	12. Multi-step zigzag	12
3. Blind hem	3	13. Blind hem	13
4. Picot hem	4	14. Picot hem	14
5. Decorative	5	15. Decorative	15
6. Overlock	6	16. Overlock	16
7. Bartack	7	17. Bartack	17
8. Buttonhole	8	18. Buttonhole	18
9. Buttonhole	9	19. Buttonhole	19
10. Buttonhole	10	20. Buttonhole	20

[SINGER HD6380 Sewing Machine Stitch Applications Guide](#)

A comprehensive guide to 110 stitch applications for the SINGER HD6380 sewing machine, covering straight, zigzag, multi-step zigzag, blind hem, picot hem, decorative, overlock, and bartack buttonhole stitches for various sewing projects and fabric types.

