

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [AM alphamount](#) /
- › [AM alphamount Swivel Universal TV Stand User Manual](#)

AM alphamount APTVS08

AM alphamount Swivel Universal TV Stand User Manual

Model: APTVS08

INTRODUCTION

This user manual provides comprehensive instructions for the assembly, operation, and maintenance of your AM alphamount Swivel Universal TV Stand, model APTVS08. Designed for 32-80 inch LED/LCD/OLED TVs, this tabletop stand offers height adjustment and swivel functionality for optimal viewing. Please read this manual thoroughly before installation and use to ensure safe and correct operation.

SAFETY INFORMATION

- Ensure all components are present and undamaged before assembly. Do not use if any parts are missing or defective.
- Do not exceed the maximum weight capacity of 99 lbs (45 kg).
- Verify your TV's VESA pattern is compatible (200x100mm to 600x400mm).
- Always assemble the stand on a soft, clean surface to prevent scratches.
- Use appropriate tools as specified in the assembly instructions.
- Ensure the TV is securely mounted to the stand before releasing it.
- Keep children and pets away during assembly.
- Place the assembled TV stand on a stable, level surface to prevent tipping.
- Do not hang or climb on the TV stand.

PACKAGE CONTENTS

Please check the package to ensure all parts are included. If any parts are missing or damaged, please contact customer support.

- Tempered Glass Base
- Main Support Pillar

- TV Mounting Brackets (Left & Right)
- Connecting Plate
- Various Screws, Washers, and Spacers for TV Mounting
- Assembly Hardware (bolts, nuts, Allen wrench)
- Non-slip Feet
- User Manual (this document)

SETUP AND INSTALLATION

Follow these steps carefully for proper assembly. It is recommended to have two people for certain steps, especially when mounting the TV.

Step 1: Assemble the Base and Support Pillar

Attach the main support pillar to the tempered glass base using the provided bolts and Allen wrench. Ensure the pillar is securely fastened and stable.

Designed for Stability



1 Tempered glass base

2 Strong steel



3 Non-slip feet



Figure 1: Components designed for stability, including the tempered glass base, strong steel pillar, and non-slip feet.

Step 2: Attach TV Mounting Brackets to Your TV

Carefully place your TV face down on a soft, clean surface. Identify the VESA mounting holes on the back of your TV. Select the appropriate screws, washers, and spacers from the provided hardware kit that fit your TV's VESA pattern. Attach the left and right TV mounting brackets to the back of your TV. Ensure they are level and securely tightened.

Hassle-Free Installation



Figure 2: Illustrates the straightforward process of attaching the TV to the stand, emphasizing no drilling is required.

Step 3: Mount the TV onto the Stand

With assistance, carefully lift the TV with the attached brackets and hook them onto the main support pillar of the stand. Ensure the brackets are properly seated and then secure them using the locking screws or mechanisms provided. Double-check that the TV is stable and level.



Figure 3: The complete TV stand assembly, ready for TV mounting.

OPERATING INSTRUCTIONS

Height Adjustment

The AM alphamount TV stand offers three height adjustment options, ranging from 18.9 inches to 22.83 inches. To adjust the height, carefully unmount the TV from the support pillar. Adjust the height of the mounting plate on the pillar to your desired level, then re-mount the TV. Ensure the TV is securely re-fastened after adjustment.

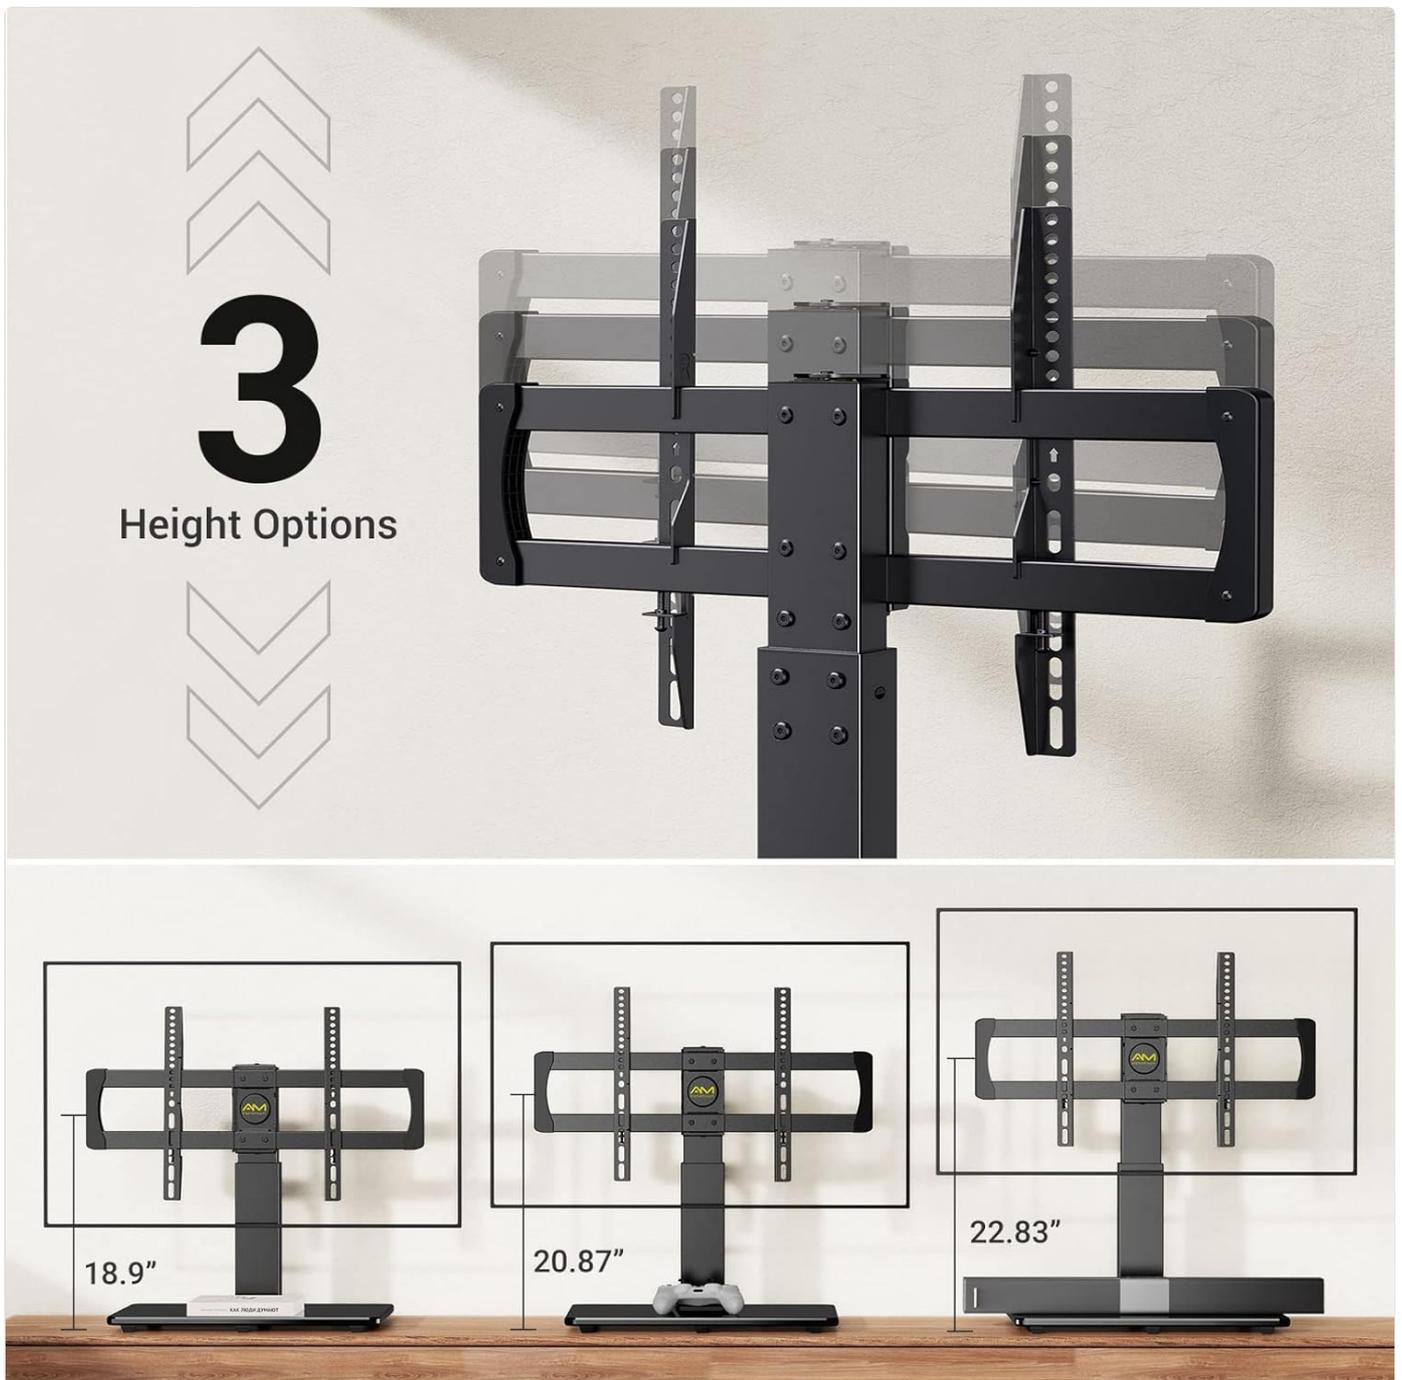


Figure 4: Demonstrates the three available height settings for the TV stand.

Swivel Functionality

The TV stand allows for a 70° swivel range (35° left and 35° right). To swivel the TV, gently push the side of the TV in the desired direction. The smooth swivel mechanism allows for easy adjustment to achieve the best viewing angle from various positions in your room.



Figure 5: Illustrates the 70-degree swivel capability of the TV stand, allowing for flexible viewing angles.

MAINTENANCE

- Regularly check all bolts and screws to ensure they remain tight and secure.
- Clean the tempered glass base and metal components with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- Do not place hot items directly on the glass base without protection.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
TV is wobbly or unstable.	Loose bolts or screws; uneven surface.	Ensure all assembly bolts are tightened. Place the stand on a flat, level surface.
TV does not swivel smoothly.	Dust or debris in the swivel mechanism.	Clean the swivel area. Ensure the TV is not pressing against a wall or other obstruction.
Cannot attach TV to brackets.	Incorrect VESA screws or spacers used.	Refer to your TV's manual for correct VESA screw size. Use the appropriate hardware provided with the stand.

SPECIFICATIONS

Feature	Detail
Model Number	APTVS08
Compatible TV Sizes	32 - 80 inches
Maximum Weight Capacity	99 lbs (45 kg)
VESA Compatibility	200x100mm to 600x400mm
Swivel Range	$\pm 35^\circ$; (70 $^\circ$; total)
Height Adjustment	18.9" to 22.83" (3 options)
Material	Alloy Steel, Tempered Glass
Color	Black
Item Weight	15.78 pounds
Package Dimensions	17.61 x 12.2 x 3.79 inches



Figure 6: Detailed dimensions of the AM alphamount TV stand.

Fits Almost Any TV

VESA:
200x100~600x400mm

Weight Capacity:
99LBS



Figure 7: Illustrates the wide compatibility of the TV stand with various TV sizes and VESA patterns.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official AM alphamount website or contact their customer service directly. Keep your purchase receipt for warranty claims.

Official Website: [AM alphamount Store](#)

For additional assistance, you may also refer to the [Installation Manual \(PDF\)](#) provided by the manufacturer.