

FREE VILLAGE 5304-S-1

FREE VILLAGE 47-inch Tower Fan

MODEL 5304-S-1 USER MANUAL

1. Introduction

Thank you for purchasing the FREE VILLAGE 47-inch Tower Fan, Model 5304-S-1. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new tower fan. Please read it thoroughly before use and retain it for future reference.

1.1 SAFETY INFORMATION

- Always ensure the fan is placed on a stable, level surface to prevent tipping.
- Do not insert fingers or foreign objects into the fan grille.
- Keep the fan away from water or excessive moisture.
- Unplug the fan from the power outlet before cleaning or performing any maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAFETY DESIGN

Designed for Families with Children and Pets



ETL
Listed



Fused
Safety Plug



Bladeless
Design



Image 1.1: The FREE VILLAGE Tower Fan features a bladeless design and a fused safety plug, making it suitable for households with children and pets. It is ETL listed for safety compliance.

2. Setup

2.1 UNPACKING

1. Carefully remove the tower fan and all accessories from the packaging.
2. Check for any damage during transit. If damage is found, do not operate the fan and contact customer support.
3. Ensure all components are present: tower fan unit, base, remote control, and user manual.

2.2 ASSEMBLY

The FREE VILLAGE Tower Fan typically comes with minimal assembly required, usually involving attaching the base.

1. Align the two halves of the base and snap or screw them together (refer to specific diagrams if provided in

packaging).

2. Carefully place the main fan unit onto the assembled base, ensuring it clicks securely into place.
3. Route the power cord through the designated channel in the base for stability.

2.3 PLACEMENT

Place the tower fan on a firm, level surface. Ensure there is adequate space around the fan for optimal airflow and oscillation. Avoid placing it directly against walls or furniture that could obstruct air intake or output.



Image 2.1: The 47-inch FREE VILLAGE Tower Fan is designed to fit seamlessly into various room settings, providing effective air circulation.

3. Operating Instructions

Your FREE VILLAGE Tower Fan offers multiple functions for personalized comfort. It can be operated via the control panel on the unit or the included remote control.



Image 3.1: The FREE VILLAGE Tower Fan and its remote control, illustrating its 360-degree oscillation capability and powerful airflow.

3.1 CONTROL PANEL AND REMOTE CONTROL

The control panel is located on the top of the fan. The remote control provides convenient access to all functions from a distance of up to 17 feet.

MULTIPLE FUNCTION



3 Modes



8 Speed



24 Hours Timer



360° Oscillation



17 ft Remote Range



LED Display



47 inches

Image 3.2: Overview of the FREE VILLAGE Tower Fan's multiple functions, including various modes, speed settings, timer, oscillation, remote control range, and LED display.

3.2 POWER ON/OFF

- Plug the power cord into a standard electrical outlet.
- Press the **Power** button (usually marked with ) on the control panel or remote control to turn the fan on or off.

3.3 SPEED SETTINGS

The fan offers 8 speed settings to adjust airflow intensity.

- Press the **Speed** button (often marked with a fan icon or '▲' / '▼') to cycle through the available speed levels. The current speed will be displayed on the LED screen.

3.4 WIND MODES

Select from three distinct wind modes for varied comfort.

- Press the **Mode** button to switch between:
 - **Normal Mode:** Provides a constant, steady airflow.
 - **Natural Mode:** Simulates natural breeze by varying fan speed.
 - **Sleep Mode:** Operates at a lower speed with reduced noise and dims the LED display for undisturbed rest.

MULTIPLE FUNCTION

3 Wind Modes



Sleep
Mode

Natural
Mode

Normal
Mode



8 Speed
Modes



360°
Oscillation



LED
Display



Image 3.3: The fan offers three wind modes to suit different preferences, along with 8 speed settings, 360-degree oscillation, and an LED display.

ULTRA QUIET SLEEP



Display
light off



Operate at
low noise



24 Hours
Timer



Image 3.4: The Sleep Mode is designed for ultra-quiet operation, featuring a dimmable display light and compatibility with the 24-hour timer.

3.5 OSCILLATION

The fan features 360-degree widespread oscillation to distribute air across a larger area.

- Press the **Oscillation** button (often marked with a circular arrow icon) to activate or deactivate the oscillation function.



Image 3.5: The 360-degree widespread oscillation ensures cool air reaches every corner of the room.

3.6 TIMER FUNCTION

Set the fan to automatically turn off after a specified period, up to 24 hours.

- Press the **Timer** button to set the desired operating duration in hourly increments. The set time will be displayed on the LED screen.

3.7 NEGATIVE ION AIR ACTIVATION

This feature helps to purify the air by releasing negative ions.

- Press the **Ion** button (if available on your model's control panel or remote) to activate or deactivate the negative ion function.

NEGATIVE ION AIR ACTIVATION

Rapidly increase the concentration of negative ions in the room and sink pollutants in the air



Image 3.6: The negative ion air activation feature helps to rapidly increase the concentration of negative ions, assisting in sinking pollutants in the air.

4. Maintenance

Regular maintenance ensures optimal performance and longevity of your tower fan.

4.1 CLEANING

1. Always unplug the fan from the power outlet before cleaning.
2. Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
3. For dust accumulation in the air intake or output grilles, use a vacuum cleaner with a brush attachment or compressed air to gently remove debris.
4. Ensure the fan is completely dry before plugging it back in and operating.

4.2 STORAGE

When not in use for extended periods, store the fan in a cool, dry place. It is recommended to keep the original packaging for storage to protect the fan from dust and damage.

5. Troubleshooting

If you encounter issues with your FREE VILLAGE Tower Fan, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply; Power button not pressed.	Check if the power cord is securely plugged into a working outlet. Press the Power button.
Weak airflow.	Low speed setting; Air intake/output blocked.	Increase the fan speed. Ensure grilles are clear of obstructions and dust.
Oscillation not working.	Oscillation function deactivated.	Press the Oscillation button to activate the function.
Remote control not working.	Dead batteries; Obstruction between remote and fan.	Replace remote control batteries. Ensure a clear line of sight to the fan's receiver.
Unusual noise.	Fan not on a level surface; Internal obstruction.	Place the fan on a stable, level surface. Unplug and check for any foreign objects inside the grilles.

If the problem persists after attempting these solutions, please contact customer support.

6. Specifications

Detailed technical specifications for the FREE VILLAGE 47-inch Tower Fan Model 5304-S-1.

Feature	Specification
Brand	FREE VILLAGE
Model Number	5304-S-1
Product Dimensions	32 x 32 x 119.99 cm (approximately 12.6 x 12.6 x 47.2 inches)
Item Weight	7.92 kg (approximately 17.46 lbs)
Number of Speeds	8
Special Features	Bladeless, Oscillating, Negative Ion Air Activation
Oscillation Angle	360 degrees
Wind Modes	Normal, Natural, Sleep
Timer	Up to 24 hours
Control Method	Touch Panel, Remote Control

Feature	Specification
Power Source	Corded Electric

7. Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or contact FREE VILLAGE customer service through their official website or the retailer where the product was purchased. Please have your model number (5304-S-1) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question