



[Manuals.plus](#) /

- › [Golden Security](#) /
- › Golden Security Mini Arcade Machine RHAC01-Plus Instruction Manual

Golden Security RHAC01-Plus

Golden Security Mini Arcade Machine RHAC01-Plus Instruction Manual

Model: RHAC01-Plus

1. INTRODUCTION

Thank you for purchasing the Golden Security Mini Arcade Machine. This compact, handheld gaming console brings the nostalgia of classic arcade games to your fingertips. Featuring 156 built-in games, a vibrant 2.8-inch color screen, and the option to connect to a television, it offers an engaging gaming experience for all ages. Please read this manual carefully to ensure proper setup and operation of your device.



Image 1.1: The Golden Security Mini Arcade Machine showcasing different game genres.

2. PRODUCT FEATURES

- **156 Classic Games:** Enjoy a wide variety of popular retro games including puzzle, adventure, shooting, racing, and combat genres from the 80s and 90s. No additional downloads are required.
- **Long Playtime:** Equipped with a built-in 700 mAh rechargeable lithium battery, providing up to 3 hours of continuous gameplay. The device can be charged while playing.
- **Portable Design:** Classic and compact design with a 2.8-inch full-color screen for clear visuals. Ideal for travel, business trips, or camping.
- **TV Connectivity:** Connect the console to your television via the AV output to enjoy games on a larger screen for an enhanced gaming experience.

3. PACKAGE CONTENTS

Upon opening the package, please ensure all the following items are present:

- Golden Security Mini Arcade Machine (RHAC01-Plus)
- USB Charging Cable

- AV Output Cable
- Instruction Manual
- Rechargeable Lithium-ion Battery (pre-installed or separate)



Image 3.1: Contents of the Golden Security Mini Arcade Machine package.

Your browser does not support the video tag.

Video 3.1: An unboxing video demonstrating the contents of the Mini Arcade Machine package.

4. SETUP

4.1 Battery Installation

The Mini Arcade Machine can be powered by its internal rechargeable lithium-ion battery or 3 AA batteries (not included). The lithium-ion battery is typically pre-installed.

1. Locate the battery compartment on the back of the console.
2. If using AA batteries, open the compartment cover and insert 3 AA batteries, ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.



Image 4.1: Rear view of the console showing the battery compartments.

4.2 Charging the Device

To charge the internal lithium-ion battery:

1. Connect the small end of the USB charging cable to the charging port on the console.
2. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light (if present) will illuminate during charging and turn off or change color when fully charged.

4.3 Powering On/Off

Locate the ON/OFF switch on the back of the console. Slide the switch to the "ON" position to power on the device. Slide it to the "OFF" position to power off.

5. OPERATING INSTRUCTIONS

5.1 Controls Overview

Familiarize yourself with the console's controls:

- **Joystick:** Provides directional control for gameplay.
- **A & B Buttons:** Used for actions such as attack, dodge, pick, throw, climb, jump, or hop, depending on the game.
- **START Button:** Initiates or pauses the game.
- **RESET Button:** Resets the current game or returns to the main menu.
- **VOLUME Control:** Adjusts the sound level (typically 4 levels).



Image 5.1: Detailed view of the console's control layout.

5.2 Game Selection

After powering on, the main menu will display game categories or a list of games. Use the joystick to navigate through the options and the A or B button to select a game.

Your browser does not support the video tag.

Video 5.2: Demonstration of game selection and gameplay on the Mini Arcade Machine.

5.3 Connecting to a TV

To play games on a larger screen:

1. Ensure both the Mini Arcade Machine and your TV are powered off.
2. Connect the AV output cable from the console to the corresponding AV input ports (yellow for video, white for audio) on your television.
3. Power on your TV and select the correct AV input source.
4. Power on the Mini Arcade Machine. The game display should now appear on your TV screen.



Image 5.3: The Mini Arcade Machine connected to a TV for an expanded gaming view.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Mini Arcade Machine:

- Keep the device clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners or solvents.
- Store the console in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the device or subjecting it to strong impacts.
- If not using the device for an extended period, remove any AA batteries to prevent leakage.

7. TROUBLESHOOTING

If you encounter any issues with your Mini Arcade Machine, please refer to the following common solutions:

- **No Power:** Ensure the ON/OFF switch is in the "ON" position. Check if the rechargeable battery is charged or if AA batteries are correctly inserted and not depleted.
- **No Sound:** Verify the volume control is not set to minimum.
- **Screen Issues (Blank/Flickering):** Power off and on the device. If connected to a TV, ensure the AV cable is securely connected and the correct input source is selected on the TV.
- **Game Freezes:** Press the RESET button to return to the main menu or restart the console.

If the problem persists after trying these steps, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
---------	---------------

Model Number	RHAC01-Plus
Screen Size	2.8 inches
Screen Type	LCD
Number of Games	156
Power Source	Rechargeable Lithium-ion Battery (700 mAh) or 3x AA Batteries
Battery Life	Up to 3 hours
Product Dimensions	9L x 9W x 16H cm (approximately 3.55L x 3.55W x 6.3H inches)
Product Weight	200 g
Material	Plastic
Recommended Age	3 years and up

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Golden Security website. Keep your proof of purchase for any warranty claims.