

LOEFME U020015201US-1

LOEFME Indoor & Outdoor Electric Grill

MODEL: U020015201US-1

Instruction Manual

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before using this appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors. This appliance is designed for indoor and outdoor use as specified, but ensure it is protected from elements when used outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure proper ventilation when operating to prevent smoke accumulation.

2. PRODUCT OVERVIEW

The LOEFME Electric Grill is designed for versatile indoor and outdoor cooking, featuring a non-stick baking pan and eight individual mini raclette pans. Its split design allows for easy disassembly and cleaning.

Components:

- Double Zone Non-Stick Bakeware (Removable Grill Plate)
- 8 Individual Non-Stick Mini Raclette Pans
- Heating Tube
- Stepless Temperature Controller with Indicator Light
- Hand Dish Layer (Drip Tray)
- Insulation & Storage Layer

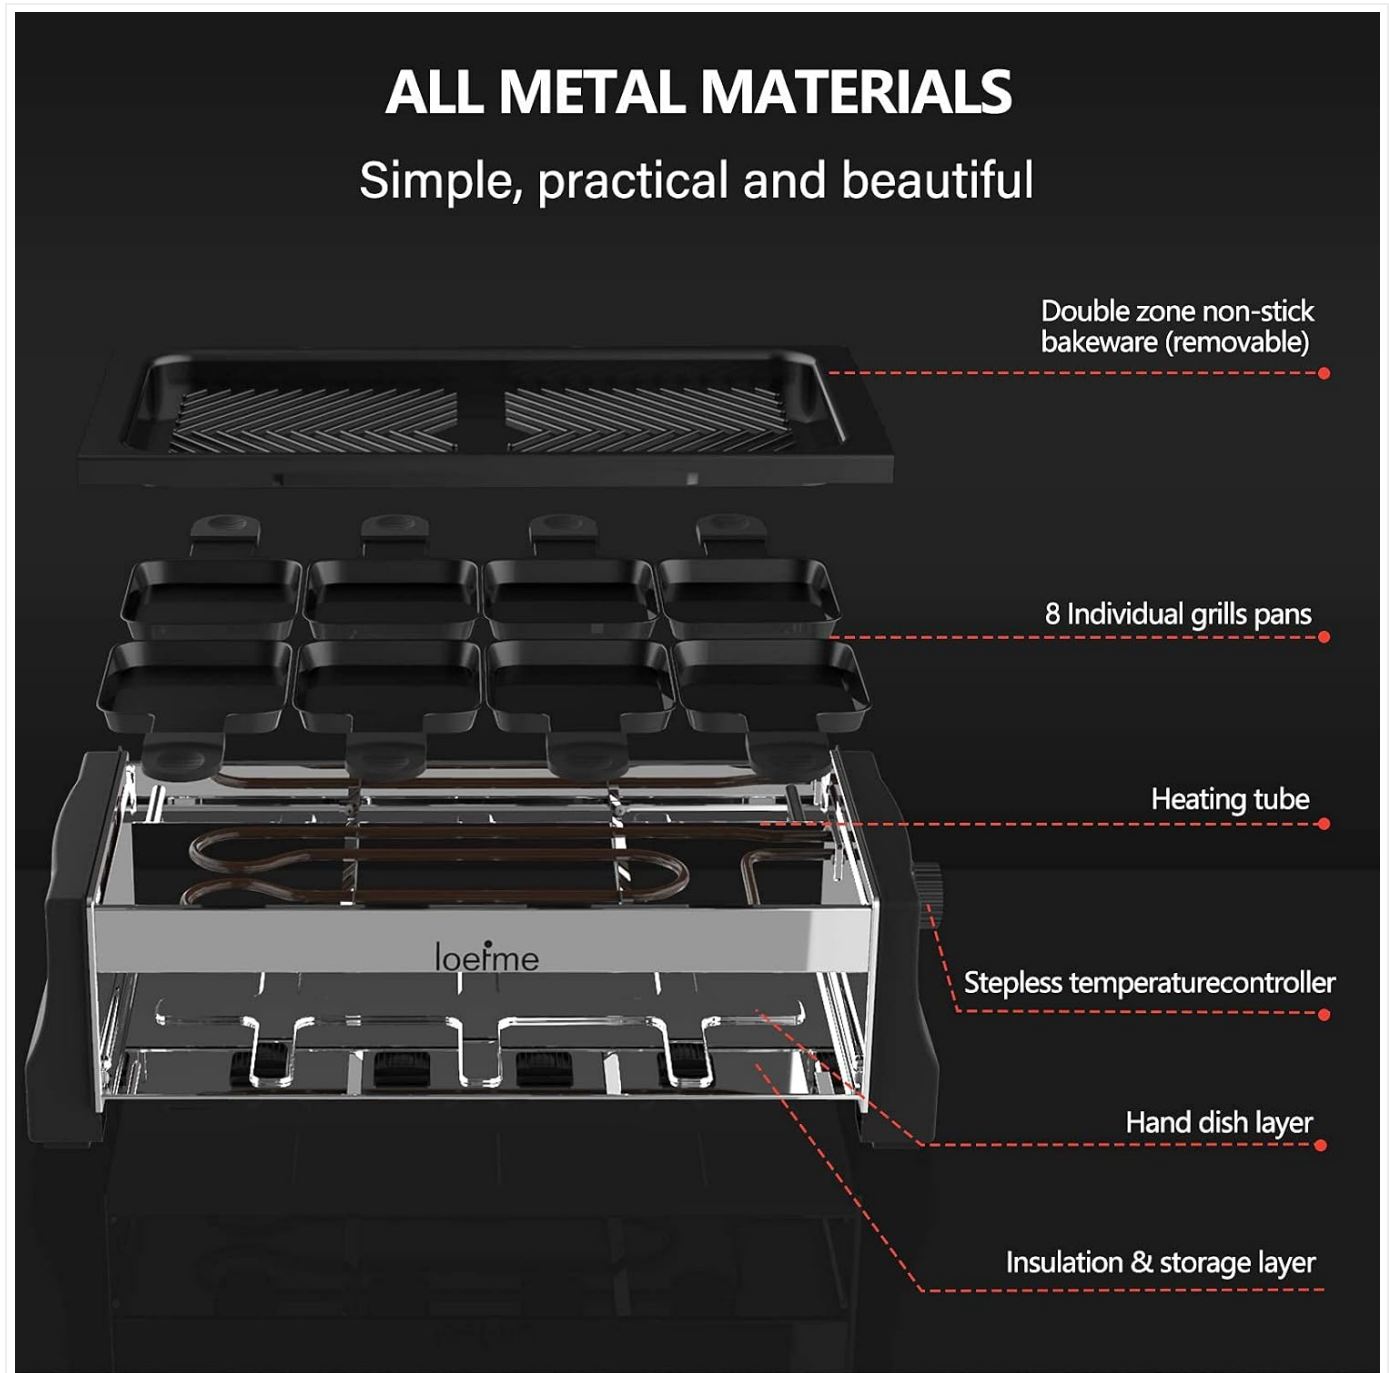


Figure 2.1: Exploded view showing the grill plate, mini pans, heating tube, temperature controller, and base layers.



Figure 2.2: The LOEFME Electric Grill with key dimensions: 19.1 inches (W) x 8.46 inches (H) x 5.11 inches (D).

3. BEFORE FIRST USE

1. **Unpack:** Carefully remove all packaging materials and inspect the grill for any damage. Ensure all components listed in the Product Overview are present.
2. **Clean:** Before initial use, wash the removable grill plate and the 8 mini raclette pans with warm soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the grill on a stable, heat-resistant surface. Ensure there is adequate ventilation around the appliance. Keep it away from walls, curtains, and other flammable materials.
4. **Initial Burn-off:** It is recommended to operate the grill for approximately 10-15 minutes on its highest setting without food during the first use. This helps to burn off any manufacturing residues. A slight odor or smoke may be present during this process; ensure the area is well-ventilated.

4. OPERATING INSTRUCTIONS

4.1 Power Connection and Temperature Control

1. Ensure the temperature control knob is in the 'OFF' position.
2. Plug the power cord into a standard 110V electrical outlet.
3. Turn the temperature control knob clockwise to select your desired heat setting. The indicator light will illuminate, signaling that the grill is heating. The thermostat maintains the set temperature, activating when the grill reaches approximately 500°F (260°C) to ensure consistent cooking.
4. Allow the grill to preheat for 5-10 minutes before placing food on the cooking surfaces.



Figure 4.1: The continuously adjustable thermostat with an indicator light for precise temperature control.

4.2 Using the Main Grill Plate

- Once preheated, place food directly onto the non-stick grill plate. The ribbed surface ensures even heat distribution and facilitates grease drainage, reducing smoke.
- Cook food according to desired doneness.



Figure 4.2: An omelet being cooked on the main grill plate, demonstrating its non-stick capabilities.



Figure 4.3: A steak grilling on the main plate, showcasing the grill's ability to cook various meats.

4.3 Using the Mini Raclette Pans

- The grill includes 8 mini non-stick pans, ideal for preparing individual portions of cheese, vegetables, eggs, or other small items.
- Place desired ingredients into the mini pans and slide them into the designated slots beneath the main grill plate.
- Monitor cooking progress as heat from the heating tube cooks the contents of the pans.



Figure 4.4: Eight mini raclette pans filled with different dishes, ready for cooking under the main grill.



Figure 4.5: The electric grill in operation, showing food cooking on both the main grill plate and in the mini raclette pans simultaneously.

5. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your LOEFME Electric Grill.

1. **Disconnect Power:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Clean Grill Plate and Mini Pans:** The non-stick grill plate and the 8 mini raclette pans are removable and can be washed by hand with warm soapy water or cleaned in a dishwasher. Avoid using abrasive cleaners or metal scouring pads, as these can damage the non-stick coating.
3. **Clean Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit, power cord, or plug in water or any other liquid.
4. **Drip Tray:** Empty and clean the hand dish layer (drip tray) after each use.
5. **Storage:** Ensure all parts are clean and dry before storing. Store the grill in a cool, dry place.

SPLIT DESIGN

Easy to Disassemble and Clean



Figure 5.1: The grill's split design allows for easy disassembly of the grill plate and mini pans for thorough cleaning.

6. TROUBLESHOOTING

If you encounter issues with your grill, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Grill does not heat up.	Not plugged in; power outlet malfunction; temperature knob not turned on.	Ensure the power cord is securely plugged into a working outlet. Turn the temperature control knob to a desired setting.
Food sticks to the grill plate/pans.	Insufficient preheating; damaged non-stick coating; using metal utensils.	Allow adequate preheating time. Ensure the non-stick coating is intact. Use only wooden or heat-resistant plastic utensils.

Problem	Possible Cause	Solution
Excessive smoke during cooking.	Accumulated grease/food residue; high-fat foods; insufficient ventilation.	Clean the grill plate and drip tray thoroughly after each use. Ensure adequate ventilation in the cooking area. Trim excess fat from meats.
Temperature is inconsistent.	Thermostat cycling (normal operation); grill overloaded.	The thermostat cycles to maintain temperature, which is normal. Avoid overloading the grill with too much cold food at once.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	LOEFME
Model Number	U020015201US-1
Material	Aluminum
Color	Black
Product Dimensions	5.11"D x 19.1"W x 8.46"H
Item Weight	5.51 Pounds
Wattage	1100 watts
Voltage	110 Volts
Number of Settings	6 (Adjustable)
Special Features	Non-Stick Coating, Temperature Control
UPC	048518782254

8. WARRANTY AND CUSTOMER SUPPORT

LOEFME is committed to providing quality products and customer satisfaction.

- **Warranty:** This product comes with a 1-year after-sales service. For any issues encountered during this period, please contact our customer support.
- **Returns:** We offer hassle-free returns within 30 days from the date of purchase if you are not satisfied with your product.
- **Customer Support:** For assistance, troubleshooting, or warranty claims, please refer to the contact information provided with your purchase or visit the official LOEFME website.

