

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Pxn](#) /

› [Pxn K30 60% Mechanical Keyboard User Manual](#)

Pxn K30

Pxn K30 60% Mechanical Keyboard User Manual

Model: K30 | Brand: Pxn

1. INTRODUCTION

Thank you for choosing the Pxn K30 60% Mechanical Keyboard. This manual provides detailed instructions for setting up, operating, and maintaining your keyboard. Please read this manual thoroughly before use to ensure proper functionality and to maximize your experience with the product.

2. SAFETY INFORMATION

- Keep the keyboard away from water, moisture, and extreme temperatures.
- Avoid dropping or subjecting the keyboard to strong impacts.
- Do not attempt to disassemble or repair the keyboard yourself. Contact customer support if issues arise.
- Use only the provided charging cable or a certified equivalent.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Please verify that all items are present in your package:

- Pxn K30 60% Mechanical Keyboard
- USB-C to USB-A Cable
- User Manual (this document)

4. PRODUCT OVERVIEW

4.1 Keyboard Layout



The PNX K30 features a compact 60% layout, providing essential keys while saving desk space. It includes standard alphanumeric keys, modifiers, and a function (Fn) key for accessing secondary functions.

4.2 Dimensions



The keyboard measures approximately 292mm in length, 102mm in width, and 40mm in height, making it highly portable and suitable for various setups.

4.3 Mechanical Switches

E-Sports Dedicated Blue Switch

Customized mechanical axis, providing e-sports-level sensitive response and button touch.



The PNX K30 utilizes customized mechanical switches designed for responsive feedback and durability, providing a tactile typing experience.

5. SETUP

5.1 Charging the Keyboard

1. Connect the USB-C end of the provided cable to the keyboard's charging port.
2. Connect the USB-A end to a powered USB port on your computer or a USB wall adapter.
3. The keyboard's indicator light will show charging status. A full charge typically takes a few hours.

5.2 Wired Connection

1. Ensure the keyboard's mode switch (located on the back or side) is set to the 'Wired' or 'PC' position.
2. Connect the USB-C end of the provided cable to the keyboard.
3. Connect the USB-A end to an available USB port on your PC or laptop.
4. The keyboard should be automatically recognized and ready for use.

5.3 Bluetooth Connection



The PNX K30 supports Bluetooth connectivity for mobile devices, PCs, and laptops.

1. Ensure the keyboard is charged.
2. Locate the mode switch on the keyboard and set it to the 'Bluetooth' or 'Android' position, depending on your device. For general PC/Laptop use, select 'Keyboard' or 'PC' if available, otherwise 'Android' might work.
3. On your device (Android phone/tablet, PC, Laptop), navigate to Bluetooth settings.
4. Enable Bluetooth and search for new devices.
5. Select 'PNX K30' from the list of available devices.
6. Follow any on-screen prompts to complete the pairing process.
7. Once paired, the keyboard's indicator light will confirm the connection.

6. OPERATING INSTRUCTIONS

6.1 Mode Switching

The keyboard features a physical switch to toggle between wired and wireless (Bluetooth) modes. Ensure the correct mode is selected for your intended connection type.

6.2 Backlight Control

The PNX K30 features LED backlighting. Use the following Fn key combinations to control the backlight:

- **Fn + \:** Cycle through backlight modes/effects.
- **Fn + [:** Decrease backlight brightness.
- **Fn +] :** Increase backlight brightness.

6.3 Function Key Combinations

Due to the 60% compact layout, many keys have secondary functions accessed by holding the Fn key and pressing the desired key. Refer to the keycaps for specific legends.

Combination	Function
Fn + Esc	ˋ (tilde)
Fn + 1-0	F1-F10
Fn + -_	F11
Fn + ==	F12
Fn + P	Print Screen
Fn + [{	Decrease Backlight Brightness
Fn +] }	Increase Backlight Brightness
Fn + ;:	Home
Fn + " "	End
Fn + ,<	Page Up
Fn + .>	Page Down
Fn + /?	Up Arrow (Note: To type '?' or '/', press Shift + /? directly. For the '?' symbol, some systems may require Fn + Shift + /? or a specific software setting.)
Fn + Right Alt	Right Arrow
Fn + Right Ctrl	Down Arrow
Fn + Right Shift	Left Arrow

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the keyboard surface. For deeper cleaning, use compressed air to remove dust and debris from between keycaps. Avoid liquid cleaners directly on the keyboard.

- **Storage:** Store the keyboard in a cool, dry place when not in use for extended periods.

8. TROUBLESHOOTING

Issue	Possible Solution
Keyboard not connecting via Bluetooth	Ensure the keyboard is charged and the mode switch is set to Bluetooth. Delete previous pairings on your device and re-pair. Try restarting both the keyboard and your device.
Wired mode not recognized by PC	Verify the mode switch is set to 'Wired' or 'PC'. Try a different USB port or cable. Ensure your operating system drivers are up to date.
Keys are sticky or unresponsive	Clean the affected keys with compressed air. If liquid spills occurred, allow the keyboard to dry completely before use. If the issue persists, contact customer support.
Cannot type '?' or '/' easily	On 60% keyboards, these symbols often require the Shift key. For '?', try Shift + ?. If this doesn't work, some systems might require Fn + Shift + ? or a specific keyboard layout setting in your operating system.
Bluetooth connection drops frequently	Ensure the keyboard is fully charged. Reduce distance between keyboard and device. Avoid interference from other wireless devices. The keyboard may enter sleep mode; try turning it off and on again to reconnect.

9. SPECIFICATIONS

Feature	Detail
Model	K30
Connectivity	Bluetooth, Wired (USB-C)
Keyboard Type	60% Mechanical
Backlight	LED Backlit
Compatible Devices	Laptop, PC, Tablet (Android)
Dimensions	13.07 x 5.98 x 2.09 inches (Package)
Item Weight	1.87 pounds
Color	Black

10. WARRANTY AND SUPPORT

PXN products are designed for reliability and performance. For warranty information, please refer to the warranty card included with your purchase or visit the official PXN website. If you encounter any issues or have questions not covered in this manual, please contact PXN customer support for assistance.

Contact Information: Please refer to your product packaging or the official PXN website for the most current

customer support contact details.

© 2023 PXN. All rights reserved.