

Blenpapa XM-801

Blenpapa USB Rechargeable Sonic Electric Toothbrush Model XM-801 User Manual

1. SAFETY INFORMATION

Please read all instructions carefully before using this product. Keep this manual for future reference.

- Keep out of reach of children.
- Avoid contact with skin and eyes. If ingested, seek medical help immediately.
- Do not disassemble the product by yourself.
- If you have an allergic oral cavity, have recently undergone oral or periodontal surgery, are currently undergoing treatment, or have other oral symptoms (e.g., weak dentures, continuous or massive gum bleeding), please consult a dentist before using this electric toothbrush.
- Do not use the product if it appears damaged.

2. PRODUCT OVERVIEW AND PACKAGE CONTENTS

The Blenpapa Sonic Electric Toothbrush is designed for effective oral hygiene. This package includes the following items:

- 1 x Blenpapa Sonic Electric Toothbrush Handle
- Multiple x Dupont Brush Heads
- 1 x USB Charging Cable



Image 2.1: Contents of the Blenpapa Sonic Electric Toothbrush package, including the toothbrush handle, several brush heads, and a USB charging cable.

3. KEY FEATURES

- **Dupont Brush Heads:** Bristles made with Dupont nylon, offering a soft, wear-resistant, and non-absorbent brushing experience. W-wave brush heads are designed to fit teeth contours for effective stain removal.
- **5 Optional Modes:** Customize your brushing with Clean, Polish, Milder, White, and Mascare modes, suitable for various teeth and gum conditions.
- **High Vibration:** Powerful motor delivers 38,000 strokes per minute for efficient cleaning of teeth and gums.
- **2-Minute Intelligent Timer:** Features a short pause every 30 seconds to remind you to move to a different quadrant of your mouth, ensuring the dentist-recommended 2-minute brushing time.
- **Fast Charge & Long Lasting Battery:** A full 2-hour charge provides approximately 30 days of brushing (based on 2 minutes, twice daily).
- **IPX7 Waterproof:** The toothbrush is fully waterproof, allowing for easy rinsing under water after each use.

4. SETUP

4.1 Charging the Toothbrush

Before first use, fully charge the toothbrush. The charging indicator light will flash when charging is needed.

1. Connect the USB charging cable to the charging port at the bottom of the toothbrush.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., mobile power bank, computer USB port, or a 5V~2A adapter).
3. The charging indicator will illuminate. A full charge typically takes 2 hours and provides up to 30 days of use.

USB charge

Charge for **2** hours



Mobile power charging



Computer USB charging



Adapter (5V ~ 2a)



Outdoor vehicle charging

brush teeth **30** days



Image 4.1: The toothbrush being charged via USB, highlighting various compatible charging methods and the 30-day battery life.

4.2 Attaching the Brush Head

Align the brush head with the metal shaft on the toothbrush handle and push it down firmly until it clicks into place. Ensure it is securely attached.

Careteeth

Original DuPont brush head

Does not hurt the gums, more suitable for your teeth



Round brush



W arc design



Double cleaning



Deep into the inner area of the tooth



Clean the gap between teeth



Image 4.2: Illustration of the Dupont brush head design, demonstrating its effectiveness in cleaning deep into tooth areas and between teeth.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the power button once to turn on the toothbrush. Press it again to cycle through the modes. To turn off, press and hold the power button for a few seconds, or cycle through all modes until it turns off automatically.

5.2 Selecting a Brushing Mode

The toothbrush features 5 distinct brushing modes:

- **Clean Mode:** Standard mode for daily cleaning, effectively removing tooth bacteria.
- **Polish Mode:** Designed for quick polishing, typically within 1 minute, to brighten teeth.
- **Milder Mode:** Gentle cleaning for sensitive teeth and gums.
- **White Mode:** Combines whitening and polishing for 2 minutes of whitening and 30 seconds of polishing.
- **Mascare Mode:** Focuses on protecting gum health with a gentle massage action.

Press the power button repeatedly to cycle through these modes until your desired mode is selected.

5 Modes Smart Care Changeable, Professional, Smart

- 1 Clean Mode**
Clean tooth bacteria
- 2 Polish Mode**
Polish tooth quickly
within 1 minute
- 3 Milder Mode**
Use for sensitive tooth
- 4 White Mode**
Whitening tooth 2 minutes
and polish tooth 30 seconds
- 5 Mascare mode**
Protect gum gently



Image 5.1: The toothbrush handle with its five distinct brushing modes clearly labeled, allowing users to select their preferred cleaning experience.

5.3 Brushing Technique

1. Wet the brush head and apply a small amount of toothpaste.
2. Place the brush head against your teeth at a slight angle towards the gum line.
3. Turn on the toothbrush and gently move the brush head slowly across each tooth. Do not scrub aggressively.
4. The 2-minute intelligent timer will pause briefly every 30 seconds, signaling you to move to a new quadrant of your mouth (upper right, upper left, lower right, lower left).

5. The toothbrush will automatically turn off after 2 minutes, indicating the completion of the recommended brushing time.

6. MAINTENANCE

6.1 Cleaning the Toothbrush

After each use:

1. Rinse the brush head thoroughly under running water while the toothbrush is still on to remove any remaining toothpaste or debris.
2. Turn off the toothbrush.
3. Remove the brush head and rinse both the brush head and the top of the handle under running water.
4. Wipe the handle with a soft cloth.
5. Allow all parts to air dry before reassembling or storing.

The toothbrush is IPX7 waterproof, meaning it can withstand immersion in water up to 1 meter for 30 minutes. This allows for safe and easy cleaning.

T E E T H D O C T O R

Waterproof grade: IPX7

You should eat a lot of vegetable and fruit. You shouldn't eat lots of chocolate and sweets. They are not good for you teeth.



Image 6.1: The toothbrush immersed in water, illustrating its IPX7 waterproof capability for easy cleaning and durability.

6.2 Replacing Brush Heads

Dentists recommend replacing brush heads every 3 months, or sooner if the bristles become frayed or worn. To replace:

1. Grip the brush head and pull it straight off the handle.
2. Align a new brush head with the metal shaft and push it down firmly until it clicks into place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toothbrush does not turn on.	Battery is depleted.	Charge the toothbrush for at least 2 hours.
Toothbrush stops during use.	Battery is low or 2-minute timer has completed.	Recharge the toothbrush. If the timer completed, simply restart if further brushing is desired.
Brush head feels loose or falls off.	Brush head not properly attached or worn.	Ensure the brush head is pushed down firmly until it clicks. Replace with a new brush head if worn.
Reduced vibration intensity.	Low battery or debris accumulation.	Charge the toothbrush. Clean the brush head and handle thoroughly.
Charging indicator not working.	Faulty cable or power source.	Try a different USB cable or power adapter. Ensure connections are secure.

8. SPECIFICATIONS

- **Model Number:** XM-801
- **Brand:** Blenpapa
- **Power Source:** Battery Powered (1 Lithium Ion battery included)
- **Vibration Frequency:** 38,000 strokes per minute
- **Brushing Modes:** 5 (Clean, Polish, Milder, White, Mascare)
- **Timer:** 2-minute auto-timer with 30-second quadrant reminders
- **Waterproof Rating:** IPX7
- **Charge Time:** Approximately 2 hours for a full charge
- **Battery Life:** Up to 30 days (based on 2 minutes, twice daily)
- **Bristle Firmness:** Soft
- **Age Range:** Adult
- **Package Dimensions:** 8.98 x 3.23 x 1.65 inches
- **Item Weight:** 4.8 ounces

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the manufacturer, Blenpapa, directly through their official customer service channels. Keep your purchase receipt as proof of purchase.

