

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fakir](#) /

› [Fakir Pocket Clean Steam Cleaner User Manual](#)

Fakir 4955003

Fakir Pocket Clean Steam Cleaner User Manual

Brand: Fakir | **Model:** 4955003

INTRODUCTION

The Fakir Pocket Clean Steam Cleaner is a compact and portable device designed for effective cleaning. It features a minimal design with dimensions of 27.2 x 20 x 26 cm. Delivering 3 bar steam pressure and 950-1100 Watts of power, it provides thorough cleaning performance. The device heats up in just 3 minutes, making it quickly ready for use. With steam reaching 143°C, it ensures deep cleaning. Its 250 mL water tank capacity is suitable for daily cleaning needs.



Figure 1: Fakir Pocket Clean Steam Cleaner.

SAFETY INSTRUCTIONS

- Always read all instructions before using the appliance.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- To reduce the risk of electric shock, do not immerse the appliance in water or other liquids.
- Do not direct steam at people, animals, or electrical appliances.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Keep the appliance out of reach of children.
- Always ensure the water tank cap is securely closed before operating.
- Do not open the water tank cap while the appliance is under pressure.

PACKAGE CONTENTS

Please check the package contents to ensure all items are present and undamaged:

- Fakir Pocket Clean Steam Cleaner - White

- 8-piece accessory set (specific accessories may vary, refer to packaging for details)
- User Manual

SETUP

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Water Filling:**
 - Ensure the appliance is unplugged and cool.
 - Unscrew the water tank cap.
 - Fill the 250 mL water tank with clean tap water. Do not overfill.
 - Securely close the water tank cap.
3. **Accessory Attachment:** Select the appropriate accessory for your cleaning task and securely attach it to the steam gun.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

1. **Heating Up:** Once plugged in, the appliance will begin to heat. The indicator light will illuminate. The device will be ready for use in approximately 3 minutes when the indicator light changes or turns off (refer to specific model indicator behavior).
2. **Steam Release:** Press the steam trigger on the handle to release steam.
3. **Steam Pressure Adjustment:** If your model features a steam pressure regulator, adjust it to the desired level for your cleaning task.
4. **Cleaning:** Direct the steam and attached accessory towards the surface to be cleaned. Move the appliance slowly to allow the steam to penetrate and loosen dirt.
5. **Refilling:** If the water tank runs empty during use, unplug the appliance and allow it to cool down before refilling.
6. **Finishing:** After cleaning, release any remaining steam pressure, unplug the appliance, and allow it to cool completely before storage.

MAINTENANCE

- **Cleaning the Appliance:** Wipe the exterior of the steam cleaner with a damp cloth. Do not use abrasive cleaners.
- **Descaling:** Periodically descale the water tank to prevent mineral buildup. Consult the full manual for detailed descaling instructions.
- **Accessory Care:** Clean accessories after each use. Some accessories may be washable; refer to their specific care instructions.
- **Storage:** Store the appliance and its accessories in a cool, dry place, out of reach of children. Ensure the appliance is completely cool and empty of water before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank empty; appliance not heated sufficiently; steam nozzle blocked.	Refill water tank; wait for indicator light; clean steam nozzle.
Water leaking from accessories.	Accessories not properly attached; appliance not fully heated.	Ensure accessories are securely attached; wait for full heating.
Appliance not turning on.	Not plugged in; power outlet faulty.	Check power connection; try a different outlet.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Brand	Fakir
Model Name	Fakir 4955003
Product Model Number	4955003
Product Dimensions	12 x 32 x 24.5 cm
Product Weight	1.9 Kilogram
Form Factor	Handheld
Wattage	1100 watts
Water Tank Capacity	250 ml
Steam Pressure	3 bar
Heating Time	3 minutes
Cable Length	4 m
Assembly Required	No
Battery Required	No
Country of Origin	Germany
First Available Date	20 January 2021

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Fakir website. Keep your proof of purchase for warranty claims.

Online Support: www.fakir.com.tr/en/support

Contact Information: Refer to your product packaging or the official website for local service centers and contact numbers.

