

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Corbero](#) /

› [Corberó E-CLV6540X Dishwasher Instruction Manual](#)

Corberó E-CLV6540X

Corberó E-CLV6540X Dishwasher Instruction Manual

Model: E-CLV6540X | Brand: Corberó

1. INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation, installation, and maintenance of your Corberó E-CLV6540X dishwasher. Please read this manual thoroughly before using the appliance and keep it for future reference.

2. SAFETY INFORMATION

For your safety and to ensure correct operation, always adhere to the following precautions:

- Ensure the appliance is properly grounded before use.
- Do not allow children to operate or play with the dishwasher.
- Keep detergents and rinse aid out of reach of children.
- Never open the door during operation, especially during the hot wash cycle.
- Only use detergents and rinse aid specifically designed for automatic dishwashers.
- In case of malfunction, disconnect the appliance from the power supply and contact qualified service personnel.
- Do not attempt to repair the appliance yourself.

3. PRODUCT OVERVIEW

The Corberó E-CLV6540X is a freestanding dishwasher designed for efficient dish cleaning. It features a stainless steel finish and a user-friendly control panel.



Figure 3.1: Front view of the Corberó E-CLV6540X dishwasher, showcasing its stainless steel exterior and integrated control panel.

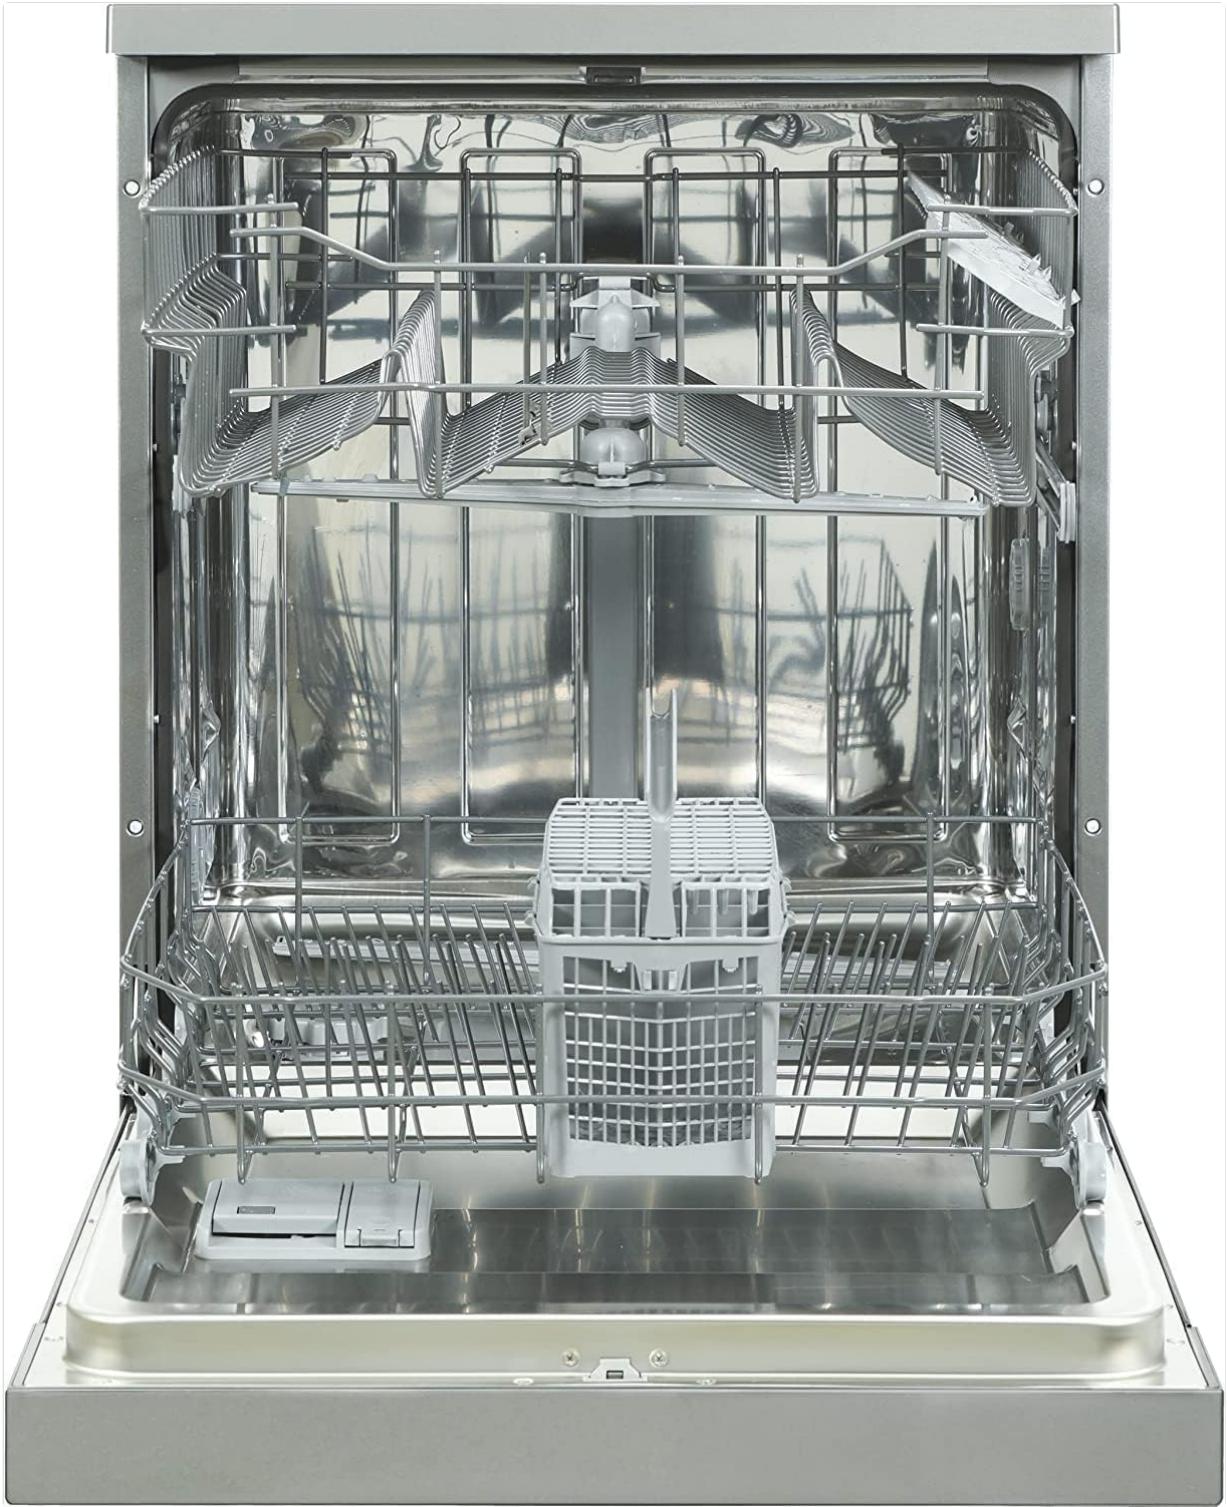


Figure 3.2: Interior view of the dishwasher, showing the upper and lower racks, cutlery basket, and spray arms. The upper basket is height-adjustable.

3.1 Control Panel

The control panel is located on the top edge of the door and includes program selection, function buttons, and LED indicators.



Figure 3.3: Close-up of the control panel, featuring a rotary program selector, start/pause button, and various LED indicators for cycle status, salt, and rinse aid.

- **Program Selector Knob:** Used to select one of the 5 available wash programs.
- **Start/Pause Button:** Initiates or pauses the selected wash program.
- **LED Indicators:** Display information such as program status, salt level, and rinse aid level.

4. SETUP AND INSTALLATION

The Corberó E-CLV6540X is a freestanding dishwasher. Proper installation is crucial for its performance and safety.

4.1 Unpacking

- Carefully remove all packaging materials.
- Inspect the dishwasher for any transport damage. If damaged, do not install and contact your retailer.
- Ensure all accessories (cutlery basket, manual) are present.

4.2 Positioning

Place the dishwasher on a level, stable surface. Ensure there is adequate space for opening the door and for water/drain connections.



Figure 4.1: Dimensions of the dishwasher: approximately 59.8 cm (width) x 59.8 cm (depth) x 85 cm (height).

4.3 Water and Drain Connections

- Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks.
- Connect the drain hose to a suitable drain pipe or sink trap. Ensure the hose is not kinked or obstructed.

4.4 Electrical Connection

- Connect the dishwasher to a properly grounded electrical outlet (220V).
- Do not use extension cords or multiple adapters.

5. OPERATING INSTRUCTIONS

5.1 Before First Use

- Fill the salt dispenser with dishwasher salt (if applicable for your water hardness).

- Fill the rinse aid dispenser.

5.2 Loading the Dishwasher

- Scrape off large food particles from dishes.
- Place larger items in the lower basket and smaller, delicate items in the upper basket.
- Ensure dishes do not block the spray arms.
- The upper basket is height-adjustable to accommodate taller items in the lower basket.

5.3 Adding Detergent

Add the appropriate amount of dishwasher detergent to the dispenser before starting a cycle.

5.4 Program Selection and Start

The dishwasher offers 5 programs with 4 temperature settings:

1. Load the dishwasher and add detergent.
2. Close the dishwasher door.
3. Turn the **Program Selector Knob** to choose your desired program (e.g., Economic, Intensive, Normal, Rapid, Sanitation).
4. Press the **Start/Pause Button** to begin the cycle.
5. LED indicators will illuminate to show the program status.

Available Programs:

- **Economic:** For normally soiled dishes, energy-efficient.
- **Intensive:** For heavily soiled dishes and pots.
- **Normal:** Standard daily wash for average soiled dishes.
- **Rapid:** Quick wash for lightly soiled dishes without drying.
- **Sanitation:** High-temperature wash for enhanced hygiene.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your dishwasher.

6.1 Cleaning the Filters

- Regularly check and clean the coarse, fine, and micro filters located at the bottom of the wash tub.
- Remove any food debris and rinse the filters under running water.

6.2 Cleaning the Spray Arms

- Periodically remove the spray arms and clean the nozzles to prevent blockages.

6.3 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.

6.4 Salt and Rinse Aid Refill

- Refill the salt and rinse aid dispensers when their respective LED indicators illuminate.

7. TROUBLESHOOTING

Before contacting service, consult the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Dishwasher does not start.	Power cord not plugged in; door not closed properly; program not selected.	Check power connection; ensure door is latched; select a program and press start.
Dishes are not clean.	Improper loading; clogged spray arms; insufficient detergent; incorrect program.	Reload dishes correctly; clean spray arm nozzles; add more detergent; select a more intensive program.
White film on dishes.	Insufficient salt or rinse aid; hard water.	Refill salt and rinse aid dispensers; adjust water softener settings if available.
Water not draining.	Clogged drain filter; kinked drain hose.	Clean the drain filter; check and straighten the drain hose.

If the problem persists after attempting these solutions, please contact Corberó customer service.

8. SPECIFICATIONS

Technical data for the Corberó E-CLV6540X dishwasher:

Feature	Value
Model Name	E-CLV6540X
Brand	Corberó
Installation Type	Freestanding
Capacity	12 Place Settings
Number of Programs	5
Number of Temperatures	4
Noise Level	52 dB
Energy Efficiency Class	E
Energy Consumption (per 100 cycles)	92 kWh
Water Consumption (per cycle)	12.0 L
Standard Program Duration	3:25 (h:min)
Dimensions (W x D x H)	59.8 x 59.8 x 85 cm
Product Weight	46 kg
Voltage	220 Volts

Feature	Value
Material	Stainless Steel, Plastic
Control Type	Integrated (Rotary Knob, Push Buttons)
Special Features	Adjustable Upper Basket, LED Indicators
Included Components	Dishwasher



ENERG⁺


**CORBERO****E-CLV6540X**

92 kWh / 100






12 x

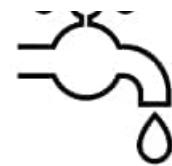

12,0 L

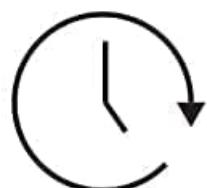

3:25



52 dB


ABC

2019/2017

Figure 8.1: Energy label for the Corberó E-CLV6540X dishwasher, showing its energy class E, 92 kWh/100 cycles, 12 place settings, 12.0 L water consumption, and 52 dB noise level. For more details, refer to the official EU EPREL database via the QR code or link: [EPREL Database Link](#)

Lavavajillas Gama Plus 60cm_E-CLV6540X

Modelo	E-CLV6540X
EAN	8436555985998
Características	
Color	Inox
Capacidad numero de cubiertos	12
Numero de programas	5
Numero de temperaturas	4
Motor	Universal
Display	Indicadores LED
Tipo de Secado	Normal
Eficiencia energética	E
Consumo de energía por 100 ciclos (kWh)	92 kWh
Consumo de agua por ciclo (L)	12L
Duración del programa ECO carga completa (kWh)/h	3:25
Consumo eléctrico en modo apagado/ modo sin apagar W	0,50 / 1 W
Clase de ruido acústico db (A)	52db (A)/D
Tipo de instalación	Libre Instalación
Programas	
Pre Enjuague	/
Rápido	30Min- 40°C
Cristal	/
60 Minutos	50Min- 65°C
Light	/
ECO	205Min-50°C
Intensivo	117Min-65°C
Higiénico	127Min-70°C
90 Minutos	
Controles de funcionamiento	
Inicio-pausa	Si
Configuración Reset	Si
Botón inicio diferido	Si
Botón media carga	Si
3 en 1	No
Indicador sal	Si
Indicador abrillantador	Si
Indicador ciclos de lavado	Si
Ajuste de nivel abrillantador	Si
Bloqueo niños	No
Equipamiento	
Cesta superior regulable en altura	Si
Sopores para tazas	Si
Sopores abatibles cesta inferior	Si
Sopores abatibles cesta superior	No
Cesto extraíble	Si
3ª Bandeja	No
Cesta cubiertos	Si
Dispensador de detergente y abrillantador	Si
Dispensador de sal	Si
Tipo de filtro	Acero inoxidable
Resistencia oculta	Si
Datos técnicos	
Tensión nominal (V.)	220-240
Presión del flujo de agua	0.3-10bar = 0.03-1.0MPa
Potencia de conexión (W)	1900W
Frecuencia de red (Hz)	50Hz
Dimensiones	
Alto x Ancho x Profundidad (producto)	850x598x598
Alto x Ancho x Profundidad (embalaje)	881x644x661
Peso neto (KG)	46 kg
Peso Bruto (KG)	49 kg

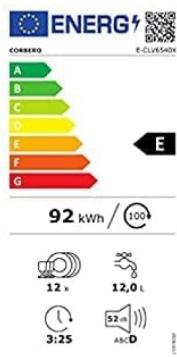

Corberó
www.corbero.es

Figure 8.2: Detailed product information sheet, confirming specifications such as capacity, programs, noise level, and energy consumption.





9. WARRANTY AND SUPPORT

The Corberó E-CLV6540X dishwasher comes with a standard manufacturer's warranty of **24 months** from the date of purchase.

For technical assistance, spare parts, or warranty claims, please contact Corberó customer service or your

retailer. Ensure you have your proof of purchase and the model number (E-CLV6540X) ready. Additional information may be available on the official Corberó website: www.corbero.es

Related Documents - E-CLV6540X

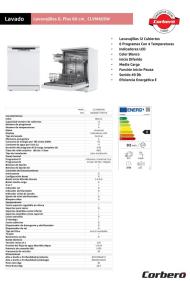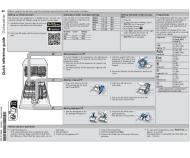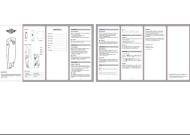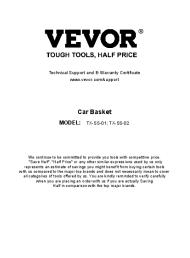 Dishwasher Instruction Manual PART 1: Generic Version CORBERÓ CLVM6021W <small>Please read this manual carefully before using the dishwasher. Keep this manual for future reference.</small>	<p><u>CLVM6021X/CLVM6021W Dishwasher Instruction Manual</u></p> <p>Comprehensive instruction manual for the CLVM6021X and CLVM6021W dishwashers, covering safety information, product overview, usage instructions, maintenance, installation, and troubleshooting.</p>
 Corberó	<p><u>Corberó Lavavajillas G. Plus 60 cm CLVM605W - Especificaciones Técnicas</u></p> <p>Ficha técnica completa del lavavajillas Corberó G. Plus de 60 cm, modelo CLVM605W. Incluye características, programas, consumo energético, dimensiones y más.</p>
 Corberó	<p><u>Catálogo Corberó 2025/26: Electrodomésticos para el Hogar</u></p> <p>Descubra la gama completa de electrodomésticos Corberó para el hogar en el catálogo 2025/26, incluyendo lavadoras, frigoríficos, hornos, placas, campanas, microondas y más.</p>
	<p><u>Dishwasher Quick Reference Guide: Setup, Programs, and Troubleshooting</u></p> <p>Concise guide for setting up your dishwasher, understanding programs, water hardness, adding detergent, rinse aid, and special salt. Includes cleaning instructions and troubleshooting tips.</p>
	<p><u>Oknife Rubato 3 Folding Knife User Manual and Specifications</u></p> <p>User manual and specifications for the Oknife Rubato 3 folding knife, including maintenance tips, warranty information, and product details.</p>
	<p><u>VEVOR Car Basket TX-SS-01 TX-SS-02 User Manual and Warranty</u></p> <p>Comprehensive guide for the VEVOR Car Basket (Models TX-SS-01, TX-SS-02), covering installation, operation safety, parts list, cleaning, and manufacturer details. Find technical support and warranty information.</p>