

Fujifilm X-E4

Fujifilm X-E4 Mirrorless Camera Instruction Manual

Model: X-E4 (Silver Body)

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Fujifilm X-E4 Mirrorless Camera. Please read these instructions thoroughly before using the camera and keep them for future reference. The Fujifilm X-E4 is a compact, interchangeable lens camera designed for both enthusiast and professional photographers, offering advanced imaging capabilities in a portable form factor.

2. PRODUCT OVERVIEW

The Fujifilm X-E4 features a 26.1-megapixel APS-C X-Trans CMOS 4 sensor and X-Processor 4, delivering outstanding image quality and performance. Its rangefinder-style design emphasizes portability and intuitive control. Key features include a 180° forward-tilting LCD touchscreen and a 2.36M-dot electronic viewfinder.

Camera Body Layout

Familiarize yourself with the camera's physical components:

- **Front View:** Lens mount, focus assist lamp.
- **Top View:** Shutter speed dial, exposure compensation dial, ON/OFF switch, hot shoe.
- **Rear View:** Electronic viewfinder (EVF), LCD touchscreen, control buttons (DRIVE/DELETE, PLAY, AEL/AFL, MENU/OK, DISP/BACK), command dial.
- **Bottom View:** Battery/memory card compartment, tripod socket.
- **Side View:** USB-C port, HDMI port, microphone/remote release jack.



Figure 2.1: Front view of the Fujifilm X-E4 Silver Body, showcasing the lens mount and compact design.



Figure 2.2: Top view of the Fujifilm X-E4 Silver Body, highlighting the shutter speed and exposure compensation dials.



Figure 2.3: Rear view of the Fujifilm X-E4 Silver Body, showing the electronic viewfinder and the LCD screen.



Figure 2.4: Bottom view of the Fujifilm X-E4 Silver Body, illustrating the battery and memory card compartment.

3. SETUP

3.1 Inserting the Battery and Memory Card

To power your camera and store images, you need to insert a battery and a compatible SD/SDHC/SDXC memory card (UHS-I recommended).

1. Open the battery/memory card compartment cover located on the bottom of the camera (refer to Figure 2.4).
2. Insert the battery with the contacts facing the correct direction, pushing until it clicks into place.
3. Insert the memory card with the label facing the rear of the camera, pushing until it clicks.
4. Close the compartment cover securely.

3.2 Attaching a Lens

Align the white dot on the lens with the white dot on the camera's lens mount. Rotate the lens clockwise until it clicks into place.

3.3 Initial Settings

Upon first power-on or after a battery change, you may be prompted to set the date, time, and time zone. Follow the on-screen instructions using the command dial and MENU/OK button.

4. OPERATING THE CAMERA

4.1 Power On/Off

Slide the ON/OFF switch located on the top plate of the camera to power it on or off.

4.2 Basic Photography

- **Shutter Speed Dial:** Adjust the shutter speed using the dial on the top plate.
- **Exposure Compensation Dial:** Use the dial next to the shutter speed dial to adjust exposure.
- **Shooting Modes:** The camera supports Program (P), Aperture Priority (A), Shutter Priority (S), and Manual (M) modes. These are typically set via the lens aperture ring and the shutter speed dial.
- **Focusing:** The X-E4 features advanced autofocus with Face and Eye Detection. You can also use the touchscreen to select a focus point.
- **Continuous Shooting:** Capture fast-moving subjects at up to 8 frames per second (FPS) with the mechanical shutter or up to 20 FPS with the electronic shutter.

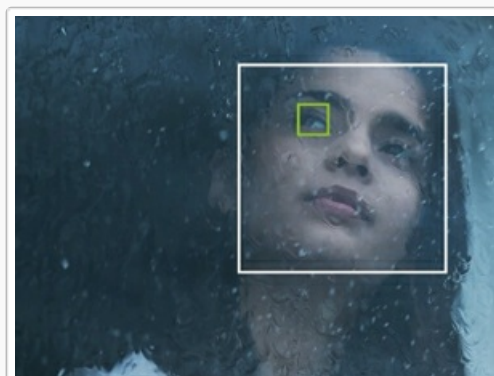


Figure 4.1: Face and Eye Detection Autofocus helps ensure sharp portraits by automatically detecting and focusing on subjects' faces and eyes.

4.3 Image and Video Features

- **Film Simulation Modes:** The X-E4 offers 18 unique Film Simulation modes, allowing you to reproduce the look of classic Fujifilm film stocks directly in-camera.
- **Video Recording:** Record high-quality video up to 4K resolution at 30 frames per second (4K/30p) or Full HD at up to 240 frames per second for impressive slow-motion effects.
- **Tilting LCD Screen:** The 180° forward-tilting LCD touchscreen is ideal for vlogging, selfies, and shooting from challenging angles.



Figure 4.2: The tilting LCD screen provides flexibility for various shooting scenarios, including vlogging and low-angle shots.



Figure 4.3: The 2.36M-dot electronic viewfinder offers a clear and detailed view for precise composition.

4.4 Wireless Connectivity

The X-E4 supports Bluetooth and Wi-Fi connectivity, allowing you to transfer images to your smartphone or tablet and control the camera remotely using the Fujifilm Camera Remote app.

5. MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the camera body. For the lens and sensor, use specialized cleaning tools and follow manufacturer guidelines.
- **Battery Care:** Store batteries in a cool, dry place. Avoid fully discharging batteries for extended periods.
- **Storage:** When not in use, store the camera in a dry, dust-free environment, preferably with a desiccant to prevent moisture buildup.

6. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common solutions:

- **Camera not turning on:** Ensure the battery is fully charged and correctly inserted. Try a different battery if available.
- **Autofocus issues:** Check that the lens is securely attached and the focus mode is set appropriately for your subject. Ensure sufficient light for the autofocus system.
- **Image quality concerns:** Verify camera settings such as ISO, aperture, and shutter speed are suitable for your shooting conditions. Check lens cleanliness.
- **Memory card errors:** Ensure the memory card is compatible and not full. Try formatting the card (this will erase all data).

For more complex issues, consult the Fujifilm support website or contact customer service.

7. SPECIFICATIONS

Feature	Detail
Sensor Type	APS-C X-Trans CMOS 4
Effective Still Resolution	26.1 MP
Processor	X-Processor 4
Compatible Mountings	Fujifilm X

Feature	Detail
Video Resolution	4K (4320p) up to 30p, Full HD up to 240p
Screen Size	3 Inches
Display Type	Tilting LCD Touchscreen
Viewfinder	Electronic (2.36M-dot)
Continuous Shooting	8 FPS (mechanical), 20 FPS (electronic)
Connectivity Technology	Bluetooth, Wi-Fi, Micro-HDMI, USB Type C
Item Weight	0.69 Pounds (approx. 313g)

8. WARRANTY AND SUPPORT

The Fujifilm X-E4 comes with a 1-year manufacturer's warranty. For detailed warranty information, product registration, software updates, and additional support resources, please visit the official Fujifilm website. Online resources often include FAQs, downloadable manuals, and contact information for technical assistance.

9. PRODUCT VIDEOS

Fujifilm X-E4 Overview

This video provides a general overview of the Fujifilm X-E4 camera, highlighting its design, key features, and intended use for photographers and videographers. It covers aspects such as its compact size, sensor capabilities, and user interface.

FUJIFILM X-E4 Mirrorless Camera Body

This video focuses specifically on the Fujifilm X-E4 camera body, demonstrating its physical attributes, controls, and how various components function. It offers a closer look at the camera's build quality and ergonomic design.

