

PROFI CARE PC-BS 3085

Profi-Care PC-BS 3085 Cordless Vacuum Cleaner User Manual

Model: PC-BS 3085

INTRODUCTION

Thank you for choosing the Profi-Care PC-BS 3085 Cordless Handheld and Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions thoroughly before first use and keep them for future reference.

SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for household use only.

- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow children to operate the appliance. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filter in place.
- Turn off the appliance before connecting or disconnecting the motorized brush, attachments, or charging.
- Use only the charger supplied by the manufacturer to recharge the appliance.
- Store the appliance indoors in a dry place.

PRODUCT OVERVIEW AND PACKAGE CONTENTS

The Profi-Care PC-BS 3085 is a versatile 2-in-1 cordless vacuum cleaner, functioning as both a stick vacuum and a handheld unit. It features a powerful lithium-ion battery for flexible cleaning.



Image 1: The Profi-Care PC-BS 3085 in its full stick vacuum configuration, ready for floor cleaning. It features a gray and blue design with a transparent dustbin.



Image 2: An overview of the Profi-Care PC-BS 3085 components and key features. It highlights the 2-in-1 functionality (handheld and stick), Turbo Rotation for extra suction with the electric rotating floor brush, flexible/extendable suction hose, LED lighting for dark areas, and an extra-long crevice nozzle.

Package Contents:

- Main unit (handheld vacuum)
- Extension tube
- Electric rotating floor brush with LED lighting
- 2-in-1 upholstery/brush nozzle
- Extra-long crevice nozzle
- Flexible/extendable suction hose (approx. 40-150 cm)
- Wall mount with integrated charging function
- Power adapter
- Instruction manual



Image 3: Close-up of the 2-in-1 upholstery/brush nozzle and the extra-long crevice nozzle, essential accessories for detailed cleaning.



Image 4: The flexible and extendable suction hose, designed for reaching difficult areas and enhancing versatility.

SETUP

Assembly:

1. **Attach the Extension Tube:** Align the extension tube with the main handheld unit and push until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the electric rotating floor brush to the other end of the extension tube, ensuring it locks firmly.
3. **Install Wall Mount:** Choose a suitable location for the wall mount. Ensure it is near a power outlet. Secure the wall mount to the wall using appropriate screws and anchors (not included).

Charging the Battery:

Before first use, fully charge the vacuum cleaner for approximately 4-5 hours. The appliance uses a 25.9 V (2200 mAh) lithium-ion battery.

1. Connect the power adapter to the wall mount's charging port.
2. Place the assembled vacuum cleaner onto the wall mount. Ensure the charging contacts align.
3. The 4-stage LED charging indicator on the main unit will illuminate to show the charging status. All LEDs will be lit when fully charged.



Image 5: The charging base and power adapter, used to recharge the vacuum cleaner's battery.



Image 6: This image illustrates the practical wall mount with integrated charging function, the integrated ECO mode for extended battery life, and the 4-stage LED charging status indicator.

OPERATING INSTRUCTIONS

Powering On/Off and Suction Control:

1. Press the power button once to turn on the vacuum cleaner. It will start in standard suction mode.
2. Press the power button a second time to switch to the higher power mode.
3. Press the power button a third time to turn off the vacuum cleaner.
4. **ECO Mode:** For longer battery life, activate the ECO mode. Refer to the specific button on your unit for this function (as shown in Image 6).

Using as a Stick Vacuum:

With the extension tube and electric rotating floor brush attached, the PC-BS 3085 is ideal for cleaning floors.

- The electric rotating floor brush provides deep cleaning for various floor types.
- The integrated LED lighting on the floor brush illuminates darker areas, making dust and debris more

visible.

- The double 180° swivel joint allows for optimal maneuverability around furniture and obstacles.

Using as a Handheld Vacuum:

Detach the extension tube and floor brush to use the main unit as a handheld vacuum for versatile cleaning.



Image 7: The Profi-Care PC-BS 3085 configured as a handheld vacuum, shown with the crevice tool attached, ideal for tight spaces.

- **Attachments:** Use the 2-in-1 upholstery/brush nozzle for furniture, upholstery, and curtains. The extra-long crevice nozzle is perfect for narrow gaps and corners.
- **Flexible Suction Hose:** Attach the flexible hose to the handheld unit for extended reach and cleaning awkward spaces, such as car interiors.



Image 8: A user cleaning a car interior with the Profi-Care PC-BS 3085 handheld vacuum and the flexible suction hose, demonstrating its versatility for automotive cleaning.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dustbin:

The PC-BS 3085 features bagless stainless steel filter technology. Empty the dustbin regularly, especially when it reaches the MAX fill line.

1. Ensure the vacuum cleaner is turned off.
2. Press the dustbin release button (usually located near the dustbin) to detach it from the main unit.
3. Hold the dustbin over a trash can and press the bottom release button to open the flap and empty the contents.
4. Close the flap and reattach the dustbin to the main unit, ensuring it clicks securely.

Cleaning the Filter:

The stainless steel filter should be cleaned periodically to maintain suction power.

1. With the dustbin detached, carefully remove the filter assembly.
2. Tap the filter gently over a trash can to remove loose dust.
3. If necessary, rinse the filter under cold running water. Ensure it is completely dry before reassembling. **Do not use detergents or hot water.**
4. Reinsert the dry filter into the dustbin and reattach the dustbin to the main unit.

Cleaning the Floor Brush:

Hair and debris can get tangled in the rotating brush. Clean it regularly.

1. Turn off the vacuum cleaner and detach the floor brush from the extension tube.
2. Use scissors or a brush to carefully remove any tangled hair or fibers from the brush roll.
3. Wipe the brush housing with a damp cloth if needed.

Battery Care:

- Avoid completely draining the battery before recharging.
- Store the vacuum cleaner in a cool, dry place when not in use.
- If storing for an extended period, charge the battery to about 50% and recharge every few months to prevent deep discharge.

TROUBLESHOOTING

If you encounter issues with your Profi-Care PC-BS 3085, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is discharged.	Charge the battery fully.
Low suction power.	Dustbin is full. Filter is clogged. Obstruction in nozzle/hose.	Empty dustbin. Clean filter. Check for and remove obstructions.
Floor brush not rotating.	Hair/debris tangled in brush. Obstruction in brush mechanism.	Clean brush roll. Remove any obstructions.
Battery not charging.	Charger not properly connected. Faulty charger/battery.	Ensure charger is securely connected. Contact customer support if issue persists.
Unusual noise during operation.	Obstruction in air path or brush. Loose part.	Check for and remove obstructions. Ensure all parts are securely assembled.

If the problem persists after attempting these solutions, please contact Profi-Care customer support.

SPECIFICATIONS





400 mm

120 mm

10 mm

240 mm

Image 9: Detailed dimensions of the Profi-Care PC-BS 3085 main unit, showing measurements of 400mm in height, 120mm in depth, and 240mm in width.

Feature	Specification
Model Number	PC-BS 3085 (330850)
Brand	PROFI CARE
Power Source	Battery (Cordless)
Battery Type	Lithium-ion
Battery Voltage	25.9 V (2200 mAh)
Wattage	264000 (Note: This value seems unusually high for a cordless vacuum and might refer to a different unit or calculation. Please refer to product packaging for precise power consumption.)
Filter Type	Cartridge (Stainless Steel)
Dust Collection	Bagless
Power Levels	2 (plus ECO mode)
Control Method	Touch
Product Dimensions	3.94 x 3.94 x 3.94 inches (main unit, as per provided data)
Item Weight	7.66 pounds
Color	Gray
Recommended Uses	Floors, Pet Hair

WARRANTY AND SUPPORT

PROFI CARE products are manufactured with care and undergo strict quality controls. This product is covered by a manufacturer's warranty in accordance with local regulations. Please retain your proof of purchase for any warranty claims.

For technical support, spare parts, or warranty inquiries, please contact your retailer or the official PROFI CARE customer service. Contact details can typically be found on the product packaging or the official PROFI CARE website.

Please note that the warranty may not cover damage caused by improper use, neglect, unauthorized repairs, or normal wear and tear.

