

manuals.plus /

› [PUSOKEI](#) /

› [PUSOKEI PC USB Receiver for Xbox 360 Wireless Controllers - Instruction Manual](#)

PUSOKEI PC Receiver for Xbox 360

PUSOKEI PC USB Receiver for Xbox 360 Wireless Controllers - Instruction Manual

INTRODUCTION AND OVERVIEW

This manual provides comprehensive instructions for the PUSOKEI PC USB Receiver, a device designed to enable the use of Xbox 360 wireless controllers with your computer. This receiver facilitates a seamless gaming experience by integrating your existing Xbox 360 wireless peripherals with your PC.

The PUSOKEI PC USB Receiver supports simultaneous connection of up to four Xbox 360 wireless controllers and four wireless headsets, allowing for multi-player gaming and communication. Constructed from durable ABS material, it features a standard USB interface for easy connectivity.



Image: The PUSOKEI PC USB Receiver, a compact black device with an attached USB cable, designed for connecting Xbox 360 wireless controllers to a computer.

PACKAGE CONTENTS

Please verify that all items are present in the package:

- 1 x PUSOKEI PC USB Receiver
- 1 x PC Driver CD

SETUP INSTRUCTIONS

1. **Connect the USB Receiver:**

Plug the USB connector of the PUSOKEI PC USB Receiver into an available USB port on your computer. Ensure the connection is secure.



Image: The PUSOKEI PC USB Receiver with its USB connector clearly visible, illustrating how it connects to a computer.

2. **Install Drivers:**

Insert the provided PC Driver CD into your computer's CD-ROM drive. Follow the on-screen prompts to install the necessary drivers. If your computer does not have a CD-ROM drive, or if the provided CD does not function, you may need to download the drivers from the manufacturer's support website or search online for 'Xbox 360 Wireless Receiver for Windows drivers'.

Including CD-ROM driver

High quality ABS material
long lasting
Small and light weight
Easy to carry around



Image: The PUSOKEI PC USB Receiver, with text emphasizing that a CD-ROM driver is included for installation.

OPERATING INSTRUCTIONS

1. Power On the Receiver:

Once the receiver is connected and its drivers are successfully installed, it should power on automatically. A small indicator light on the receiver will typically illuminate to confirm it is active.

2. Connect Xbox 360 Wireless Controllers:

Press the small connect button located on the PUSOKEI PC USB Receiver. Then, press the connect button on your Xbox 360 wireless controller. The lights around the Xbox Guide button on the controller will flash during the pairing process and then become solid on one quadrant once a successful connection is established. This process can be repeated for up to four controllers.

3. Connect Xbox 360 Wireless Headsets:

For Xbox 360 wireless headsets, follow similar pairing steps as with the controllers to establish a connection with the receiver.

4. Gaming:

Launch your desired PC game. Most games that support Xbox 360 controllers will automatically recognize the connected controllers, allowing you to begin playing.

Easily integrate with PC game scenes

Use up to four wireless controllers and four wireless headsets at the same time.



Image: The PUSOKEI PC USB Receiver, shown with text highlighting its capability to easily integrate with PC game scenes and support multiple wireless devices.

MAINTENANCE

To ensure the longevity and optimal performance of your PUSOKEI PC USB Receiver, please follow these maintenance guidelines:

- Keep the receiver clean by gently wiping it with a dry, soft cloth. Avoid using liquid cleaners.
- Protect the device from exposure to extreme temperatures, direct sunlight, and moisture.
- When not in use, store the receiver in a safe place to prevent physical damage to the cable or USB connector.

TROUBLESHOOTING

If you encounter issues with your PUSOKEI PC USB Receiver, refer to the following troubleshooting steps:

- **Controller Not Connecting:**
 - Ensure the receiver is firmly plugged into a functional USB port on your computer.
 - Verify that the necessary drivers are correctly installed. If unsure, try reinstalling them.
 - Confirm that your Xbox 360 wireless controller has charged batteries.
 - Make sure both the receiver and the controller are in their respective pairing modes when attempting to connect.

- **Drivers Not Installing from CD:**

- If your computer lacks a CD-ROM drive, or if the provided CD is unreadable, search online for "Xbox 360 Wireless Receiver for Windows drivers". It is recommended to download official drivers from Microsoft's support website or the PUSOKEI manufacturer's official page.

- **Intermittent Connection or Disconnections:**

- Try plugging the receiver into a different USB port on your computer.
- Ensure there are no strong wireless interference sources (e.g., Wi-Fi routers, other wireless devices) positioned too close to the receiver or controller.

SPECIFICATIONS

Item Type	PC Receiver
Material	ABS
Color	Black
Vibration Mode	No Vibration (This receiver does not support vibration feedback.)
Interface	USB
Cable Length	Approximately 1.6 meters (5.2 feet)
Applicable Model	For Xbox 360 wireless controllers
Product Dimensions (L x W x H)	0.39 x 0.39 x 0.39 inches
Item Weight	3.53 ounces

WARRANTY AND SUPPORT

For detailed information regarding product warranty, technical support, or customer service, please refer to the original product packaging or visit the official PUSOKEI website. Contact information and support resources are typically available on the manufacturer's official channels.