

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ROBUD](#) /

› [ROBUD Wooden Play Kitchen Set User Manual](#)

ROBUD ROBUD WG187

ROBUD Wooden Play Kitchen Set User Manual

Model: ROBUD WG187

INTRODUCTION

Thank you for choosing the ROBUD Wooden Play Kitchen Set. This manual provides essential information for the safe assembly, operation, and maintenance of your new play kitchen. Designed for imaginative play, this set offers a realistic and engaging experience for children.

- **Endless Fun:** Equipped with a microwave, kitchen ventilator, oven, and realistic cookware for engaging pretend play.
- **Ultra-Realistic Design:** Features a stovetop with simulated light and sounds for frying and boiling, and a range hood with sound and light control.
- **Safety & Nature:** Constructed from solid wood for durability, with a smooth, burr-free surface for safety and easy cleaning.
- **Imaginary Fun:** Encourages role-playing, imagination, hands-on ability, and social skill development.

SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use.

- **CHOKING HAZARD -- Small parts. Not for children under 3 years.**
- Adult supervision is recommended during play.
- Ensure all parts are securely fastened during assembly to prevent hazards.
- Keep batteries out of reach of small children.

WHAT'S IN THE BOX

Carefully unpack the contents and verify all items are present:

- Toy Body (various wooden components)
- Installation Instruction Manual (PDF)
- Assorted Play Cookware and Utensils

COMPLETE TOY KITCHEN WITH ACCESSORIES



Image: Included play kitchen accessories, featuring a metal pot with lid, a metal frying pan, and two wooden spatulas.

SETUP AND ASSEMBLY

Assembly of the ROBUD Wooden Play Kitchen Set is required. Please follow the detailed instructions provided in the dedicated Installation Manual.

- Locate the included **Installation Instruction Manual (PDF)** for step-by-step guidance.
- Ensure all components are accounted for before beginning assembly.
- Use appropriate tools as specified in the manual.
- Tighten all screws and fasteners securely, but do not overtighten.
- For stability, the product includes a wall mount on the back to prevent tipping. It is recommended to utilize this feature.

A digital copy of the installation manual can be found [here](#).



Image: The ROBUD Wooden Play Kitchen Set fully assembled, showcasing its various features.

OPERATING INSTRUCTIONS

The ROBUD Wooden Play Kitchen Set includes interactive features to enhance the play experience.

Stovetop Lights and Sounds

- The pretend stovetop is designed with light and sound effects to simulate frying and boiling.
- To activate, ensure 4 "AAA" batteries (not included) are correctly installed in the designated battery compartment.
- Turn the stovetop knobs to activate the realistic cooking sounds and lights.

Range Hood Features

- The range hood includes real sound and light effects.
- These features are controlled by buttons located on the range hood panel.
- Ensure batteries are installed for full functionality.



01 Durable Construction



02 Round and Smooth



03 Easy Hang Cooking Utensil



04 Loads of Storage Space

Image: Detailed views highlighting durable construction, smooth surfaces, utensil hanging hooks, and internal storage of the play kitchen.

MAINTENANCE

Proper care will ensure the longevity of your ROBUD Wooden Play Kitchen Set.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the wood finish.
- **Dusting:** Regularly dust the play kitchen to keep it clean.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Storage:** Store the play kitchen in a dry environment, away from direct sunlight or extreme temperatures, to prevent warping or damage to the wood.

TROUBLESHOOTING

If you encounter any issues with your play kitchen, refer to the following common solutions:

- **Lights/Sounds Not Working:**

- Check if 4 "AAA" batteries are installed.
 - Ensure batteries are inserted with correct polarity (+/-).
 - Replace old batteries with new ones.
- **Loose Parts:** If any parts feel loose, refer to the assembly manual and tighten the corresponding screws.
 - **Stability Issues:** Ensure the play kitchen is placed on a flat, stable surface. Utilize the anti-tipping wall mount feature for added stability.

SPECIFICATIONS

Feature	Detail
Product Dimensions	11.6 x 27.6 x 40.6 inches
Weight	25.4 Pounds
Manufacturer Recommended Age	3 years and up
Item Model Number	ROBUD WG187
Material	Solid Wood (MDF)
Batteries Required	4 "AAA" batteries (not included)

SPECIFICATION

Kids Kitchen Playset

Product Name

MDF

Material

25.4 pounds

Weight

27.6in*11.6in*40.6in

Product Size



Image: Product specification diagram illustrating the dimensions of the play kitchen.

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your ROBUD Wooden Play Kitchen Set, please contact ROBUD customer service. Refer to your purchase documentation for specific warranty details and contact information. It is recommended to retain your proof of purchase for warranty purposes.