

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [ROBUD](#) /

> [ROBUD Kids Kitchen Playset Wooden Toddler Pretend Wood Toy Kitchen Instruction Manual](#)

## ROBUD XR-RB-WG194

# ROBUD Kids Kitchen Playset Instruction Manual

Model: XR-RB-WG194

## INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your ROBUD Kids Kitchen Playset. Please read these instructions thoroughly before assembly and retain for future reference.

## SAFETY INFORMATION

- **Adult Assembly Required:** This product contains small parts and requires adult assembly.
- **Choking Hazard:** Keep small parts away from children under 3 years old during assembly.
- **Supervision:** Always supervise children during play to ensure safe use.
- **Stability:** Ensure the playset is placed on a flat, stable surface to prevent tipping.
- **Maintenance:** Regularly check all screws and connections to ensure they are tight. Loose screws can lead to instability.

## PACKAGE CONTENTS

Verify all components are present before beginning assembly. Refer to the included parts list in your physical instruction booklet.



Image: Included accessories such as wooden vegetables, pots, pans, and various kitchen utensils. These items are designed for interactive play.

## SETUP AND ASSEMBLY

Assembly typically takes approximately 35-40 minutes. Follow the step-by-step instructions provided in the physical manual. Avoid overtightening screws to prevent wood splitting.

# Specification

## Material

Wood

## Size

20.86x11.61x29.13inches

## Recommended Age

3+

## Item Weight

24.69 pounds



Image: A visual representation of the assembly steps, detailing how different components of the kitchen playset fit together. This diagram is part of the comprehensive assembly instructions.

Video: This video demonstrates the assembly process and highlights key features of the ROBUD Kids Kitchen Playset, including the interactive sink, stove, and oven. It also shows how accessories are used.

## OPERATING INSTRUCTIONS

The ROBUD Kids Kitchen Playset is designed for imaginative play. Here's how to interact with its features:

- **Stove Knobs:** Turn the red knobs to simulate cooking. They provide tactile feedback for realistic play.
- **Sink and Faucet:** The wooden faucet and sink area allow for pretend washing of play food and dishes.
- **Oven:** Open the oven door to place play food inside. The oven features a clear window and an internal shelf.
- **Storage:** Utilize the hanging hooks for utensils and the internal shelves for storing play food and accessories.

# Realistic Kitchen Cooking Toy



- Cutting Play Food Included



- Loads of Storage Space



- Hanging Storage Hooks



- Simulate a Real Oven

Image: Detailed view of the playset's interactive elements, including cutting play food, hanging storage hooks for utensils, and the simulated oven control panel.

Video: This short video demonstrates the internal storage capacity of the ROBUD Kids Kitchen Playset, showing how kitchen accessories can be neatly stored inside the cabinets and oven compartment.

## MAINTENANCE AND CARE

- **Cleaning:** Wipe surfaces with a damp cloth and mild soap. Avoid abrasive cleaners or harsh chemicals.
- **Storage:** Store the playset in a dry environment away from direct sunlight and extreme temperatures to prevent warping or fading.
- **Inspections:** Periodically check all wooden components for signs of wear or damage. Ensure all screws remain tight.

## TROUBLESHOOTING

Issue	Possible Cause	Solution
Playset feels wobbly or unstable.	Loose screws or uneven surface.	Tighten all assembly screws. Ensure the playset is on a flat, level floor.
Missing parts during assembly.	Packaging error.	Contact ROBUD customer support with your purchase details and the specific missing parts.
Wood appears split or damaged.	Overtightening during assembly or impact.	Discontinue use if structural integrity is compromised. Contact customer support for replacement parts or guidance.

## SPECIFICATIONS

Feature	Detail
Model Number	XR-RB-WG194
Product Dimensions	21 x 12 x 29 inches (Length x Width x Height)
Item Weight	20.8 pounds
Material	Wood
Recommended Age	3+ years
Brand	ROBUD

# Exercise Hands-on Skills and Stimulate Imagination



Image: Visual representation of the playset's dimensions, indicating its width, depth, and height for placement reference.

## WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase or visit the official ROBUD website. Keep your proof of purchase for any warranty claims.

