

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ariete](#) /

› [Ariete Vintage 1380 Watt 18 Liter Electric Countertop Toaster Oven Instruction Manual](#)

Ariete c3014369-6a67-437a-8e1e-ef0c045edf68

Ariete Vintage 1380 Watt 18 Liter Electric Countertop Toaster Oven Instruction Manual

Model: c3014369-6a67-437a-8e1e-ef0c045edf68

[Important Safeguards](#) [Product Overview](#) [Setup](#) [Operating Instructions](#) [Care & Cleaning](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.

15. A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
16. Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
17. Do not place any of the following materials in the oven: paper, cardboard, plastic, or similar materials.
18. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
19. Exercise extreme caution when removing tray or disposing of hot grease.

2. PRODUCT OVERVIEW

Parts and Controls

Familiarize yourself with the components of your Ariete Vintage Toaster Oven:

- **Temperature Control Knob:** Used to select the desired cooking temperature.
- **Function Selector Knob:** Used to choose the cooking mode (e.g., Bake, Broil, Toast).
- **Timer Knob:** Sets the cooking time and activates the oven.
- **Power Indicator Light:** Illuminates when the oven is operating.
- **Oven Door:** Glass door for viewing cooking progress.
- **Door Handle:** For opening and closing the oven door.
- **Wire Rack:** For baking, roasting, and toasting.
- **Baking Pan:** For baking and collecting drippings.
- **Crumb Tray:** Collects crumbs and can be removed for cleaning.
- **Tray Handle:** Tool for safely removing hot racks and pans.



Image: Control panel with temperature, function, and timer knobs.



Image: Included accessories: baking pan, wire rack, and tray handle.

3. SETUP

Unpacking and Initial Placement

1. Carefully remove the toaster oven and all accessories from the packaging.
2. Remove any packing materials, stickers, or protective films from the appliance.
3. Wipe down the exterior of the oven with a damp cloth. Wash the wire rack, baking pan, and tray handle in warm, soapy water. Rinse and dry thoroughly.
4. Place the toaster oven on a stable, level, heat-resistant surface. Ensure there is at least 4 inches (10 cm) of clearance on all sides and above the oven for proper ventilation.
5. Do not place the oven directly against a wall or under cabinets.

First Use (Burn-Off)

Before cooking food in your new toaster oven, it is recommended to perform a burn-off cycle to eliminate any manufacturing odors or residues.

1. Insert the wire rack and baking pan into the oven.
2. Plug the power cord into a standard electrical outlet.
3. Turn the Temperature Control Knob to the maximum setting (440°F / 230°C).
4. Turn the Function Selector Knob to the "Bake" setting.
5. Turn the Timer Knob to 15 minutes. The power indicator light will illuminate.
6. Allow the oven to operate for 15 minutes. Some smoke or odor may be present; this is normal. Ensure the area is well-ventilated.
7. After 15 minutes, the timer will chime, and the oven will turn off. Unplug the oven and allow it to cool completely before use.

4. OPERATING INSTRUCTIONS

General Operation

1. Place the wire rack or baking pan in the desired position within the oven.
2. Place food on the wire rack or in the baking pan.
3. Close the oven door securely.
4. Turn the Temperature Control Knob to the desired temperature.
5. Turn the Function Selector Knob to the desired cooking mode (Bake, Broil, Toast).
6. Turn the Timer Knob to the desired cooking time. The power indicator light will turn on.
7. When the set time expires, the timer will chime, and the oven will automatically turn off.
8. To stop cooking before the timer expires, turn the Timer Knob to the "OFF" position.
9. Always use oven mitts when removing food or accessories from the hot oven.

Toasting

1. Place items to be toasted directly on the wire rack.
2. Turn the Function Selector Knob to the "Toast" setting.
3. Turn the Temperature Control Knob to the desired toast shade (usually indicated by a toast icon or a medium-high setting).
4. Turn the Timer Knob to the desired toasting time.

Baking

1. Place food in the baking pan or on an oven-safe dish placed on the wire rack.
2. Turn the Function Selector Knob to the "Bake" setting.
3. Turn the Temperature Control Knob to the desired baking temperature.
4. Turn the Timer Knob to the desired baking time.

Broiling

1. Place food on the baking pan. For best results, position the rack closer to the top heating elements.
2. Turn the Function Selector Knob to the "Broil" setting.
3. Turn the Temperature Control Knob to the maximum setting (440°F / 230°C).
4. Turn the Timer Knob to the desired broiling time. Monitor food closely as broiling can be very fast.

5. CARE AND CLEANING

Regular cleaning will help maintain the performance and appearance of your toaster oven.

1. Always unplug the oven from the electrical outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** Slide out the crumb tray from the bottom of the oven. Discard crumbs. Wipe the tray with a damp cloth and dry thoroughly. Reinsert the crumb tray.
3. **Wire Rack and Baking Pan:** Wash in warm, soapy water. For stubborn food residue, soak in warm water before scrubbing. Rinse and dry thoroughly. These are not dishwasher safe.
4. **Interior:** Wipe the interior walls with a damp cloth and mild liquid soap. Do not use abrasive cleaners or scouring pads, as they can damage the non-stick coating.
5. **Exterior:** Wipe the exterior surfaces with a damp cloth and dry thoroughly. Do not use abrasive cleaners or polishes.
6. Never immerse the main body of the oven, cord, or plug in water or any other liquid.

6. TROUBLESHOOTING

Review the following common issues and solutions before contacting customer service.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in. Timer not set.	Ensure the power cord is securely plugged into a working outlet. Turn the Timer Knob to the desired cooking time to activate the oven.
Food is not cooking evenly.	Incorrect rack position. Overcrowding.	Adjust the rack position for optimal heat distribution. Avoid overcrowding the oven; cook in smaller batches if necessary. Rotate food halfway through cooking.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal during the initial burn-off cycle. Ensure adequate ventilation. If smoke persists after initial use, contact customer service.
Timer does not advance or chime.	Timer mechanism issue.	Ensure the timer knob is turned past the 10-minute mark to engage the mechanism. If the issue persists, contact customer service.

7. SPECIFICATIONS

- **Model:** c3014369-6a67-437a-8e1e-ef0c045edf68
- **Power:** 1380 Watts
- **Capacity:** 18 Liters
- **Temperature Range:** Up to 440°F (230°C)

- **Control Type:** Knob
- **Special Features:** Convection Oven, Versatile Cooking Methods
- **Door Material:** Glass
- **Timer:** 60-minute with auto shut-off and bell

8. WARRANTY AND SUPPORT

This Ariete product is covered by a limited warranty. For detailed warranty information, please refer to the warranty card included with your purchase or visit the official Ariete website. If you experience any issues or require technical assistance, please contact Ariete customer support through their official channels. Keep your proof of purchase for warranty claims.

© 2026 Ariete. All rights reserved.