

## HADEN 201294

# Haden Dorchester Sage Microwave User Manual

Model: 201294

Brand: HADEN

## IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- Do not operate the oven if the door or door seals are damaged.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given.
- Do not use corrosive chemicals or vapors in this appliance.
- Ensure proper ventilation around the appliance.
- Always use microwave-safe cookware.

## PRODUCT OVERVIEW

The Haden Dorchester Sage Microwave is designed for convenient and efficient heating, reheating, and defrosting of food. It features a stylish retro design with modern digital controls.



Front view of the Haden Dorchester Sage Microwave, showcasing its sage green finish, wooden-effect handle, and digital display.

### Key Features:

- 20 Litre Capacity
- 800W Power Output
- Digital Controls with LED Display
- 5 Power Levels
- Defrost and Express Functions
- 60 Minute Digital Timer
- End of Cooking Signal
- Wooden Effect Handle and Buttons

## SETUP

### Unpacking

Carefully remove the microwave oven and all packing materials from the carton. Ensure all components are present: microwave unit, glass turntable, and turntable ring assembly.



The interior of the microwave, showing the glass turntable and its support ring.

## Placement

Place the microwave on a flat, stable surface. Ensure adequate ventilation by leaving at least 10cm (4 inches) of space at the back, 20cm (8 inches) at the top, and 5cm (2 inches) on the sides. Do not block any ventilation openings.

# DORCHESTER MICROWAVE



20L  
Capacity



5 Power  
Levels



Defrost & Express  
Functions



60 Minute  
Digital Timer



End of Cooking  
Signal

Diagram illustrating the dimensions of the Haden Dorchester Microwave, indicating its height, width, and depth.

## Electrical Connection

Plug the microwave into a grounded electrical outlet. The appliance operates on 230-240V, 50/60Hz.

## OPERATING INSTRUCTIONS



A detailed view of the microwave's control panel, showing the LED display, function buttons, and rotary dial.

## Control Panel Overview

The control panel consists of an LED display, several function buttons, and a rotary dial.

- **Micro Power:** Selects microwave power levels.
- **Express:** For quick start cooking.
- **Preset/Defrost/Clock:** Sets clock, defrost by weight/time, or preset cooking.
- **Instant/Start:** Starts cooking or adds 30 seconds.

- **Pause/Cancel:** Stops cooking or clears settings.
- **Time/Weight Dial:** Adjusts cooking time, weight, or auto cooking settings.

## Setting the Clock

1. Press the **Preset/Defrost/Clock** button once.
2. Turn the **Time/Weight** dial to set the hour.
3. Press **Preset/Defrost/Clock** again.
4. Turn the **Time/Weight** dial to set the minutes.
5. Press **Instant/Start** to confirm.

## Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the door securely.
3. Press **Micro Power** repeatedly to select desired power level (P100, P80, P50, P30, P10).
4. Turn the **Time/Weight** dial to set the cooking time.
5. Press **Instant/Start** to begin cooking.

## Defrosting

The microwave offers defrosting by weight or by time.

### Defrost by Weight

1. Press **Preset/Defrost/Clock** twice.
2. Turn the **Time/Weight** dial to select the food weight.
3. Press **Instant/Start**.

### Defrost by Time

1. Press **Preset/Defrost/Clock** three times.
2. Turn the **Time/Weight** dial to set the defrosting time.
3. Press **Instant/Start**.

## Express Cooking

For quick cooking at full power:

- Press **Express** repeatedly to select cooking time (e.g., 30 seconds, 1 minute, 1 minute 30 seconds).
- The microwave will start automatically.

## MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

### Cleaning the Exterior

Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## Cleaning the Interior

After each use, wipe the interior cavity with a damp cloth to remove food splatters. For stubborn stains, place a bowl of water with lemon slices inside and heat for 2-3 minutes to loosen residue, then wipe clean.

## Cleaning the Turntable

The glass turntable and turntable ring can be removed and washed in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.

## Door Seal Care

Regularly inspect the door seals and sealing surfaces for any damage. Clean them with a mild detergent and soft cloth.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven not starting	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Check power cord; Ensure door is fully closed; Check household fuse/circuit breaker.
Food not heating	Incorrect cooking time/power level; Microwave-safe cookware not used.	Adjust time/power; Use appropriate cookware.
Turntable not rotating	Turntable not correctly placed; Debris under turntable.	Re-position turntable and ring; Clean under turntable.

## SPECIFICATIONS

**Model:** 201294

**Capacity:** 20 Liters

**Power Output:** 800 Watts

**Voltage:** 230-240V ~ 50/60Hz

**Product Dimensions (L x W x H):** 17.13 x 12.6 x 10.24 inches (43 x 32 x 26 cm)

**Item Weight:** 22.4 pounds (10.2 Kilograms)

**Material:** Stainless Steel

**Color:** Sage

**Special Features:** Timer, Defrost, Turntable

**Included Components:** Turntable

## WARRANTY AND SUPPORT

This Haden Dorchester Sage Microwave comes with a **2-Year Warranty** from the date of purchase.

For technical support, service, or warranty claims, please contact HADEN customer service. Refer to the official HADEN website or your purchase documentation for contact details.

Please retain your proof of purchase for warranty validation.

## Documents - HADEN – 201294

### [\[pdf\]](#) Catalog



Catalogues HadenHaden SDA Catalogue 2024cdn shopify s files 1 0608 0656 2032 Haden 2024 v 1717769746 |||

PRODUCT CATALOGUE 2024 THE ORIGINAL ENGLISH 65 YEARS SINCE 1958 KETTLE H 2 OVER 150 YEARS OF ... 50/60Hz 800W SAGE GREEN PEBBLE GREY GREY MICROWAVE MODEL HM20TCDG MATCHING KETTLE TOASTER **201294** MATCHING KETTLE TOASTER 48 STAINLESS STEEL MICROWAVE Our new range of microwaves with sty...

lang:en score:19 filesize: 5.89 M page\_count: 44 document date: 2024-06-07

### [\[pdf\]](#) Catalog



PRODUCT CATALOGUE Messe Frankfurt Inspired by the tranquil landscape of Buckinghamshire Haden Iver collection is an interpretation parish character as a blend calm and urban 1700216326162

1822393106 exhibitorsearch messefrankfurt images original mics 10000001202401 0015020691 ||| PRODUCT CATALOGUE 2023 THE ORIGINAL ENGLISH 65 YEARS SINCE 1958 KETTLE H 2 OVER 150 YEARS OF ... al controls for easy use. Available in Sage Green and Pebble Grey. SAGE GREEN PEBBLE GREY 201324 **201294** SAGE MICROWAVE MODEL HM20TCDS FEATURES 5 Power Levels 60 Minute Digital Timer Defrost Expr...

lang:en score:19 filesize: 24.39 M page\_count: 68 document date: 2023-11-17

### [\[pdf\]](#) Catalog



PRODUCT CATALOGUE 17 nov 2024 — Haden started its journey manufacturing bicycles on British soil in the late 1880s We entered world of kettles 1958 and haven t looked back since 1729855571376

2838984707 exhibitorsearch messefrankfurt images original document 10000001202501 373961 ||| PRODUCT CATALOGUE 2024 2 OVER 150 YEARS OF EXPERIENCE CRAFTSMANSHIP 1 1880 s Originally a bic ... 50/60Hz 800W SAGE GREEN PEBBLE GREY GREY MICROWAVE MODEL HM20TCDG MATCHING KETTLE TOASTER **201294** MATCHING KETTLE TOASTER 48 STAINLESS STEEL MICROWAVE Our new range of microwaves with sty...

lang:en score:18 filesize: 5.45 M page\_count: 39 document date: 2024-10-01