

## LoopTone TR-18CD-B

# LoopTone 9-in-1 Vintage Turntable Instruction Manual

Model: TR-18CD-B

## INTRODUCTION

The LoopTone 9-in-1 Vintage Turntable is a versatile audio system designed to bring together classic and modern music playback options. This unit combines a vinyl record player, CD player, cassette player, AM/FM radio, USB/SD/MMC player, and Bluetooth connectivity. It also features recording capabilities, allowing you to convert vinyl to MP3 or cassette. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.



Image: The LoopTone 9-in-1 Vintage Turntable, showcasing its classic design with the dust cover open and a vinyl record on the platter.

## Safety Information

Please read all safety instructions carefully before operating this product. Keep this manual for future reference.

- **Power Source:** Ensure the unit is connected to a power supply that matches the voltage specified on the rating label.
- **Ventilation:** Do not block any ventilation openings. Allow adequate space around the unit for proper airflow.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or excessive humidity. Do not place objects filled with liquids, such as vases, on the unit.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a soft, dry cloth only. Do not use liquid cleaners or aerosol cleaners.

- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

## PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the various parts and functions of your LoopTone 9-in-1 Vintage Turntable.

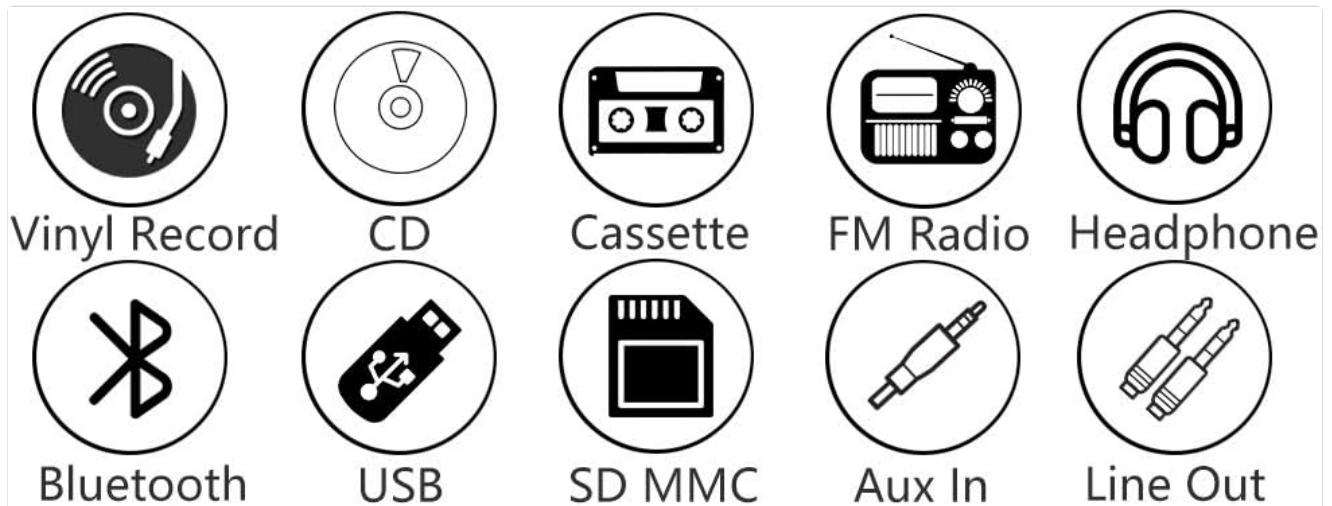


Image: Icons representing the various playback options: Vinyl Record, CD, Cassette, FM Radio, Headphone, Bluetooth, USB, SD MMC, Aux In, and Line Out.

### Front Panel Controls and Features:

- **Turntable Platter:** For playing vinyl records.
- **Tone Arm:** Holds the stylus for playing records.
- **Dust Cover:** Protects the turntable from dust.
- **Cassette Deck:** For playing and recording cassette tapes.

- **CD Tray:** For playing compact discs.
- **Function Select Knob:** To switch between modes (Phono, CD, Cassette, FM/AM, Bluetooth, USB/SD, Aux-in).
- **Volume Knob:** Adjusts the master volume.
- **Tuning Knob:** For manual tuning of radio stations.
- **USB Port:** For USB flash drives.
- **SD/MMC Card Slot:** For SD or MMC memory cards.
- **Aux-in Jack:** For connecting external audio devices.
- **Headphone Jack:** For private listening.
- **Built-in Speakers:** Integrated stereo speakers.
- **Display Screen:** Shows current mode, track information, and radio frequency.
- **Control Buttons:** Play, Pause, Stop, Fast Forward, Rewind, Record, Delete, Program, Repeat, etc.

## Rear Panel Connections:

- **RCA Line-Out Jacks (L/R):** For connecting to external amplifiers or powered speakers.
- **FM Antenna:** For improved FM radio reception.
- **AC Power Input:** For connecting the power cord.



Image: Diagram highlighting the 10W\*2 built-in speakers, Stereo Channel RCA Line Out, and 3.5mm Headphone jack.

## SETUP

Follow these steps for initial setup of your audio system.

1. **Unpacking:** Carefully remove the unit from its packaging. Retain the packaging materials for future transport or storage.
2. **Placement:** Place the unit on a flat, stable surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.
3. **Dust Cover:** Gently attach the dust cover to the hinges at the back of the unit.
4. **Power Connection:** Connect the AC power cord to the AC power input on the rear of the unit, then plug the other end into a suitable wall outlet.
5. **External Connections (Optional):**



- **RCA Line-Out:** If connecting to an external amplifier or powered speakers, use RCA cables to connect the L/R Line-Out jacks on the unit to the corresponding audio input jacks on your external audio equipment.
- **Aux-in:** To play audio from an external device (e.g., smartphone, MP3 player), connect a 3.5mm audio cable from the device's headphone jack to the Aux-in jack on the front of the unit.

## OPERATING INSTRUCTIONS

This section details how to operate the various functions of your LoopTone 9-in-1 Vintage Turntable.

### **A. CD Player** cda,mp3,wma



### **B. FM/AM Radio** store station

### **C. Cassette Player** rew,fwd,rec.



### **D. USB / SD Card** mp3,wma,rec.

Image: Close-up view of the control panel, highlighting the CD Player, FM/AM Radio, Cassette Player, and USB/SD Card functions.

## 1. Turntable (Vinyl Record Playback)



Image: Diagram illustrating the 3-speed options (33-1/3, 45, 78 RPM) and compatible record sizes (7", 10", 12").

1. Lift the dust cover.
2. Place a vinyl record on the turntable platter.
3. Select the appropriate speed (33, 45, or 78 RPM) using the speed selector switch. Use the included 45 RPM adapter for 7-inch records with large center holes.
4. Move the function select knob to 'PHONO'.
5. Gently lift the tone arm and position the stylus over the desired track on the record.
6. Lower the tone arm slowly onto the record. Playback will begin automatically.
7. At the end of the record, the turntable will automatically pause and stop to protect your vinyl.

## 2. CD Player

1. Move the function select knob to 'CD'.
2. Press the 'OPEN/CLOSE' button to open the CD tray.
3. Place a CD (CDA, MP3, WMA format) with the label side facing up into the tray.
4. Press the 'OPEN/CLOSE' button again to close the tray. The unit will read the disc.



5. Press 'PLAY/PAUSE' to start playback. Use 'NEXT/PREVIOUS' buttons to skip tracks.

### 3. Cassette Player

1. Move the function select knob to 'TAPE'.
2. Insert a cassette tape into the cassette deck.
3. Press 'PLAY' to begin playback.
4. Use 'REW' (Rewind) and 'F.F' (Fast Forward) buttons for navigation. Press 'STOP/EJECT' to stop playback and eject the tape.

### 4. AM/FM Radio

1. Move the function select knob to 'FM' or 'AM'.
2. Adjust the 'TUNING' knob to find your desired radio station.
3. Extend the FM antenna on the rear of the unit for better reception.

### 5. Bluetooth Connectivity



Image: A person relaxing in a chair, using a smartphone to stream music via Bluetooth to the LoopTone turntable.



1. Move the function select knob to 'BT' (Bluetooth). The display will show 'BT' and a pairing indicator.
2. Enable Bluetooth on your mobile phone, tablet, MP3 player, or computer.
3. Search for 'LoopTone' in the list of available devices and select it to pair.
4. Once paired, you can play music from your Bluetooth device through the turntable's speakers.

## 6. USB/SD/MMC Playback

1. Insert a USB flash drive into the USB port or an SD/MMC card into the card slot.
2. Move the function select knob to 'USB/SD'. The unit will automatically detect and begin playing compatible audio files (MP3, WMA).
3. Use the 'PLAY/PAUSE', 'NEXT/PREVIOUS' buttons to control playback.

## 7. Recording Function (Vinyl to MP3/Cassette)



Image: Hands inserting a USB drive and a cassette tape, illustrating the recording capability of the unit.

### 1. Recording Vinyl to USB/SD:

- Insert a USB flash drive or SD/MMC card into the respective slot.

- Select 'PHONO' mode and start playing your vinyl record.
- Press the 'REC' button. The unit will begin recording the audio from the vinyl to the USB/SD card in MP3 or WMA format.
- Press 'REC' again to stop recording.

## 2. Recording Vinyl to Cassette:

- Insert a blank cassette tape into the cassette deck.
- Select 'PHONO' mode and start playing your vinyl record.
- Press the 'REC' button on the cassette deck. The unit will begin recording the audio from the vinyl to the cassette tape.
- Press 'STOP' on the cassette deck to stop recording.

## 8. Aux-in, RCA Line-Out, and Headphone Jack

- **Aux-in:** Connect external audio devices using a 3.5mm audio cable to the 'AUX IN' jack on the front panel. Select 'AUX' mode to play audio from the connected device.
- **RCA Line-Out:** Use the 'RCA LINE OUT' jacks on the rear to connect to external amplifiers or powered speakers for enhanced audio output.
- **Headphone Jack:** Plug 3.5mm headphones into the 'HEADPHONE' jack on the front panel for private listening. This will mute the built-in speakers.

## 9. Remote Control



Image: The remote control for the LoopTone 9-in-1 Vintage Turntable, showing buttons for mute, play/pause, skip, mode selection, and recording.

The included remote control allows for convenient operation of various functions from a distance, including mute, play/pause, track skipping, and mode switching.

## MAINTENANCE

Proper care and maintenance will ensure the longevity of your LoopTone 9-in-1 Vintage Turntable.

- **Cleaning the Unit:** Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Cleaning the Stylus:** Use a soft brush to gently clean the stylus (needle) from back to front. Avoid touching the stylus with your fingers.
- **Dust Cover:** Keep the dust cover closed when not in use to prevent dust accumulation on the turntable and stylus.
- **Record Care:** Keep your vinyl records clean and free of dust. Store them vertically in their sleeves to prevent warping.



- **CD/Cassette Care:** Handle CDs by their edges and keep them clean. Store cassette tapes in their cases to protect them from dust and damage.

## TROUBLESHOOTING

If you encounter any issues with your unit, please refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not active	Ensure power cord is securely plugged in; Try a different power outlet
No sound	Volume too low; Incorrect mode selected; Headphones connected; External speakers not connected/powered	Increase volume; Select correct function mode; Disconnect headphones; Check external speaker connections and power
Turntable not spinning or playing	Speed setting incorrect; Tone arm not lowered; Auto-stop engaged	Check and adjust speed setting; Ensure tone arm is lowered onto record; Verify auto-stop switch position (if applicable)
CD not playing	CD inserted incorrectly; Disc is dirty or scratched; Incorrect mode selected	Re-insert CD label side up; Clean or replace disc; Select 'CD' mode
Bluetooth pairing failed	Device too far; Bluetooth not enabled on external device; Unit not in pairing mode	Move device closer; Enable Bluetooth on your device; Ensure unit is in 'BT' mode and searching
Poor radio reception	Antenna not extended; Weak signal	Fully extend the FM antenna; Reposition the unit for better signal

## SPECIFICATIONS

Detailed technical specifications for the LoopTone 9-in-1 Vintage Turntable.



Image: Diagram showing the dimensions of the unit: 317mm (width), 272mm (depth), and 155mm (height) with the dust cover closed, 250mm with it open.

- **Model Number:** TR-18CD-B
- **Product Dimensions:** 12.6 x 11.81 x 7.87 inches (320 x 300 x 200 mm)
- **Item Weight:** 7.27 pounds (3.3 kg)
- **Material:** Wood, Plastic
- **Connectivity Technology:** RCA, Bluetooth
- **Maximum Rotational Speed:** 78 RPM (supports 33, 45, 78 RPM)
- **Included Components:** Record Player, built-in speaker x 2, 45 rpm adapter, remote control, manual
- **Special Features:** Adjustable Speed, Built-In Speaker, Dust Cover, USB/SD Recording
- **Compatible Devices:** Speaker, Headphone, Personal Computer, Smartphone, Tablets, MP3 Player, Laptop
- **Manufacturer:** MEIFAN-US
- **Country of Origin:** China




# WARRANTY AND SUPPORT

LoopTone is committed to providing high-quality products and excellent customer service. This product comes with a standard manufacturer's warranty covering defects in materials and workmanship under normal use. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact LoopTone customer support. If you experience any issues or have questions regarding your LoopTone 9-in-1 Vintage Turntable, please contact our customer support team. We offer 7x24 hours customer consultation service and a one-year product quality problem solution.

**Contact Information:** Please refer to the contact details provided on the product packaging or the official LoopTone website for the most up-to-date support information.

© 2025 LoopTone. All rights reserved.

## Related Documents - TR-18CD-B

	<p><a href="#">Looptone TR-18CD Classical Turntable with AM/FM Radio, CD, Cassette Recorder &amp; USB/SD Slot Operating Instructions</a></p> <p>Operating instructions for the Looptone TR-18CD, a classical turntable with AM/FM radio, CD player, cassette recorder, and USB/SD slot. This manual covers setup, operation, and troubleshooting for all features.</p>
	<p><a href="#">Dosound TR-18CD-SP Classical Turntable with Radio, CD, Cassette, USB/SD &amp; Bluetooth - Operating Manual</a></p> <p>Operating instructions for the Dosound TR-18CD-SP, a classical turntable with AM/FM radio, CD player, cassette recorder, USB/SD slot, and Bluetooth connectivity. This manual provides setup, operation, and troubleshooting guidance.</p>
	<p><a href="#">Lenco TT-115 Classic Phono Turntable User Manual</a></p> <p>User manual for the Lenco TT-115 Classic Phono turntable. Learn how to set up, operate, and maintain your record player with Bluetooth and USB features. Discover vinyl playback and digital recording capabilities.</p>



<div data-bbox="127 107 290 340"><p>MANUAL READ INSTRUCTIONS CAREFULLY BEFORE USE AND STORE IN A SAFE PLACE FOR FUTURE REFERENCE</p></div>	<p><a href="#">LoopTone 618A Turntable Record Player User Manual</a></p> <p>Comprehensive user manual for the LoopTone 618A Turntable Record Player, covering safety instructions, initial setup, operation of turntable, radio, CD, Bluetooth, USB/SD, cassette, and recording features, along with connection guides and FCC compliance information.</p>
<div data-bbox="127 430 290 663"><p>Notice d'utilisation / User guide / Instrucciones de uso / Bedienungsanleitung / Gebruiksaanwijzing</p></div>	<p><a href="#">Essentiel b TT-B300BT Bluetooth Turntable User Manual</a></p> <p>Comprehensive user guide for the Essentiel b TT-B300BT Bluetooth turntable, covering setup, operation, features, technical specifications, and troubleshooting.</p>
<div data-bbox="127 739 290 972"><p>Model: LBTA-165</p></div>	<p><a href="#">Lenco LBTA-165 User Manual: Setup, Operation, and Bluetooth Guide</a></p> <p>Comprehensive user manual for the Lenco LBTA-165 full-automatic turntable. Get detailed instructions on setup, operation, Bluetooth connectivity, troubleshooting, and specifications for enjoying your vinyl records.</p>