

LeapFrog 80-613700

LeapFrog On-The-Go Story Pal Instruction Manual

Model: 80-613700

1. INTRODUCTION

The LeapFrog On-The-Go Story Pal is an interactive story player designed to engage children with a variety of stories, poems, songs, and lullabies. This device encourages listening comprehension and fosters a love for storytelling. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Story Pal.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not suitable for children under 3 years. Batteries included may cause injury if swallowed. Keep out of reach of children. Adult supervision is recommended during use, especially for younger children.

- Always ensure the battery compartment is securely closed.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove exhausted batteries from the product.
- Dispose of batteries safely and responsibly.

3. PACKAGE CONTENTS

- LeapFrog On-The-Go Story Pal
- Parent's Guide

Note: 3 AA batteries are included for demonstration purposes only. New batteries are recommended for regular use.

4. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your On-The-Go Story Pal.





Figure 4.1: Front View of On-The-Go Story Pal

This image displays the front of the Story Pal, highlighting its bunny-shaped design. Key features visible include the digital display, speaker, and the forward/backward control buttons located near the eyes.





Figure 4.2: Back View of On-The-Go Story Pal

This image shows the rear of the Story Pal, detailing the battery compartment cover, the multi-function dial for power and mode selection (stories, songs, lullabies), and the instructions for activating the timer mode by pressing the nose button.

Controls and Features:

- **Tail Dial:** Used to power the device on/off and select content categories (Stories, Songs, Lullabies).
- **Eye Buttons (Left/Right):** Navigate forward or backward through content.
- **Nose Button:** Play/Pause button. Press and hold for 5 seconds to activate Timer mode.
- **Microphone:** For recording your own stories.
- **Headphone Jack:** For private listening (headphones not included).
- **Digital Display:** Shows track numbers or timer settings.
- **Speaker:** Outputs audio.
- **Carrying Strap:** For portability.

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment on the back of the Story Pal.
2. Using a screwdriver, loosen the screw on the battery cover.
3. Remove the battery cover.
4. Insert 3 new AA (LR6) batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
5. Replace the battery cover and tighten the screw to secure it.

Note: For optimal performance, use new alkaline batteries. Rechargeable batteries are not recommended due to potential performance variations.

5.2 Power On/Off

- To turn the Story Pal **ON**, rotate the Tail Dial from the "OFF" position to any content category (e.g., Stories, Songs).
- To turn the Story Pal **OFF**, rotate the Tail Dial to the "OFF" position.

6. OPERATING INSTRUCTIONS

6.1 Content Selection

- Rotate the **Tail Dial** to select a content category:
 - **Book Icon:** Stories
 - **Music Note Icon:** Songs & Poems
 - **Moon Icon:** Lullabies
- Once a category is selected, use the **Left and Right Eye Buttons** to navigate through the available content. The digital display will show the track number.
- Press the **Nose Button** to play or pause the selected content.

6.2 Recording Your Voice

The Story Pal allows you to record up to 10 minutes of your own voice, such as reading a favorite story.

1. Select the "Stories" category using the Tail Dial.

2. Navigate to an empty recording slot using the Eye Buttons (refer to the display for available slots).
3. Press and hold the **Nose Button** until you hear a beep, indicating recording has started.
4. Speak clearly into the microphone.
5. Press the **Nose Button** again to stop recording.
6. Your recording is now saved and can be played back like other stories.

6.3 Creating a Playlist

You can create a custom playlist of up to five stories, songs, poems, or lullabies.

1. While a desired content item is playing or selected, press and hold both **Eye Buttons** simultaneously until you hear a confirmation sound. This adds the item to your playlist.
2. Repeat for up to five items.
3. To play your playlist, navigate to the dedicated playlist option within the content categories (indicated by a specific icon, refer to the device's display).
4. To clear the playlist, press and hold both Eye Buttons for an extended period until a clear confirmation sound is heard.

6.4 Timer Function

The timer function allows the Story Pal to play content for a set duration before automatically shutting off.

1. Press and hold the **Nose Button** for 5 seconds to activate Timer mode. The display will show a timer setting.
2. Use the **Left and Right Eye Buttons** to adjust the timer duration (e.g., 15 minutes, 30 minutes).
3. Press the **Nose Button** again to confirm the timer setting and start playback. The device will automatically turn off after the set time.
4. To deactivate the timer, press and hold the Nose Button for 5 seconds again, or turn the device off and on.

6.5 Headphone Use

A standard 3.5mm headphone jack is located on the side of the Story Pal for private listening. Insert headphones (not included) into the jack. The external speaker will automatically mute when headphones are connected.

7. CONNECTING TO A COMPUTER

The LeapFrog On-The-Go Story Pal can be connected to a computer to download additional content, including stories, songs, and poems. Visit the official LeapFrog website for software downloads and instructions on how to expand your Story Pal's library. For more information and to download content, please visit: www.leapfrog.com

8. MAINTENANCE AND CARE

- **Cleaning:** Wipe the device with a slightly damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the device is dry before use.
- **Battery Replacement:** Replace batteries when the sound becomes faint or the device stops functioning correctly. Refer to Section 5.1 for battery installation.
- **Storage:** Store the Story Pal in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if the device will not be used for an extended period.
- **Water Exposure:** This device is not waterproof. Avoid exposure to water or other liquids.

9. TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Device does not turn on.	<ul style="list-style-type: none"> • Ensure the Tail Dial is rotated to an ON position. • Check battery polarity. • Replace with new AA batteries.
No sound or low volume.	<ul style="list-style-type: none"> • Adjust the volume using the volume control (if applicable, or ensure the device is not muted). • Ensure headphones are not plugged in if you want sound from the speaker. • Replace batteries.
Buttons are unresponsive.	<ul style="list-style-type: none"> • Turn the device off and then on again to reset. • Replace batteries.
Cannot record voice.	<ul style="list-style-type: none"> • Ensure you are in a recording slot. • Press and hold the Nose Button correctly to start recording. • Check if the 10-minute recording limit has been reached.

If problems persist, please visit the LeapFrog support website for further assistance.

10. SPECIFICATIONS

- **Model Number:** 80-613700
- **Product Dimensions:** 3.62 x 5.12 x 3.35 inches
- **Item Weight:** 8.6 ounces
- **Batteries:** 3 AA batteries (included for demo, new recommended)
- **Manufacturer Recommended Age:** 36 months - 8 years
- **Manufacturer:** VTech

11. WARRANTY AND SUPPORT





For detailed warranty information, product registration, and customer support, please visit the official LeapFrog website or contact their customer service department.

LeapFrog Official Website: www.leapfrog.com


Please retain this instruction manual for future reference.



Related Documents

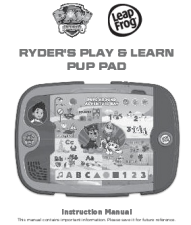	<p>On-the-Go Story Pal™ Instruction Manual</p> <p>Comprehensive guide for the LeapFrog On-the-Go Story Pal™, covering setup, features, activities, troubleshooting, and safety information. Learn how to enjoy stories, music, and record your own.</p>
	<p>LeapFrog Scout's Ring & Record Learning Phone Instruction Manual</p> <p>Comprehensive instruction manual for the LeapFrog Scout's Ring & Record Learning Phone (Model 6209), detailing features, setup, battery information, care, troubleshooting, and FCC compliance.</p>
	<p>PAW Patrol Ryder's Play & Learn Pup Pad Instruction Manual</p> <p>Comprehensive instruction manual for the PAW Patrol Ryder's Play and Learn Pup Pad by LeapFrog. Learn how to set up, play, and care for the educational toy. Features include touch and learn modes, quiz modes, and various learning cards covering letters, numbers, shapes, and more.</p>
	<p>LeapFrog My Pal Scout & Violet Quick Start and Parent Guide</p> <p>A comprehensive guide to setting up, playing with, and caring for your LeapFrog My Pal Scout and My Pal Violet plush toys, including troubleshooting, safety, and system requirements.</p>

Documents - LeapFrog – 80-613700

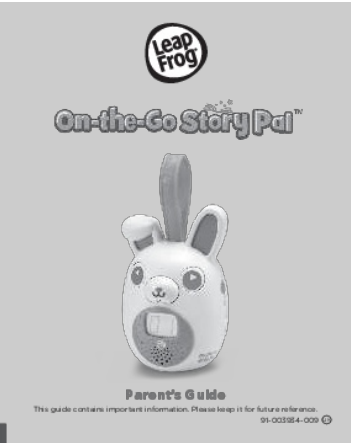

[\[pdf\]](#) User Manual Instructions Guide

Parent s Guide This guide contains important information Please keep it for future reference 91 003934 009 UK 80 613700 On the Go Storypal instruction manual en gb t7 leapfrog images 8 |||

Parent s Guide This guide contains important information. Please keep it for future reference. 91-003934-009 UK INTRODUCTION Thank you for purchasing the On-the-Go Story Pal™ device Get ready to enter a magical world of storytelling, music and learning Hand Strap Next Button Back Button Play/P...


lang:en score:55 filesize: 1.33 M page_count: 16 document date: 2021-08-17



[On-the-Go Story Pal™ Instruction Manual](#)

Comprehensive guide for the LeapFrog On-the-Go Story Pal™, covering setup, features, activities, troubleshooting, and safety information. Learn how to enjoy stories, music, and record your own.

lang:en score:40 filesize: 1.34 M page_count: 18 document date: 2021-06-09

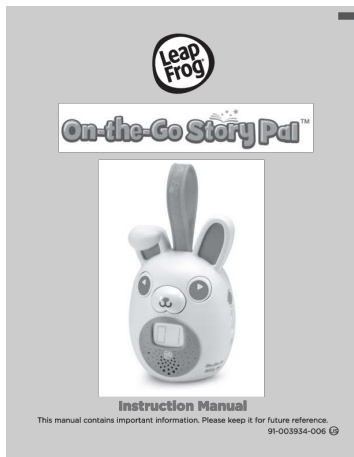

[\[pdf\] User Manual Instructions](#)

80 613700 On the Go Storypal instruction manual karen Instructions for use IFU LeapFrog The Story Pal French Edition Portable Storytelling Audio Player 70 Stories Poems Songs and Lullabies Kids Age 3 Up Small Amazon ca Toys Games B1Nnq7z8mSL m media amazon images | |||

...

lang:en score:30 filesize: 2.67 M page_count: 18 document date: 2023-10-23