

Adventure Force Shark Strike Water Raceway Play Set

Adventure Force Shark Strike Water Raceway Play Set

Instruction Manual

1. INTRODUCTION

Welcome to the Adventure Force Shark Strike Water Raceway Play Set. This manual provides essential information for the safe assembly, operation, and maintenance of your new play set. Please read all instructions carefully before use to ensure a fun and safe experience.

2. SAFETY INFORMATION

- **Adult Supervision Required:** This play set contains small parts and requires adult supervision during assembly and play.
- **Water Use Only:** Designed for use with water. Do not use with other liquids.
- **Battery Safety:** If the motorized boats require batteries (not included), ensure they are inserted correctly according to polarity (+/-). Do not mix old and new batteries, or different types of batteries. Remove batteries if the toy will not be used for an extended period.
- **Choking Hazard:** Keep small components away from young children who may put objects in their mouths.
- **Avoid Electrical Hazards:** Do not use near electrical outlets or devices.

3. PACKAGE CONTENTS

Please check the box to ensure all components are present:

- Raceway Track Pieces (various sections to form a figure-8)
- Water Slide with Adjustable Base
- Boat Crane Assembly
- Chomping Shark Mechanism

- 2 Motorized Speedboats
- Shark Submarine (accessory)
- Quick-Release Launcher



Image: Overview of the Adventure Force Shark Strike Water Raceway Play Set components and features as displayed on the retail packaging.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Shark Strike Water Raceway Play Set:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble Track:** Connect the various track pieces to form the figure-8 raceway. Ensure all connections are secure to prevent leaks.
3. **Attach Water Slide:** Secure the water slide to its designated position on the track. Adjust the base for stability. Ensure the quick-release launcher is properly integrated.
4. **Install Boat Crane:** Attach the boat crane to its designated spot on the raceway.
5. **Position Chomping Shark:** Place the chomping shark mechanism in its designated area on the track.
6. **Prepare Speedboats:** If required, insert batteries into the motorized speedboats according to the instructions on the boat's underside (batteries not included).
7. **Fill with Water:** Once fully assembled, place the raceway on a flat, stable surface and carefully fill it with water to the recommended level.



Image: The Adventure Force Shark Strike Water Raceway Play Set fully assembled, showing the track, slide, crane, and boats.

5. OPERATING INSTRUCTIONS

Once the raceway is assembled and filled with water, you are ready to play:

- **Activating Speedboats:** Place the motorized speedboats into the water. They are designed to activate automatically upon contact with water.
- **Boat Control:** The speedboats are self-steering and can perform doughnuts. They will automatically reverse when hitting a wall or obstacle. You can adjust the rudder on the boats to perform different tricks.
- **Using the Water Slide:** Place a speedboat at the top of the magnetized water slide. Use the quick-release launcher to send the boat speeding down the slide into the raceway.
- **Chomping Shark Challenge:** Navigate your speedboats past the chomping shark. Time your movements to avoid being 'caught'.
- **Boat Crane:** Use the working boat crane to lift boats out of the water or move them around the track.
- **Figure-8 Track:** Enjoy racing the boats around the figure-8 style track, designed for dynamic play and interaction.
- **Sleep Mode:** The boats feature sensor technology that allows them to enter sleep mode after a period of inactivity in the water to conserve battery life. Re-activate by touching the water or gently moving the boat.

6. MAINTENANCE

- **Cleaning:** After each use, drain the water from the raceway. Clean all components with a damp cloth and mild soap if necessary. Rinse thoroughly and allow to air dry completely before storage to prevent mold or mildew.

- **Storage:** Store the play set in a clean, dry place away from direct sunlight and extreme temperatures. Disassemble if needed for compact storage.
- **Battery Care:** Remove batteries from the speedboats if the toy will not be used for an extended period to prevent leakage and damage.

7. TROUBLESHOOTING

- **Boats Not Moving:**
 - Ensure boats are fully in contact with water.
 - Check batteries (if applicable) for proper insertion and charge. Replace if necessary.
 - Ensure no debris is obstructing the propeller.
- **Raceway Leaks:**
 - Verify all track connections are securely fastened.
 - Check for any cracks or damage to the plastic components.
- **Chomping Shark Not Functioning:**
 - Ensure the mechanism is correctly assembled and positioned.
 - Check for any obstructions preventing movement.

8. SPECIFICATIONS

| | |
|-------------------------------------|----------------------------|
| Package Dimensions | 18.07 x 8.66 x 4.02 inches |
| Item Weight | 1.76 pounds |
| ASIN | B08TQLXJLS |
| Manufacturer Recommended Age | 3 months and up |
| Manufacturer | Adventure Force |

9. WARRANTY AND SUPPORT

For any questions, concerns, or issues regarding your Adventure Force Shark Strike Water Raceway Play Set, please contact the manufacturer directly. Refer to the product packaging for specific contact information or visit the official Adventure Force website for customer support details.