

GTS Pet-1000

GTS Pet Clipper Model Pet-1000 User Manual

For Professional and Home Pet Grooming

INTRODUCTION

This manual provides instructions for the safe and effective use of your GTS Pet Clipper Model Pet-1000. Please read all instructions carefully before use and retain this manual for future reference. This cordless pet clipper is designed for efficient and quiet grooming of dogs and cats, featuring an IPX5 waterproof rating and an LED display for convenience.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the clipper in water. The clipper is IPX5 waterproof for rinsing, but not for full submersion.
- Keep the appliance away from children and pets when not in use.
- Do not use the clipper on wet hair. Ensure your pet's coat is dry before grooming.
- Ensure the blades are clean and free of debris before each use to prevent injury or poor performance.
- If your pet has long, thick hair, pre-trim with scissors to a shorter length first. This prevents the clipper from jamming and ensures a smoother cut.
- Use only the provided USB charging cable.
- Do not attempt to disassemble or repair the clipper yourself. Contact customer support for assistance.

WHAT'S INCLUDED

Verify that all items are present in your package:

- 1 x Pet Grooming Clipper

- 1 x Storage bag
- 1 x Charging Cable (USB)
- 1 x Cleaning Brush
- 4 x Guide Combs (3mm, 6mm, 9mm, 12mm)
- 1 x Stainless Steel Comb
- 1 x Stainless Steel Scissors
- 1 x Nail Clipper Kit
- 1 x Nail File
- 1 x User Guide Kit (this manual)



Image: All accessories included in the GTS Pet Clipper kit.

PRODUCT OVERVIEW

Familiarize yourself with the parts of your GTS Pet Clipper before use.

Detail



Image: Detailed view of the GTS Pet Clipper components.

- **Removable Blade:** Designed for easy cleaning and maintenance.
- **5 Gear Adjustment:** Allows for precise cutting length adjustments directly on the blade.
- **Switch:** Power on/off button for operating the clipper.
- **Power LCD:** Digital display showing the current battery percentage.
- **Charging Port:** Connects to the USB charging cable for recharging the internal battery.
- **Attachment Guide Combs:** Four different sizes (3-6-9-12mm) to achieve various hair lengths.

CHARGING THE CLIPPER

Ensure your clipper is fully charged before its first use and whenever the battery is low.

1. Connect the USB charging cable to the charging port located at the bottom of the clipper.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
3. The Power LCD will illuminate and display the battery percentage, indicating the charging status.
4. A full charge takes approximately 2 hours.
5. The clipper provides approximately 3-4 hours of cordless run time on a full charge.

Note: Charge the clipper fully before first use to optimize battery life.

SETUP

Attaching Guide Combs

1. Ensure the clipper is turned off.
2. Select the desired guide comb (3mm, 6mm, 9mm, or 12mm) based on the desired hair length.
3. Align the comb with the clipper blade and slide it on until it clicks securely into place.
4. To remove a guide comb, gently push it off the blade assembly.

Adjusting Blade Length

The clipper features a 5-gear adjustment ring for fine-tuning the cutting length directly on the blade, even without a guide comb. Rotate the adjustment ring located on the clipper body to select the desired setting for a more precise cut.

OPERATING INSTRUCTIONS

How to Groom Your Pet

1. **Preparation:** Ensure your pet's coat is clean, dry, and completely tangle-free. Brush out any mats or knots thoroughly. If your pet's hair is very long and thick, use the included stainless steel scissors to pre-trim it to a manageable length before using the clipper. This prevents the clipper from jamming.
2. **Power On:** Press the power switch to turn on the clipper. The Power LCD will display the current battery level.
3. **Start Grooming:** Hold the clipper at a comfortable angle and gently move it against the direction of hair growth. Use smooth, even strokes. Avoid pressing too hard against the pet's skin.
4. **Monitor Pet:** Observe your pet's reaction during grooming. The low-noise design is intended to keep pets calm, but take breaks if your pet shows signs of stress or discomfort.
5. **Check Blades:** Periodically check the blades for hair buildup. Turn off the clipper and use the cleaning brush to remove any accumulated hair to maintain optimal cutting performance.
6. **Power Off:** Once grooming is complete, press the power switch to turn off the clipper.

Tip: Always start with a longer guide comb and gradually switch to shorter ones if a closer cut is desired, especially when grooming a new pet or a new area.

MAINTENANCE

Cleaning the Clipper

1. Turn off the clipper and disconnect it from the charging cable.
2. Remove any attached guide comb.
3. **Remove the Blade:** Gently push the blade assembly off the clipper body for thorough cleaning.
4. Use the included cleaning brush to remove loose hair from the blade and the clipper body.
5. **Rinsing:** The clipper is IPX5 waterproof. You can rinse the blade and the clipper head under running water to remove stubborn hair and debris.
6. **Important:** Do not soak the entire clipper in water. Only the blade and clipper head are designed for rinsing.

7. Allow all parts to air dry completely before reassembling or storing the clipper.



Image: Cleaning instructions for the GTS Pet Clipper, highlighting its IPX5 waterproof feature.

Blade Lubrication

For optimal performance, reduced friction, and extended blade life, apply a few drops of clipper oil (not included) to the blades after each cleaning, especially if they have been rinsed with water. Turn the clipper on for a few seconds to distribute the oil evenly.

Storage

Store the clipper and its accessories in the provided storage bag in a cool, dry place, away from direct sunlight and moisture. Ensure the clipper is fully charged before long-term storage.

TROUBLESHOOTING

Refer to this section for solutions to common issues you might encounter.

Problem	Possible Cause	Solution
Clipper not turning on	Low battery	Charge the clipper for at least 2 hours.

Problem	Possible Cause	Solution
Clipper not cutting effectively	Blades are dull or dirty; hair buildup	Clean the blades thoroughly. Lubricate with clipper oil. Consider replacing blades if they are dull.
Clipper jams or pulls hair	Hair is too long/thick; blades are dirty or misaligned; guide comb incorrectly attached	Pre-trim long hair with scissors. Clean blades. Ensure guide comb is correctly attached and blades are properly aligned.
Clipper gets hot during use	Prolonged continuous use; dirty or unlubricated blades	Take short breaks during grooming. Clean and lubricate blades regularly.
Clipper making unusual noise	Blade misalignment; foreign object caught in blades	Turn off the clipper and inspect blades for proper alignment or any obstructions. Clean thoroughly.

SPECIFICATIONS

- **Model:** Pet-1000
- **Power:** 10W
- **Rated Voltage:** 3.7V
- **Power Input:** 100-240V 50/60Hz
- **Output:** DC 5.0V 1A
- **Battery Capacity:** 1200mAh
- **Charging Time:** Approx. 2 hours
- **Cordless Run Time:** 3-4 hours
- **Net Weight:** 300g / 0.7lbs
- **Dimensions:** 175 x 42 x 42mm / 6.8 x 1.6 x 1.6in
- **Waterproof Rating:** IPX5 (Rinsable)
- **Blade Material:** Stainless Steel
- **Noise Level:** Less than 50dB

WARRANTY INFORMATION AND CUSTOMER SUPPORT

GTS offers free replacements for quality problems within 12 months from the date of purchase. Lifetime technical support is also provided to ensure your satisfaction.

For customer service inquiries, technical assistance, or warranty claims, please contact us. Our dedicated customer service team is available to respond within 24 hours.

Please retain your proof of purchase for all warranty claims.

