

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER Powerseries Extreme Cordless Stick Vacuum Cleaner for Pets (BSV2020P) User Manual

BLACK+DECKER BSV2020P



BLACK+DECKER Powerseries Extreme Cordless Stick Vacuum Cleaner for Pets (BSV2020P) User Manual

INTRODUCTION

This manual provides instructions for the BLACK+DECKER Powerseries Extreme Cordless Stick Vacuum Cleaner for Pets, model BSV2020P. It covers assembly, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your vacuum cleaner. This model features a 3X Cleaning System designed for multi-surface clean up, multi-debris pickup, and an anti-tangle brush bar, making it effective for pet hair removal.



Image: The BLACK+DECKER Powerseries Extreme Cordless Stick Vacuum Cleaner, purple in color, shown in its upright stick vacuum configuration.

SAFETY INFORMATION

Please read and understand all safety instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Use extra care when cleaning on stairs.
- Unplug before connecting or disconnecting hose.

PACKAGE CONTENTS

Verify that all items are included in your package:

- BLACK+DECKER Powerseries Extreme Cordless Stick Vacuum Cleaner (Model BSV2020P)
- Replacement Filter (Model BSVF1)
- Charging Base/Adapter
- Brush Attachment
- Crevice Tool (typical accessory, not explicitly listed but common)

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging materials for future storage or transport.
2. **Assembly:**
 - Connect the main vacuum body to the extension wand until it clicks securely into place.
 - Attach the floor head to the bottom of the extension wand, ensuring it locks firmly.
3. **Charging the Battery:**
 - Ensure the battery is fully charged before first use.
 - Plug the charging adapter into a wall outlet.
 - Connect the charging adapter to the vacuum's charging port or place the vacuum on its charging base.
 - The charging indicator light will illuminate to show charging status. A full charge typically takes several hours.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the power button located on the handle to turn the vacuum on. Press it again to turn off.
2. **Vacuuming:** Guide the vacuum across the desired surface. The Powerseries Extreme is designed for multi-surface cleaning, including carpets and hard floors.
3. **Using Attachments:**
 - To use attachments, detach the main vacuum body from the extension wand.
 - Connect the desired attachment (e.g., brush or crevice tool) directly to the main vacuum body for handheld cleaning.
 - This configuration is ideal for cleaning upholstery, stairs, car interiors, and tight spaces.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

1. **Emptying the Dustbin:**

- When the dustbin appears full or suction decreases, empty it.
- Locate the dustbin release button, typically near the handle. Press it to detach the dustbin.
- Hold the dustbin over a trash receptacle and open the bottom flap to release debris.
- Close the flap and reattach the dustbin to the vacuum until it clicks.

2. **Cleaning the Filter:**

- The BSVF1 filter is washable. For best performance, clean the filter regularly.
- Remove the filter from the dustbin.
- Wash the filter using warm, soapy water.
- **Important:** Ensure the filter is completely dry before reinserting it into the vacuum. This may take up to 24 hours. Using a wet filter can damage the vacuum.

3. **Cleaning the Brush Bar:**

- The anti-tangle brush bar reduces hair wrap, but occasional cleaning may still be necessary.
- Turn off and unplug the vacuum.
- Access the brush bar compartment (refer to the diagram in the full manual if available).
- Remove any tangled hair or debris from the brush bar using scissors or a brush.
- Reassemble the brush bar and compartment cover.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery not charged Improper assembly	Charge the battery fully Ensure all parts are securely connected
Loss of suction	Full dustbin Clogged filter Blockage in hose/brush bar	Empty dustbin Clean or replace filter (ensure dry) Check for and remove blockages
Battery not charging	Charger not connected Faulty outlet	Ensure charger is securely plugged into vacuum and wall Test outlet with another device
Brush bar not rotating	Tangled debris Brush bar jammed	Clean brush bar of hair and debris Check for any obstructions preventing rotation

SPECIFICATIONS

- **Brand:** BLACK+DECKER

- **Model Name:** Powerseries Extreme (BSV2020P)
- **Special Feature:** Bagless
- **Filter Type:** Disk (Washable, Model BSVF1)
- **Surface Recommendation:** Carpet, Hard Floors
- **Power Source:** Battery Powered
- **Voltage:** 24 volts
- **Noise Level:** 60 dB
- **Runtime:** Approximately 1 hour
- **Form Factor:** Stick
- **Included Components:** Vacuum unit, Brush attachment, Replacement Filter

WARRANTY AND SUPPORT

BLACK+DECKER products are manufactured to high-quality standards and are guaranteed against manufacturing defects. For specific warranty details, including duration and terms, please refer to the warranty card included with your product or visit the official BLACK+DECKER website. For technical assistance, replacement parts, or service, please contact BLACK+DECKER customer support through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B08TS8D6R6>

More documents and user manuals: <https://manuals.plus/>