

[manuals.plus](#) /

› [WIITHINK](#) /

› [WIITHINK Portable CD Boombox WTB771 User Manual](#)

WIITHINK WTB771

WIITHINK Portable CD Boombox WTB771 User Manual

Model: WTB771

INTRODUCTION

This manual provides instructions for the operation and maintenance of your WIITHINK Portable CD Boombox, model WTB771. This device features multiple audio playback options including CD, FM radio, Bluetooth, USB, and AUX input, designed for versatile use.



Image: Front view of the WIITHINK Portable CD Boombox WTB771, black color, showing the display, control buttons, speakers, and handle.

PACKAGE CONTENTS

- 1 x WIITHINK Portable CD Radio Boombox (WTB771)
- 1 x Power Cable
- 1 x AUX Line
- 1 x User Manual
- 1 x Remote Control

SETUP

Power Supply

The boombox can be powered by AC power or batteries.

- **AC Power:** Connect the provided power cable to the AC port on the back of the unit and plug it into a standard wall outlet (AC voltage: 220V / 50Hz, 110V / 60Hz).
- **Battery Power:** For portable use, insert 4 C-sized batteries (not included) into the battery compartment located on the bottom of the unit. Ensure correct polarity.

PORTABLE CD PLAYER

AC or DC Supply



4 count C Cell Batteries (battery not included)

Image: Rear view of the boombox, highlighting the AC power port and the battery compartment for 4 C-sized batteries.

OPERATING INSTRUCTIONS

General Controls

The unit features a digital LCD screen and various control buttons and knobs. The main volume control is a rotary knob on the front. A remote control is also included for convenient operation.



FOR KIDS 
Study, listen to songs or stories



Image: Top-down view of the boombox, showing the CD compartment, control buttons, and volume knob.

1. CD Playback

1. Open the CD compartment lid located on the top of the unit.
2. Place a CD (CD, CD-R, CD-RW, MP3-CD) onto the spindle with the label side facing up.
3. Close the CD compartment lid.
4. Press the **MODE** button to select CD mode.
5. Press the **PLAY/PAUSE** button to begin playback.
6. Use the **SKIP/SEARCH** buttons to navigate between tracks.
7. The **REPEAT** button allows for repeating a single track or all tracks.
8. The **PROGRAM** function allows you to create a custom playback order for tracks.

The boombox supports MP3 and WMA audio formats on compatible discs.

2. FM Radio Operation

1. Extend the telescopic antenna for optimal reception.
2. Press the **MODE** button to select FM Radio mode.
3. To auto-scan and save stations, press and hold the **SCAN** button. The unit will automatically search for and store up to 30 FM stations.
4. To manually tune, use the **TUNING** knob or **SKIP/SEARCH** buttons to find desired frequencies.
5. Use the **PRESET** buttons to navigate through saved stations.

Your browser does not support the video tag.

Video: A user demonstrating the FM radio tuning function on the WIITHINK Portable CD Boombox WTB771, showing the digital display changing frequencies.

3. Bluetooth Connectivity

1. Press the **MODE** button to select Bluetooth mode. The display will indicate "BT" and the unit will enter pairing mode.
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), search for available devices and select "WTB771".
3. Once paired, you can stream audio wirelessly from your device to the boombox.

Your browser does not support the video tag.

Video: A short preview demonstrating Bluetooth connectivity, showing a smartphone wirelessly connected to the boombox.

4. USB Playback

1. Insert a USB flash drive containing MP3 files into the USB port on the front of the unit.
2. Press the **MODE** button to select USB mode.
3. The unit will automatically detect and begin playing MP3 files from the USB drive.
4. Use the playback controls (PLAY/PAUSE, SKIP/SEARCH) to manage your music.

5. AUX Input

1. Connect an external audio device (e.g., MP3 player, laptop) to the AUX input jack on the front of the unit using the provided 3.5mm AUX cable.
2. Press the **MODE** button to select AUX mode.
3. Audio from the connected device will now play through the boombox speakers. Control playback from your external device.

CONTROLS AND PORTS OVERVIEW

Feature	Description
Power Button	Turns the unit on/off.
MODE Button	Switches between CD, FM, Bluetooth, USB, and AUX modes.
Volume Knob	Adjusts the audio output level (up to 32 levels).
PLAY/PAUSE Button	Starts or pauses playback in CD, USB, and Bluetooth modes.
SKIP/SEARCH Buttons	Navigates tracks in CD/USB mode; tunes frequencies in FM mode.
REPEAT Button	Repeats current track or all tracks in CD/USB mode.
PROGRAM Button	Sets a custom playback order for CD/USB tracks.
FM Antenna	Telescopic antenna for FM radio reception.

Feature	Description
USB Port	Connects USB flash drives for MP3 playback.
AUX Input Jack	3.5mm input for connecting external audio devices.
Headphone Jack	3.5mm output for private listening.
Remote Control	Provides wireless control over all functions.



Image: Close-up of the front panel, showing the USB port, AUX input, and headphone jack.

MAINTENANCE

- Clean the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- Keep the CD compartment clean and free of dust.
- Avoid exposing the unit to extreme temperatures, humidity, or direct sunlight.
- When not in use for extended periods, remove batteries and unplug the AC power cable.

TROUBLESHOOTING

Problem	Solution
No Power	Ensure the AC power cable is securely connected to both the unit and a working power outlet. If using batteries, check if they are inserted correctly and are not depleted.
No Sound	Increase the volume using the volume knob or remote control. Check if the unit is in the correct mode (CD, FM, BT, USB, AUX). If using AUX, ensure the external device's volume is also turned up. If using headphones, ensure they are fully plugged in and functioning.
CD Skipping/Not Playing	Ensure the CD is clean and free of scratches or smudges. Verify the CD is inserted correctly with the label side up. Try a different CD to rule out disc issues.
Poor FM Reception	Fully extend and adjust the telescopic antenna. Relocate the unit to an area with better signal reception.
Bluetooth Pairing Issues	Ensure the boombox is in Bluetooth pairing mode ("BT" displayed). Make sure your device's Bluetooth is enabled and within range (approx. 10 meters). Forget "WTB771" from your device's Bluetooth list and try pairing again.

SPECIFICATIONS

- **Model:** WTB771
- **Product Dimensions:** 7 x 10 x 4.8 inches (17.8 x 25.4 x 12.2 cm)
- **Item Weight:** 2.64 pounds (1.2 kg)
- **Power Output:** 2 x 2W RMS
- **Connectivity:** Auxiliary, Bluetooth, USB
- **Speaker Type:** Built-In
- **Power Supply:** AC (220V/50Hz, 110V/60Hz) or 4 x C batteries (not included)
- **Supported Disc Types:** CD, CD-R, CD-RW, MP3-CD
- **Supported Audio Formats:** MP3, WMA
- **FM Radio Presets:** Up to 30 stations

WARRANTY AND SUPPORT

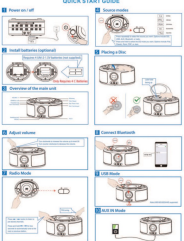
WIITHINK offers an 18-month after-sales service for this product. For any inquiries or technical support, please contact WIITHINK customer service through your purchase platform. Lifetime technical support is provided. For further assistance, you may refer to the "Your Orders" section on Amazon, locate your order, and contact "WIITHINK Direct".



Image: Graphic illustrating WIITHINK's customer support, including 18-month replacement and lifetime technical support.



Related Documents - WTB771

 A thumbnail image of the 'QUICK START GUIDE' for the WTB-791 CD Radio Boombox. The guide is a two-page spread with various diagrams and text. It includes sections for 'Power on/off', 'Battery installation', 'Overview of the main unit', 'Adjusting volume', 'Radio mode', 'Bluetooth connection', 'USB mode', and 'AUX IN mode'.	<p>Quick Start Guide for WTB-791 CD Radio Boombox</p> <p>A quick start guide for the WTB-791 CD Radio Boombox, detailing power on/off, battery installation, unit overview, source modes, placing a disc, adjusting volume, radio mode, Bluetooth connection, USB mode, and AUX IN mode.</p>
--	--