

Power4Laptops 1610004

Power4Laptops AC Adapter User Manual

FOR PACKARD BELL EASYONE 1550 LAPTOPS (MODEL: 1610004)

1. Introduction

Thank you for choosing the Power4Laptops AC Adapter. This manual provides essential information for the safe and effective use of your new power supply, compatible with Packard Bell EasyOne 1550 laptops. Please read these instructions carefully before use and retain them for future reference.

2. Safety Information and Warnings

To ensure safe operation and prevent damage, observe the following precautions:

- **For Indoor Use Only:** This adapter is designed for indoor environments. Do not expose it to rain, moisture, or extreme temperatures.
- **Dry Location Use Only:** Operate the adapter in dry conditions. Avoid use in humid or wet areas.
- **Risk of Shock Hazard:** Do not open the adapter casing. There are no user-serviceable parts inside.
- **Do Not Disassemble:** Attempting to disassemble the unit may result in electric shock or damage and will void any warranty.
- **Overvoltage and Overcurrent Protection:** The adapter includes built-in protection circuits. In the event of a power surge, these circuits are designed to fail before damaging your connected equipment.
- **Certifications:** This Power4Laptops product has undergone Electrical Safety Assessment Tests in the UK and holds a valid CE Certificate, authorizing its safe use in the EU. It is also RoHS compliant.
- Keep the adapter away from heat sources and ensure adequate ventilation.
- Do not use the adapter if the cables or casing are damaged.

3. Product Overview

The Power4Laptops AC Adapter (Model: 1610004) is a reliable power supply designed to charge your Packard Bell EasyOne 1550 laptop. It converts AC wall power to the DC power required by your device.



Image 1: Power4Laptops AC Adapter. This image displays the Power4Laptops AC-DC adapter. It features a black power brick with product labels and a black cable terminating in an L-shaped yellow-tipped DC connector, designed for connecting to a laptop.

Key features include:

- **Input:** AC 100-240V, 50-60Hz
- **Output:** DC 19V, 3.16A
- **Plug Size:** 5.5mm x 2.5mm
- **Safety:** Overvoltage and Overcurrent Protection, CE Certified, RoHS Compliant

4. Setup Instructions

1. **Unpack the Adapter:** Carefully remove the AC adapter from its packaging. Inspect it for any visible damage.
2. **Connect to Power Outlet:** Plug the AC power cord into a standard wall outlet (100-240V AC). Ensure the connection is secure.
3. **Connect to Laptop:** Insert the DC output plug (5.5mm x 2.5mm) into the power input port on your Packard Bell EasyOne 1550 laptop. The L-shaped connector is designed for a snug fit.
4. **Verify Connection:** Once connected, your laptop should indicate that it is receiving power or charging (e.g., a charging indicator light).

5. Operating Instructions

The Power4Laptops AC Adapter operates automatically once connected. It provides continuous power to your laptop and

charges its internal battery.

- **Charging:** When the adapter is connected to both a power outlet and your laptop, it will begin charging the laptop's battery.
- **Powering the Laptop:** The adapter can also power your laptop directly, even if the battery is fully charged or removed (if supported by the laptop model).
- **Disconnection:** To disconnect, first unplug the DC connector from your laptop, then unplug the AC power cord from the wall outlet.

6. Maintenance

Proper maintenance ensures the longevity and safe operation of your AC adapter.

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Cable Care:** Avoid bending or crimping the cables excessively, especially near the connectors. Do not place heavy objects on the cables.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly wrapping the cables.

7. Troubleshooting

If you encounter issues with your AC adapter, try the following basic troubleshooting steps:

- **Laptop Not Charging:**
 - Ensure both the AC power cord and the DC output plug are securely connected.
 - Try plugging the adapter into a different wall outlet to rule out a faulty outlet.
 - Check the adapter's cables for any visible damage or fraying.
- **Adapter Feels Hot:** It is normal for the adapter to feel warm during operation. However, if it becomes excessively hot to the touch, disconnect it immediately and allow it to cool. Ensure it is in a well-ventilated area.
- **No Power Indicator on Laptop:** Confirm the adapter is correctly plugged into both the wall and the laptop. If the issue persists, the adapter may be faulty, or there could be an issue with the laptop's power input.

If these steps do not resolve the issue, discontinue use and contact the manufacturer or seller for further assistance.

8. Specifications

Feature	Specification
Model Number	1610004
Input Voltage	AC 100-240V
Input Frequency	50-60Hz
Output Voltage	DC 19V
Output Amperage	3.16A
Plug Size	5.5mm x 2.5mm

Item Weight	12.7 ounces (360 Grams)
Manufacturer	Power4Laptops
Certifications	CE, RoHS Compliant

9. Warranty and Support

For information regarding warranty coverage and customer support, please refer to the documentation provided at the time of purchase or contact your seller directly. Power4Laptops products are designed for reliability and safety, backed by their commitment to quality.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question