

BOOSTER Lightsaber SV

BOOSTER Lightsaber SV Professional Massage Gun

User Manual

Model: Lightsaber SV | Brand: BOOSTER

INTRODUCTION

Thank you for choosing the BOOSTER Lightsaber SV Professional Massage Gun. This device is designed to provide deep tissue percussive massage, aiding in muscle recovery, pain relief, and relaxation. Please read this manual carefully before using the product to ensure safe and effective operation. Keep this manual for future reference.

IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, fire, and injury, this product must be used in accordance with the following instructions:

- Do not use the device on broken or irritated skin.
- Do not use the device for more than 15 minutes at a time. Allow the device to cool down before subsequent use.
- Keep the device away from water and other liquids. Do not immerse the device in water.
- Clean the device regularly with a damp cloth and allow it to dry completely before storing.
- This device is for adult use only. Keep out of reach of children.
- Consult a physician before use if you have any medical conditions, are pregnant, or have a pacemaker.
- Do not operate under blankets or pillows. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Never use the device directly on hard parts of the body such as bones, joints, or the head.
- Do not block the ventilation openings.

PACKAGE CONTENTS

Please check the package contents upon unboxing:

- 1 x BOOSTER Lightsaber SV Massage Gun
- 1 x Type-C Charging Cable
- 6 x Interchangeable Massage Heads (including 1 metal massage head)
- 1 x Storage Bag
- 1 x User Manual

SETUP

1. Charging the Device

Before first use, fully charge the massage gun. Connect the Type-C charging cable to the device's charging port and plug the other end into a compatible power adapter (not included). The battery indicator will show charging status. A full charge typically takes 3.5-5 hours.

2. Attaching Massage Heads

Ensure the device is turned off before attaching or detaching massage heads. Simply push the desired massage head firmly into the opening at the front of the gun. To remove, pull the head straight out.



Image: The massage gun showing its control panel with 5 speed indicators and vibration mode indicators. This image illustrates the main body of the device and its interface.

OPERATING INSTRUCTIONS

1. **Power On:** Press and hold the power button (usually the central button) to turn on the device.
2. **Select Speed:** Once powered on, press the power button briefly to cycle through the 5 available speed levels (1300-3300 RPM). Choose a speed that is comfortable for your personal preference and the target body area.
3. **Apply Massage:** Apply light pressure to the skin and move the device slowly over the target area. The device features Smart-Hit technology, which intelligently adjusts pressure, torque, and motor speed based on the resistance encountered.
4. **Massage Duration:** Do not use the device for more than 15 minutes at a time on a single area. For general muscle activation, slide the gun over a muscle group for 30 seconds. For deeper pain relief, use for up to 2 minutes.
5. **Power Off:** Press and hold the power button again to turn off the device.



Tecnologia Smart-hit de modo padrão

Ajuste de 5 velocidades,
900-3300rpm



Pressione e segure para alternar o modo

Automatic mode

||| Vibração de dissipação

A diminuição da intensidade da vibração é adequada para o relaxamento muscular após o exercício.

||| Vibração crescente

O aumento da intensidade da vibração é adequado para a ativação dos músculos antes do exercício.

~ Vibração ondular

A flutuação da vibração é adequada para diversos cenários de relaxamento.

Image: Diagram illustrating the Smart-Hit standard mode with 5 speeds (900-3300rpm) and automatic modes including dissipating vibration, increasing vibration, and undulating vibration, explaining their uses for post-exercise relaxation, pre-exercise activation, and general relaxation.

Ativação dos músculos em 30 segundos e recuperação da dor em 2 minutos

Deslize a pistola de fáscia próxima ao mesmo grupamento de músculos por 30 segundos, permitindo que você facilmente rejuvenesça seu corpo. Após 2 minutos de uso, você sentirá uma profunda experiência de alívio da dor, deixando todo o corpo relaxado e restaurando a vitalidade.



Image: A person using the massage gun on their shoulder, demonstrating proper application. Text indicates muscle activation in 30 seconds and pain recovery in 2 minutes.

MASSAGE MODES AND SPEED LEVELS

The BOOSTER Lightsaber SV offers 5 speed levels and various Smart-Hit automatic modes to customize your massage experience:

- **Speed Levels (1-5):** Ranging from 1300 RPM to 3300 RPM, these levels allow you to adjust the intensity of the percussive massage.
- **Smart-Hit Standard Mode:** Provides a consistent percussive massage at the selected speed.
- **Automatic Modes (Press and hold to alternate):**
 - **Dissipating Vibration:** Decreases vibration intensity, suitable for muscle relaxation after exercise.

- **Increasing Vibration:** Increases vibration intensity, suitable for muscle activation before exercise.
- **Undulating Vibration:** Fluctuating vibration, suitable for various relaxation scenarios.


Interchangeable Massage Heads

The device comes with 6 different massage heads, each designed for specific muscle groups and massage types:

- **Ball Head:** For large muscle groups like arms, back, hips, thighs, calves.
- **Flat Head:** For general full-body relaxation.
- **Bullet Head:** For deep tissue, trigger points, and small muscle areas like feet and joints.
- **Fork Head:** For spine, neck, and Achilles tendon.
- **Metal Head:** For sensitive areas or use with massage oils.
- **Cone Head:** For precise deep tissue work on specific points.

80mm de profundidade de massagem

Permeia facilmente um grande grupo de músculos

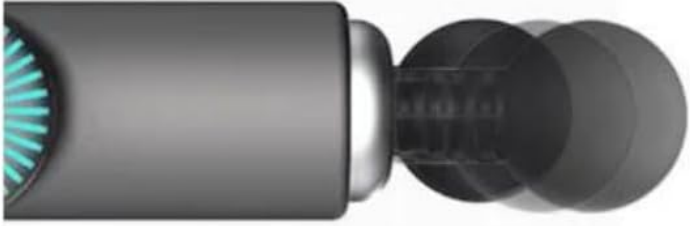

Tripla redução de ruído

Derrote as dores nas costas



Tecnologia Smart-Hit

Novos modos de prensagem inteligentes

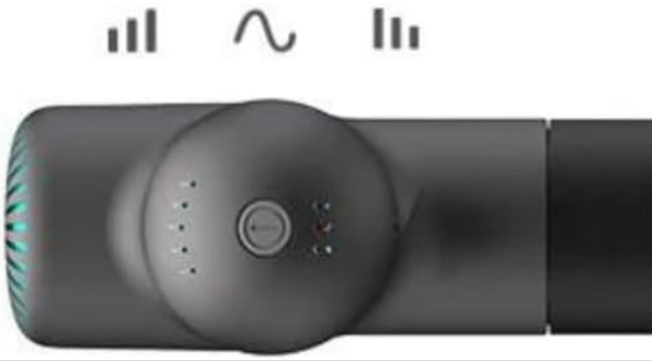


Image: Diagram illustrating the 80mm massage depth for large muscle groups and the Smart-Hit technology for intelligent pressing modes.

MAINTENANCE

- **Cleaning:** Always turn off and unplug the device before cleaning. Wipe the surface of the massage gun with a slightly damp cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the device in its storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is low or depleted.	Charge the device fully using the provided Type-C cable.
Device stops during use.	Overheating protection activated. / Battery is low.	Allow the device to cool down for 30 minutes. / Charge the device.
Weak massage intensity.	Low speed setting. / Incorrect massage head.	Increase the speed level. / Ensure the appropriate massage head is used for the target area.
Unusual noise or vibration.	Massage head not properly attached. / Internal malfunction.	Re-attach the massage head firmly. If the issue persists, discontinue use and contact customer support.

PRODUCT SPECIFICATIONS

Product Dimensions	260 x 190 x 60 mm (10.2 x 7.5 x 2.4 inches)
Product Weight	1.08 kg (2.38 lbs)
Rotation Speed	1300-3300 RPM (5 speed levels)
Battery Capacity	4000 mAh
Motor Power	125W
Max Pressure	15 KG
Stroke Length	10 mm
Noise Level	<50 dB
Battery Duration	3.5-5 hours
Material	ABS
Power Source	AC/DC (Bivolt)

Charger Input	100-240V~50/60Hz, 24W
Charger Output	24V/1A
Special Features	Speed Control, Rechargeable, Smart-Hit Technology

Informações do Produto

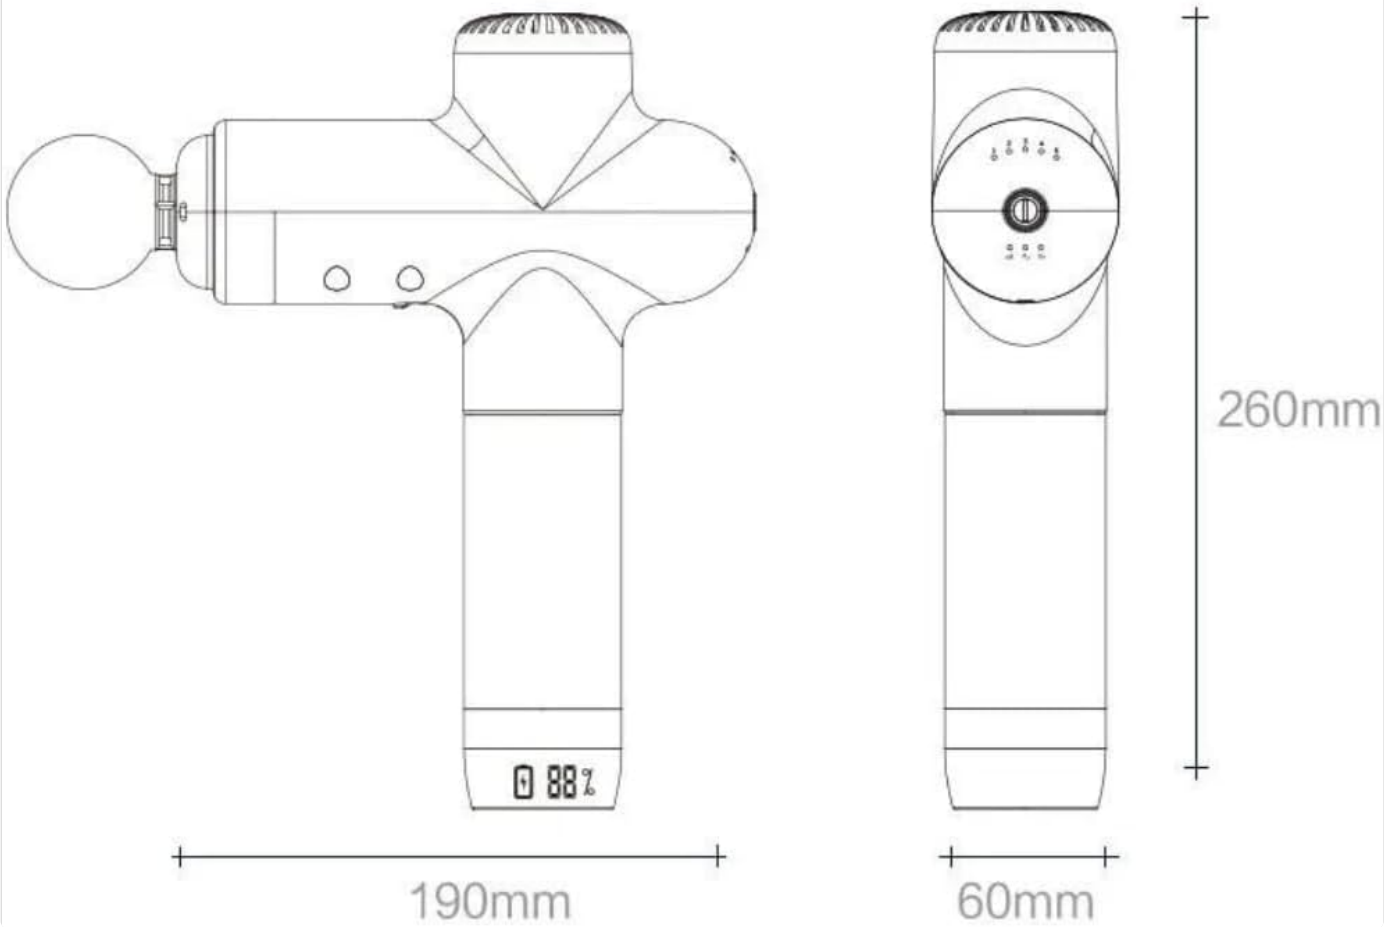


Image: Technical drawing showing the dimensions of the massage gun: 260mm height, 190mm length, and 60mm width.

Carregador

Entrada nominal	100-240V~50/60Hz, 24W
Saída nominal	24V/1A

Bateria

Tensão nominal	21.6V 6INR19/66
Tipo	Bateria de lítio
Capacidade	2400mAh

Pistola de Massagem

Frequência	1300-3300 rpm
Traço	10mm
Peso	1.08kg
Potência	125W máx
Dimensões	260*190*60mm

Image: Detailed specifications for the charger (input/output), battery (voltage, type, capacity), and massage gun (frequency, stroke, weight, power, dimensions).

WARRANTY INFORMATION

The BOOSTER Lightsaber SV Professional Massage Gun comes with a standard manufacturer's warranty. Please refer to your purchase receipt or contact your retailer for specific warranty terms and conditions. The warranty typically covers defects in materials and workmanship under normal use.

Note: Damage caused by improper use, accidents, unauthorized repairs, or failure to follow instructions in this manual may void the warranty.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your BOOSTER Lightsaber SV Professional Massage Gun, please contact our customer support team or your retailer. Please have your model number and purchase information ready when contacting support.

For the most up-to-date support information, please visit the official BOOSTER website or the retailer's support page where you purchased the product.

© 2023 BOOSTER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question