



Manuals.plus /

- › Costzon /
- › Costzon Kids Kitchen Playset Instruction Manual

Costzon TY327903

Costzon Kids Kitchen Playset - Instruction Manual

Model: TY327903 | Brand: Costzon

INTRODUCTION

The Costzon Kids Kitchen Playset is designed to provide a realistic and imaginative cooking experience for children aged 3 and up. This wooden pretend kitchen features various interactive elements and ample storage, promoting creativity, fine motor skills, and basic life skills through engaging role-play.



Figure 1: The Costzon Kids Kitchen Playset, showcasing its natural wood and white design with various play features.

SETUP AND ASSEMBLY

The Costzon Kids Kitchen Playset is designed for straightforward assembly. All necessary hardware and an easy-to-follow user guide are included to ensure a smooth setup process.

Assembly Steps

1. Unpack all components and verify against the parts list in the included user guide.
2. Follow the step-by-step instructions to connect the main kitchen frame, ensuring all screws are securely fastened.
3. Attach the sink, faucet, stove burners, and control knobs to the main countertop.
4. Install the microwave, refrigerator doors, and any shelving units.

5. Place the included accessories (pots, pans, utensils) in their designated areas.



Figure 2: The assembled kitchen playset positioned in a child's play area.

OPERATING INSTRUCTIONS

The Costzon Kitchen Playset offers a variety of interactive elements for an immersive play experience, encouraging imaginative role-play and skill development.

Realistic Play Features

- **Stove and Oven:** Turn the realistic stove knobs to simulate cooking sounds. The oven door opens to reveal storage space for play food.
- **Sink and Faucet:** The faucet knobs turn, and the stainless steel sink basin is removable for easy cleaning.
- **Refrigerator:** Open the refrigerator door to access internal storage. The water dispenser features simulated sounds and lights for added realism.
- **Telephone:** Use the vintage-style telephone for pretend calls, enhancing imaginative role-play scenarios.

- **Clock:** The clock on the refrigerator has movable hands, allowing children to learn about telling time in a fun, interactive way.

Realistic Pretend Cooking Game



● Simulation Knob



● Retro Telephone



● Removable Sink



● Lighted Water Dispenser with Sound

Figure 3: Close-up view of the kitchen playset's interactive elements, including simulation knobs, a retro telephone, a removable sink, and a lighted water dispenser with sound.



Complete Kitchen Set



Sturdy & Durable



Highly Realistic



Easy to Assemble

Figure 4: The playset features ample storage with open shelves, a practical drawer, and a large cabinet with a door, helping children organize their play accessories.

Wooden Kid Kitchen Toy



Figure 5: An illustration highlighting the included components: microwave, oven, refrigerator, sink + faucet, water dispenser, telephone, kitchenware, and clock.

MAINTENANCE AND CARE

To ensure the longevity and cleanliness of your Costzon Kids Kitchen Playset, follow these simple maintenance guidelines:

- **Cleaning:** Wipe down all surfaces with a damp cloth and mild soap as needed. The smooth finish makes it easy to clean spills and dirt. Avoid abrasive cleaners.
- **Removable Parts:** Regularly remove and clean the sink basin.
- **Battery Replacement:** If the water dispenser sounds or lights diminish, replace the batteries located behind the dispenser unit (refer to the original user guide for specific battery type and replacement instructions).
- **Inspection:** Periodically check all screws and connections to ensure they remain tight and secure. Tighten any loose fittings to maintain stability.

TROUBLESHOOTING

This section addresses common issues you might encounter with your playset.

Common Issues and Solutions

- **Loose Connections:** If any parts feel wobbly, re-tighten the screws using a screwdriver.
- **Sticking Doors/Drawers:** Ensure no foreign objects are obstructing the hinges or tracks. A small amount of silicone spray (avoiding contact with play surfaces) can help if friction is an issue.
- **Water Dispenser Not Working:** Check and replace batteries if the lights or sounds are not functioning. Ensure the button is fully pressed.

For issues not covered here, please contact Costzon customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Product Dimensions	11.5 x 11.5 x 32 inches
Item Weight	29.5 pounds
Country of Origin	China
Item Model Number	TY327903
Manufacturer Recommended Age	36 months - 7 years
Material	MDF, PP
Certifications	ASTM
Included Accessories	1 pan, 1 pot, 3 spatulas, vintage telephone

Wooden Kid Kitchen Toy

Product Spec



Suitable Age: 3 years+



Net Weight: 29.5 lbs



Figure 6: Detailed dimensions of the Costzon Kids Kitchen Playset.

WARRANTY AND CUSTOMER SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the original packaging or contact Costzon directly through their official website or customer service channels. Visit the official Costzon Store: Costzon Store on Amazon.