

[manuals.plus](#) /

› [TIMEMORE](#) /

› [TIMEMORE Chestnut G1 Plus Manual Coffee Grinder User Manual](#)

TIMEMORE Chestnut G1 Plus

TIMEMORE Chestnut G1 Plus Manual Coffee Grinder User Manual

Model: G1 Plus

Brand: TIMEMORE

INTRODUCTION

This manual provides instructions for the safe and efficient operation, maintenance, and care of your TIMEMORE Chestnut G1 Plus Manual Coffee Grinder. Please read this manual thoroughly before first use and retain it for future reference.

Safety Information

- Keep out of reach of children.
- Do not immerse the grinder in water.
- Use only for grinding roasted coffee beans.
- Handle burrs with care as they are sharp.

PRODUCT OVERVIEW

The TIMEMORE Chestnut G1 Plus is a high-quality manual coffee grinder designed for consistent and uniform grinding. It features a unique square-round aluminum alloy body, a walnut wood handle, and titanium-coated E&B burrs.

Key Features

- **Titanium Coated E&B Stainless Steel Burrs:** Designed for both espresso and brewing, offering high grinding efficiency and uniformity.
- **Adjustable Grind Setting:** 36-click internal adjustment dial for various brewing methods (espresso, pour over, French press).
- **Durable Construction:** Aluminum alloy body with walnut wood accents for comfortable grip and aesthetic appeal.
- **Labor-Saving Design:** Ergonomic handle and sharp burrs contribute to smooth and easy grinding.

Components

The TIMEMORE Chestnut G1 Plus typically includes:

- Grinder Body (with integrated burr set)
- Handle
- Walnut Wood Powder Container
- Cleaning Brush
- Canvas Carrying Bag



Image: The TIMEMORE Chestnut G1 Plus Manual Coffee Grinder, showcasing its sleek design and walnut wood accents.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Inspect:** Check for any damage during transit.

- Initial Cleaning:** Before first use, wipe down the exterior with a damp cloth. Use the provided brush to clean the burrs and powder container to remove any manufacturing residue.
- Assemble Handle:** Attach the handle to the grinder shaft. Ensure it is securely fitted.

OPERATING INSTRUCTIONS

Adjusting Grind Size

The G1 Plus features an internal grind adjustment mechanism.

- Remove the handle and the top lid.
- Turn the adjustment dial located beneath the burrs. Turning clockwise results in a finer grind, and counter-clockwise results in a coarser grind.
- Refer to the table below for recommended starting points. Each click represents a step in grind size.



Image: Close-up of the internal grind adjustment dial and visual examples of fine, medium, medium-coarse, and coarse coffee grounds.

Recommended Grind Settings (Starting Points)

Brewing Method	Grind Size	Clicks (Approx.)
Espresso	Very Fine	6-12
Pour Over	Medium	18-24
French Press	Coarse	28-36

Note: These are starting recommendations. Adjust based on your specific brewing equipment and taste preference.

Grinding Coffee

- Load Beans:** Open the top lid and pour roasted coffee beans into the hopper. The capacity is approximately 25g.
- Secure Lid:** Place the lid back on and ensure it is secure.

3. **Grind:** Hold the grinder body firmly with one hand and rotate the handle clockwise with the other. Continue grinding until all beans have passed through the burrs and into the powder container.
4. **Collect Grounds:** Unscrew the bottom powder container to access your freshly ground coffee.



Image: The TIMEMORE Chestnut G1 Plus grinder in operation, demonstrating the handle and body design.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your grinder.

Daily Cleaning

- After each use, tap the grinder gently to dislodge any remaining coffee grounds.
- Use the provided cleaning brush to sweep out any fine particles from the burrs and powder container.

Deep Cleaning (Monthly or as needed)

1. **Disassemble:** Remove the handle, top lid, and unscrew the powder container.
2. **Brush Burrs:** Use the cleaning brush to thoroughly clean the inner and outer burrs. You may need to adjust the grind setting to its coarsest to better access the burrs.
3. **Clean Body:** Wipe the aluminum alloy body with a soft, damp cloth. Do not use abrasive cleaners.
4. **Clean Wood Parts:** Wipe the walnut wood handle and powder container with a dry or slightly damp cloth. Avoid excessive moisture.
5. **Reassemble:** Ensure all parts are dry before reassembling the grinder.

Warning: Do not wash the grinder body or burr assembly with water. Water can cause rust and damage the internal mechanism.

TROUBLESHOOTING

Problem: Grinder feels difficult to turn.

Solution: Check if the grind setting is too fine for the type of beans. Try adjusting to a coarser setting. Ensure no foreign objects are in the burrs.

Problem: Inconsistent grind size.

Solution: Ensure the grind adjustment dial is securely set and has not shifted. Perform a deep clean to remove any accumulated coffee oils or particles that might be affecting burr alignment.

Problem: Grinder is not grinding beans.

Solution: Check if the hopper is empty. Ensure the burrs are not clogged. If the burrs are completely seized, contact customer support.

SPECIFICATIONS

Brand: TIMEMORE

Model: Chestnut G1 Plus

Material: Aluminum Alloy, Walnut Wood, Stainless Steel (Titanium Coated Burrs)

Burr Type: E&B (Espresso & Brewing) Titanium Coated Stainless Steel

Capacity: Approximately 25g coffee beans

Grind Settings: 36 clicks

Item Weight: 560 Grams (1.23 pounds)

Dimensions: Approximately 7.68 x 5.2 x 3.11 inches (Package Dimensions)

UPC: 750139511518


WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official TIMEMORE website or contact their customer service department. Keep your purchase receipt as proof of purchase.

Website: www.timemore.com

Contact: Refer to the website for current contact methods.


Related Documents - Chestnut G1 Plus

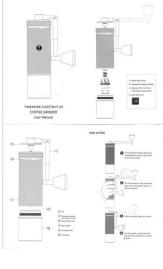	<p>TIMEMORE Chestnut C3 Series Coffee Grinder User Manual</p> <p>User manual for the TIMEMORE Chestnut C3 Series coffee grinder. Learn how to grind coffee, adjust grind settings for various brewing methods (espresso, pour-over, French press), and find troubleshooting tips. Features include an all-metal body, anti-slip grip, and precise S2C660 burrs.</p>
	<p>TIMEMORE CHESTNUT S3 Coffee Grinder User Manual - Foldable & Adjustable Hand Grinder</p> <p>Official user manual for the TIMEMORE CHESTNUT S3 Coffee Grinder. Learn how to use, adjust grind settings, fold the handle, and troubleshoot this high-quality hand grinder with S2C 890 burrs.</p>




[TIMEMORE Chestnut C3S Pro & C3 ESP Pro Manual Coffee Grinder User Manual](#)

User manual for the TIMEMORE Chestnut C3S Pro and C3 ESP Pro manual coffee grinders, covering features, assembly, folding, grinding, grind adjustment, troubleshooting, and warranty information. Features include an all-metal body, S2C 660 burrs, and a foldable handle.

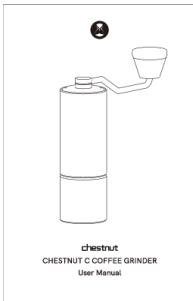

[Timemore Chestnut C Coffee Grinder User Manual](#)

User manual for the Timemore Chestnut C Coffee Grinder, detailing its features, assembly, operation, adjustment, and troubleshooting.

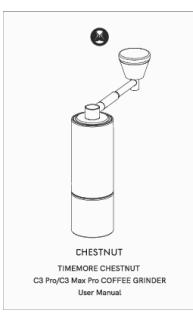

[TIMEMORE Chestnut C3 Pro/C3 Max Pro Coffee Grinder User Manual](#)

A comprehensive user manual for the TIMEMORE Chestnut C3 Pro and C3 Max Pro coffee grinders, detailing features, folding instructions, grinding operation, grind adjustment, cautions, troubleshooting, and warranty information.



[Timemore Chestnut C3 ESP PRO Coffee Grinder - Features and Specifications](#)

Discover the Timemore Chestnut C3 ESP PRO, a professional manual coffee grinder featuring sharp S2C 660 burrs, precise CNC cutting, dual bearings for stability, and adjustable coarseness for various brewing methods. Learn about its materials, dimensions, and usage precautions.