

Cecotec GrandHeat 2590

Cecotec GrandHeat 2590 Built-in Digital Microwave Oven User Manual

Model: GrandHeat 2590 (Reference: 01402)

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Cecotec GrandHeat 2590 Built-in Digital Microwave Oven. Please read these instructions carefully before operating the appliance and retain them for future reference.

2. SAFETY INSTRUCTIONS

To prevent potential hazards and ensure proper operation, observe the following safety guidelines:

- Do not attempt to operate this oven with the door open, as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door, or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the door (bent), hinges and latches (broken or loosened), or door seals and sealing surfaces.
- Only qualified service personnel should adjust or repair this oven.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers, as they are liable to explode.
- Always use microwave-safe cookware.
- Supervise children when they use the microwave.

3. PRODUCT OVERVIEW

The Cecotec GrandHeat 2590 is a 25-liter built-in digital microwave oven with 900W microwave power and a 1000W grill.

It features a sleek black glass design with rose metallic details.

Components


- Microwave Oven Unit
- Glass Turntable (Diameter: 31.5 cm)
- Metal Grill Rack
- User Manual



This image displays the front of the Cecotec GrandHeat 2590 Built-in Digital Microwave Oven, featuring its sleek black glass door and integrated digital control panel.



This image provides a detailed look at the control panel, featuring the digital display, rotary dial, and various function buttons.

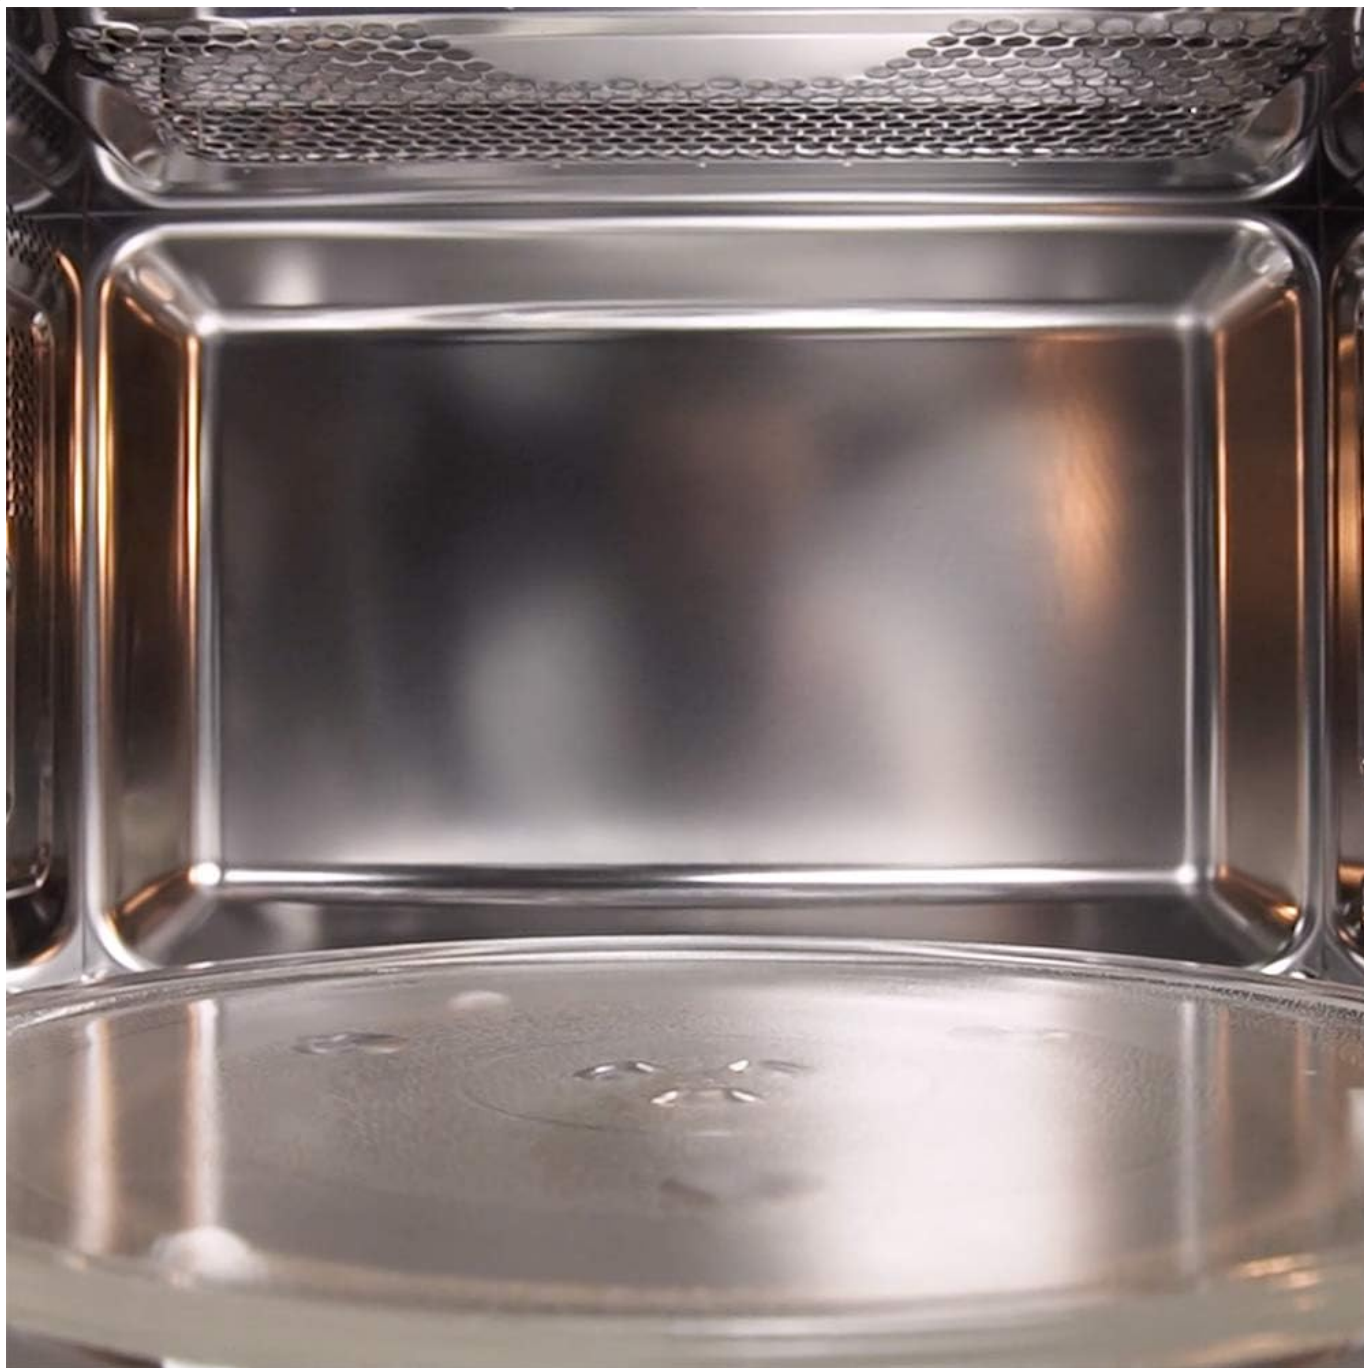

A clear view of the microwave's stainless steel interior and the removable glass turntable, ready for food placement.

4. SETUP AND INSTALLATION

The GrandHeat 2590 is designed for built-in installation. Ensure adequate ventilation space around the appliance as specified in the installation diagram.

Installation Dimensions

Refer to the diagram below for precise measurements required for cabinet integration.



A technical drawing illustrating the external dimensions of the microwave oven, including width, height, and depth, crucial for installation.

- **Product Dimensions (L x W x H):** 65.4 x 49.8 x 45.9 cm
- **Approximate Built-in Dimensions (W x H x D):** 59.5 x 40 x 38.8 cm (Refer to diagram for exact cutout dimensions)

Initial Setup

1. Unpack the microwave oven and all accessories.
2. Clean the oven cavity and accessories with a damp cloth.
3. Place the glass turntable on the turntable support within the oven cavity.
4. Ensure the microwave is securely installed in its designated cabinet space.
5. Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

The GrandHeat 2590 offers various cooking functions for convenience.

Basic Microwave Operation

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Use the rotary dial to select the desired cooking time and power level (900W maximum, 5 levels available).
4. Press the Start button to begin cooking.

Grill Function

The 1000W grill function is ideal for browning and crisping food.

1. Place food on the metal grill rack (if desired) or directly on the turntable.
2. Select the grill function and set the desired cooking time.
3. Press the Start button.

Combined Functions

The oven can combine microwave and grill functions for versatile cooking.

- Refer to the specific combination settings in the full manual for detailed instructions.

Preset Functions

The oven includes 8 predefined functions for common food types:

- Reheat
- Vegetables
- Fish
- Meat
- Pasta
- Pizza
- Soup
- Auto (for specific food types, consult the full manual)

Defrost Function

Defrost food quickly and evenly by time or weight.

- Select the defrost function.
- Choose defrost by time or by weight.
- Adjust the time or weight using the rotary dial.
- Press the Start button.

Quick Start and Timer

- **Quick Start:** Begin cooking immediately at maximum power for a preset duration (e.g., 30 seconds per press).
- **Automatic Start/Timer:** Program the oven to start a cooking program at a specific time. The timer can be set for up to 95 minutes.

Child Safety Lock

Activate the child safety lock to prevent accidental operation. Refer to the full manual for activation and deactivation steps.



The microwave is shown with its interior light on, indicating active operation, and the digital display showing a countdown.

6. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your microwave oven.

General Cleaning

- Always unplug the appliance before cleaning.
- Clean the oven cavity, door, and door seals regularly with a damp cloth and mild detergent. Avoid abrasive cleaners.
- The glass turntable can be removed and washed with warm soapy water or in a dishwasher.
- Wipe the exterior surfaces with a soft, damp cloth.

Odor Removal

To remove odors from the oven cavity, combine a cup of water with the juice and peel of one lemon in a microwave-safe

bowl. Microwave on high for 5 minutes, then let it stand in the oven for another 5 minutes before removing and wiping the interior.

7. TROUBLESHOOTING

If you encounter issues with your microwave, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker.
Food not heating	Incorrect cooking time or power level set; Microwave-safe cookware not used.	Adjust cooking time and power level; Use appropriate microwave-safe dishes.
Turntable not rotating	Turntable not properly seated; Obstruction under turntable.	Ensure turntable is correctly positioned on its support; Remove any obstructions.
Unusual noise during operation	Food container touching oven walls; Turntable not centered.	Adjust food container position; Re-center the turntable.

If problems persist after attempting these solutions, contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Cecotec
Model Name	GrandHeat 2590
Model Number	01402
Type	Built-in Digital Microwave Oven with Grill
Capacity	25 Litres
Microwave Power	900 Watts (5 power levels)
Grill Power	1000 Watts
Voltage	230 Volts
Product Dimensions (L x W x H)	65.4 x 49.8 x 45.9 cm
Turntable Diameter	31.5 cm
Material (Exterior)	Glass
Material (Interior)	Stainless Steel

Feature	Specification
Color	Black / Rose
Special Features	Timer, Turntable, Programmable, Quick Start, Child Safety Lock

9. WARRANTY AND SUPPORT

Cecotec is committed to providing quality products. This appliance is covered by a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

Spare Parts Availability

Spare parts for the Cecotec GrandHeat 2590 are available for a period of 10 years from the date of purchase.

Customer Support

For technical assistance, warranty claims, or to inquire about spare parts, please contact Cecotec customer support through their official website or the contact information provided in your product documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question