

[Manuals.plus](#) /

› [monkeyD](#) /

› monkeyD Magnetic Digital Timer User Manual B08TZJL2NW

monkeyD B08TZJL2NW

monkeyD Magnetic Digital Timer User Manual

Model: B08TZJL2NW

INTRODUCTION

Thank you for choosing the monkeyD Magnetic Digital Timer. This electronic countdown and count-up timer is designed for various applications, including cooking, studying, and managing time efficiently. It features a clear LED digital display, magnetic installation, and adjustable alarm sound modes. Please read this manual carefully to ensure proper use and maintenance of your device.



Front view of the monkeyD Magnetic Digital Timer, displaying '05:28' in minutes and seconds.



The timer being used in various settings such as cooking, meetings, cosmetology, classroom teaching, yoga, game time, dinner, and during sleep.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the timer.
2. Open the battery cover by sliding or gently prying it off.
3. Insert 3 AAA batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery cover securely.

Magnetic design
LED Digital display
Counting up and down



The back of the timer, illustrating the magnetic design for attachment to metal surfaces and the battery compartment.

2. Initial Power On

After installing the batteries, the LED display should illuminate, indicating the timer is ready for use.

OPERATING INSTRUCTIONS

1. Setting the Timer (Countdown)

- To set the desired time, rotate the outer ring of the timer.
- Rotating clockwise increases the time, and rotating counter-clockwise decreases it.
- The timer adjusts in 5-second increments for quick setting.
- The maximum timing range is 99 minutes and 55 seconds.
- Once the desired time is displayed, press the button on the front face to start the countdown.

Easy rotation

The Elderly grandma and 5-year-old kids can use it easily



A hand demonstrating the easy rotation feature of the timer to set the desired time.

2. Starting, Pausing, and Stopping

- **Start:** Press the button on the front face once to begin the countdown.
- **Pause:** During a countdown, press the button once to pause the timer.
- **Resume:** While paused, press the button again to resume the countdown.
- **Stop/Reset:** To stop and reset the timer to zero, press and hold the button for approximately 3 seconds.

3. Counting Up (Stopwatch Mode)

- From the reset state (00:00 displayed), press the button on the front face once to start counting up.
- The timer will count up from 00:00.
- To pause the count-up, press the button once. Press again to resume.
- To reset the stopwatch, press and hold the button for approximately 3 seconds.


4. Alarm Sound Modes

The timer offers three alarm sound modes, which can be adjusted using the switch on the back of the device:

1. **Loud Mode (80-90dB):** Suitable for noisy environments or when you need a strong reminder.
2. **Normal Mode (60-75dB):** Standard alarm volume for general use.
3. **Mute/Silent Mode:** The alarm will flash visually without producing sound, ideal for quiet environments like libraries or study areas.

3 levels alarm sound mode

Humanized reminded without affecting others

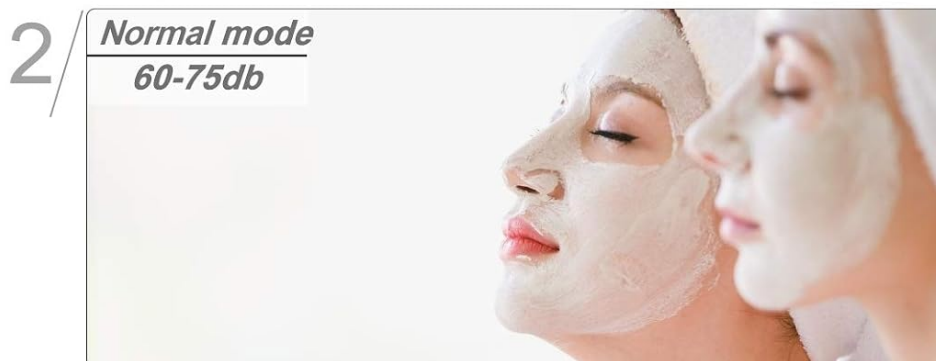

An illustration detailing the three alarm sound modes (Loud, Normal, Mute) and their corresponding decibel ranges, with a switch on the back of the timer.

5. Magnetic Mounting

The timer features a strong magnetic back, allowing it to be conveniently attached to metal surfaces such as refrigerators, whiteboards, or oven doors. This keeps your timer visible and accessible.

MAINTENANCE

Cleaning

Wipe the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

Battery Replacement

When the display dims or the timer functions erratically, it is time to replace the batteries. Follow the battery installation steps in the Setup section.

TROUBLESHOOTING

- **Timer not turning on:** Ensure batteries are installed correctly with proper polarity and are not depleted. Replace batteries if necessary.
- **Display is dim or flickering:** This indicates low battery power. Replace the batteries.
- **Alarm not sounding:** Check the alarm sound mode switch on the back of the timer. Ensure it is not set to Mute mode.
- **Timer not responding to rotation:** Ensure the timer is not paused or in an error state. Try resetting the timer by holding the front button for 3 seconds.

SPECIFICATIONS

Feature	Detail
Brand	monkeyD
Model	B08TZJL2NW
Material	Acrylonitrile Butadiene Styrene (ABS)
Timing Range	0-99 minutes, 0-55 seconds
Adjustment	Rotary knob, 5-second increments
Display	LED Digital Display
Functions	Countdown, Count-up (Stopwatch)
Alarm Modes	Loud (80-90dB), Normal (60-75dB), Mute
Mounting	Magnetic back
Power Source	3 x AAA Batteries (not included)
Dimensions	4.88 x 3.98 x 1.46 inches (Package)
Item Weight	5.3 ounces

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact the retailer where the product was purchased. You may also visit the official monkeyD website for further assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question