

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › **DIGIQUEST** /
- › **Digiquest DVB-T2 G9 Terrestrial Digital Decoder User Manual**

## DIGIQUEST 0569549

# Digiquest DVB-T2 G9 Terrestrial Digital Decoder

Model: 0569549

## INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of your Digiquest DVB-T2 G9 Terrestrial Digital Decoder. This device allows you to receive Full HD digital terrestrial television channels and offers media playback capabilities. Please read this manual carefully before using the product.



Image: Front view of the Digiquest DVB-T2 G9 Digital Decoder.

## PACKAGE CONTENTS

Verify that all the following items are included in your package:



Image: Diagram showing the contents included in the Digiquest DVB-T2 G9 package.

- **Receiver:** Digiquest DVB-T2 G9 Digital Terrestrial Receiver.
- **Power Supply:** AC adapter for powering the receiver.
- **Dual Remote Controls:** One standard remote and one simplified remote with large buttons.
- **Quick Start Guide:** A brief guide for initial setup.
- **User Manual:** This comprehensive instruction manual.

## PRODUCT OVERVIEW

---

### Connections

Familiarize yourself with the connection ports on the rear and side panels of your decoder:



Image: Diagram illustrating the various connection ports on the Digiquest DVB-T2 G9 decoder.

1. **RF IN:** Terrestrial antenna input for receiving digital TV signals.
2. **LAN:** Ethernet port for FTP updates and network applications.
3. **HDMI:** HDMI cable input for high-definition video and audio output to your TV.
4. **SCART TV:** SCART output for connecting to older generation televisions.
5. **DC 12V:** Power input for the external power supply.
6. **USB 2.0 (Lateral):** USB port for media playback and software updates.

### Remote Controls

The Digiquest DVB-T2 G9 comes with two remote controls: a standard remote for full functionality and a simplified remote with large buttons for ease of use.



Image: The two remote controls included with the Digiquest DVB-T2 G9 decoder: a standard remote and a simplified remote with large buttons.

## SETUP

---

### Initial Connection

1. **Connect Antenna:** Connect your terrestrial antenna cable to the **RF IN** port on the decoder.
2. **Connect to TV:**
  - For High Definition: Use an HDMI cable to connect the decoder's **HDMI** port to an HDMI input on your TV.
  - For Standard Definition (Older TVs): Use a SCART cable to connect the decoder's **SCART TV** port to the SCART input on your TV.
3. **Power Connection:** Connect the provided power adapter to the **DC 12V** port on the decoder, then plug the adapter into a power outlet. The 12V power supply makes it suitable for use in boats and campers.
4. **Optional Network Connection:** If desired, connect an Ethernet cable to the **LAN** port for network features or a specific USB Wi-Fi dongle (not included) to the **USB 2.0** port for wireless connectivity.

### First Time Installation

Upon first power-on, the decoder will guide you through the initial setup process:

1. **Language Selection:** Choose your preferred menu language. The menu is multilingual.
2. **Channel Search:** The decoder will automatically perform a channel search (LCN - Automatic Channel Sorting). This process may take several minutes. You can also perform a manual channel search later if needed.
3. **Time Zone:** Set your local time zone.

The decoder will power on to the last viewed channel after initial setup.

## OPERATING INSTRUCTIONS

---

### Basic Operation

- **Power On/Off:** Use the power button on the remote control to turn the decoder on or off.

- **Channel Change:** Use the P+/P- buttons or the numeric keypad on the remote to change channels.
- **Volume Control:** Use the V+/V- buttons on the remote to adjust the volume.
- **Menu Navigation:** Use the directional arrows and OK button to navigate through the on-screen menu.

## Advanced Features

- **Media Player Function:** Connect a USB storage device to the **USB 2.0** port to view photos (JPG, BMP), listen to music (MP3), or play videos (MKV, AVI, MP4, DiVX) in high definition.
- **CEC Function:** If your TV supports CEC (Consumer Electronics Control), enable this function in the decoder's settings. This allows you to control the decoder using your TV's remote control, including automatic power on/off synchronization.
- **EPG (Electronic Program Guide):** Access the EPG to view program schedules for available channels.
- **Teletext:** Use the Teletext function for text-based information services.
- **Subtitles and Dual Audio:** If available for a broadcast, you can select subtitle tracks and alternative audio languages.
- **Parental Control:** Set up parental control to restrict access to certain channels or programs.
- **Favorite Lists:** Create and manage lists of your favorite channels for quick access.
- **Timer:** Use the timer function for scheduled recordings or automatic power on/off.
- **Automatic Shutdown:** The decoder features an automatic shutdown function after 3 hours of inactivity.

## MAINTENANCE

---

### Software Updates

To ensure optimal performance and access to the latest features, it is recommended to keep your decoder's software updated. Software updates can be performed via:

- **OTA (Over-The-Air):** Automatic updates broadcast by the service provider.
- **USB:** Manual updates using a USB flash drive.
- **FTP:** Updates via network connection (LAN).

Refer to the decoder's system settings menu for available update options and instructions.

### Cleaning

Wipe the decoder's exterior with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

## TROUBLESHOOTING

---

If you encounter issues with your Digiquest DVB-T2 G9 decoder, try the following steps:

- **No Picture/Sound:** Ensure all cables (antenna, HDMI/SCART, power) are securely connected. Check that your TV is set to the correct input source (HDMI or AV).
- **No Channels Found:** Verify your antenna connection. Perform an automatic channel search again from the menu. Ensure your antenna is properly aligned.
- **Remote Control Not Working:** Check the batteries in the remote control. Ensure there are no obstructions between the remote and the decoder's IR sensor.
- **Decoder Unresponsive:** Disconnect the power adapter from the wall outlet, wait for 10 seconds, then reconnect it.

If problems persist, consult the full user manual or contact Digiquest customer support.

## SPECIFICATIONS

---

| Feature                              | Description  |
|--------------------------------------|--|
| Brand                                | DIGIQUEST  |
| Item Model Number                    | 0569549  |
| Color                                | Black  |
| Connectivity Technology              | HDMI, USB  |
| Connectors                           | HDMI, RCA, USB Type A  |
| Total HDMI Ports                     | 1  |
| Total USB Ports                      | 1  |
| Compatible Devices                   | Television   |
| Special Features                     | Dual remote control, automatic and fast channel search, parental control, Media Player function, CEC, DVB-T2 10-bit compatibility, 5.1 surround sound, HDMI, USB, RCA connectivity |
| Audio Output Mode                    | Stereo   |
| Surround Sound Channel Configuration | 5.1  |
| Video Encoding                       | HEVC Main 10   |
| Rechargeable Battery                 | No   |
| Manufacturer                         | DIGIQUEST  |
| Country of Origin                    | China  |
| Spare Parts Availability             | Information not available  |
| Software Updates Guaranteed Until    | Information not available  |

## WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation provided with your purchase or contact your retailer. For technical support or further assistance, please visit the official Digiquest website or contact their customer service department.

**Manufacturer:** DIGIQUEST

**Website:** [Visit the DIGIQUEST Store on Amazon](#)