



Manuals.plus /

› HP /

› HP Pro Laminator 600 A4 User Manual

HP 3163

HP Pro Laminator 600 A4 User Manual

Model: 3163

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your HP Pro Laminator 600 A4. Please read these instructions thoroughly before using the device and retain them for future reference. Proper use ensures optimal performance and extends the lifespan of your laminator.

2. SAFETY INSTRUCTIONS

- Always connect the laminator to a grounded power outlet.
- Do not operate the device with wet hands or near water.
- Ensure adequate ventilation around the laminator during operation.
- Keep children and pets away from the device.
- Do not insert objects other than lamination pouches into the feed slot.
- Unplug the laminator when not in use or before cleaning.
- Avoid touching the heated parts of the laminator during and immediately after use.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- HP Pro Laminator 600 A4
- Power Cord
- Instruction Manual
- Starter set of lamination pouches (quantity may vary)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your HP Pro Laminator 600 A4.



Figure 4.1: Front angled view of the HP Pro Laminator 600 A4, showcasing its sleek design and control panel.


Praktischen Backloader mit
klappbaren Einführhilfe
max. Eingabebreite: 230 mm

Heiz-System: 2 Rollen
werden von außen geheizt

Hochwertige Glas-Oberfläche


Ausgabebereich:
von Visitenkarte bis zum DIN A4

Intuitiven Touch Panel
Power, 75/80 Micron,
125 Micron, Kalt, Rücklauf

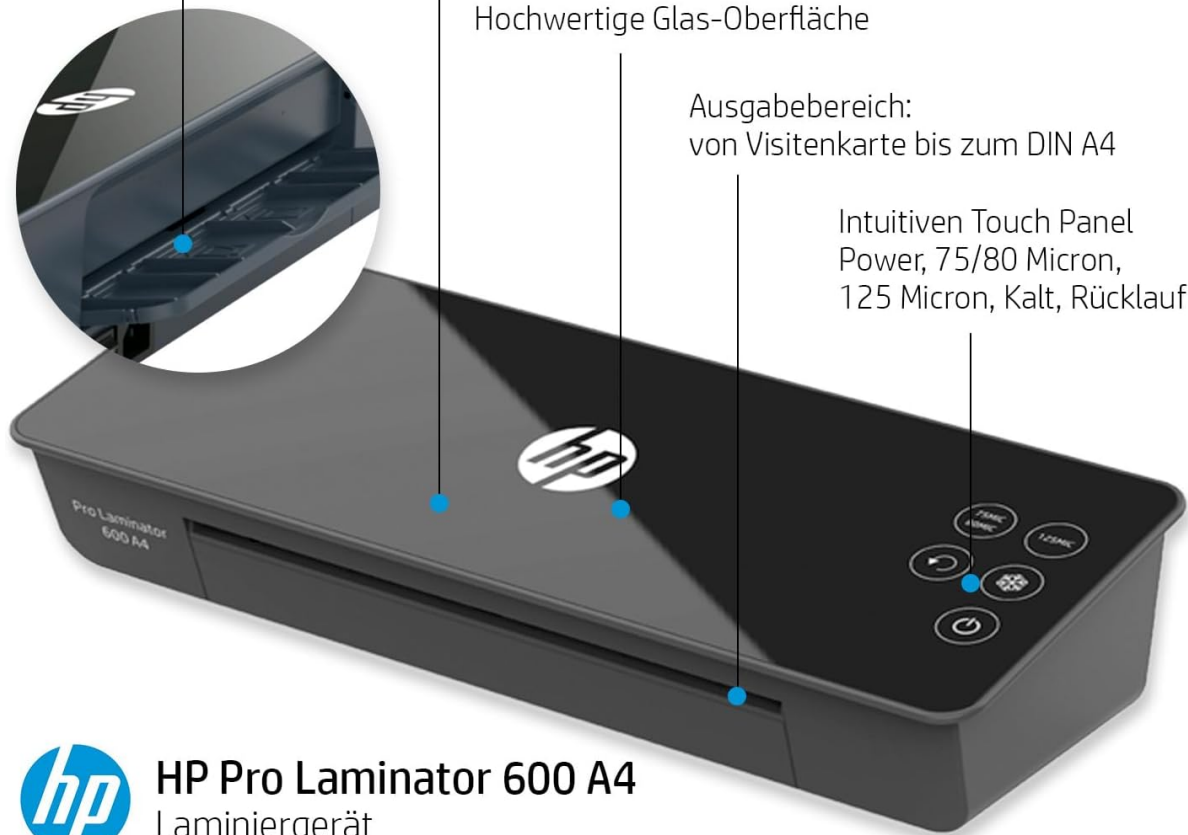

HP Pro Laminator 600 A4 Laminiergerät

Figure 4.2: Detailed diagram highlighting key features including the practical backloader with foldable feed aid, max input width of 230mm, 2-roller heating system, high-quality glass surface, output area for business cards up to DIN A4, and the intuitive touch panel for power, 75/80 micron, 125 micron, cold lamination, and reverse functions.

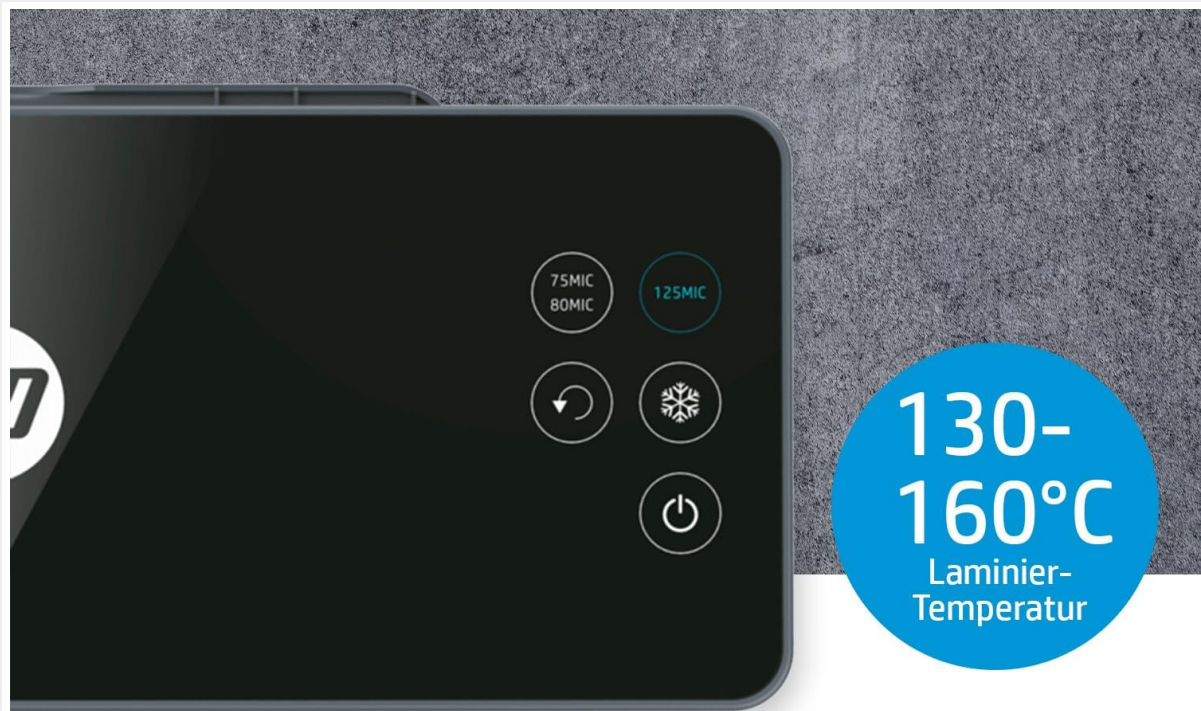

Funktional und leistungsstark

Das Gerät wird über ein Touch-Panel eingeschaltet, das die Temperatur entsprechend der Folienstärke einstellt.

Bei einem Folienstau kann die Folie per Rücklauf-Taste wieder ausgeworfen werden.

Figure 4.3: Close-up view of the touch control panel, showing buttons for 75/80 micron, 125 micron, reverse (ABS), cold lamination (snowflake icon), and power.

Key Components:

- **Feed Slot:** Where documents with lamination pouches are inserted.
- **Output Tray:** Where laminated documents exit.
- **Control Panel:** Touch-sensitive buttons for power, temperature settings, and jam release.
- **Power Switch:** Located at the rear of the device.
- **Power Inlet:** For connecting the power cord.

5. SETUP

1. **Unpack:** Carefully remove the laminator from its packaging. Retain packaging for storage or transport.
2. **Placement:** Place the laminator on a stable, flat, and heat-resistant surface. Ensure there is sufficient space around the device for proper ventilation and for documents to exit freely.
3. **Power Connection:** Connect the power cord to the power inlet at the rear of the laminator, then plug the other end into a suitable grounded electrical outlet.
4. **Power On:** Flip the main power switch located at the rear of the device to the 'ON' position.

6. OPERATING INSTRUCTIONS

6.1 Powering On and Warm-up

1. After connecting the power and turning on the rear switch, press the power button on the touch control panel.
2. The laminator will begin its warm-up cycle. The warm-up time is approximately 60 seconds.
3. Once the laminator is ready, the indicator light for the selected lamination mode will illuminate steadily.

6.2 Selecting Lamination Mode

The HP Pro Laminator 600 A4 supports both hot and cold lamination, with different settings for pouch thickness.

- **75/80 Micron:** For standard hot lamination pouches. Press the '75MIC/80MIC' button.
- **125 Micron:** For thicker hot lamination pouches. Press the '125MIC' button.
- **Cold Lamination:** For self-adhesive cold lamination pouches. Press the 'snowflake' icon button. No heat is applied in this mode.



HP Qualität mit edlem Design

Dank der hochwertigen schwarzen Glas-Oberfläche ein echter Hingucker auf Ihrem Schreibtisch.

-  Bis zu 600 mm pro min.
-  75/80 bis 125 Micron Folienstärke
-  **ABS-Funktion:** Rückführung per Knopfdruck

Figure 6.1: The control panel indicating the lamination temperature range of 130-160°C for hot lamination modes.

6.3 Lamination Process (Hot Lamination)

1. Select the appropriate hot lamination mode (75/80 micron or 125 micron) based on your pouch thickness. Wait for the laminator to reach operating temperature.
2. Place your document centrally into the lamination pouch, ensuring it is straight and there is an even border around the document.
3. Insert the sealed edge of the lamination pouch into the feed slot. The laminator will automatically draw the pouch through.
4. Support the laminated document as it exits the output tray to prevent bending.
5. Allow the laminated document to cool on a flat surface before handling or trimming.

6.4 Lamination Process (Cold Lamination)

1. Select the 'Cold Lamination' mode (snowflake icon).
2. Prepare your document with a cold lamination pouch according to the pouch manufacturer's instructions.
3. Insert the sealed edge of the cold lamination pouch into the feed slot.
4. Retrieve the laminated document from the output tray.

6.5 Jam Release (ABS Function)

In the event of a paper jam or misfeed:

1. Press and hold the 'ABS' (reverse) button on the control panel.
2. The laminator rollers will reverse, allowing you to carefully pull the pouch out of the feed slot.
3. Once the jammed pouch is removed, release the ABS button.
4. Inspect the pouch and document for damage. If reusable, re-align and attempt lamination again.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your laminator.

- **Cleaning:** Ensure the laminator is unplugged and completely cool before cleaning. Use a soft, dry cloth to wipe the exterior. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth.
- **Roller Cleaning:** Occasionally, run a laminator cleaning sheet (available separately) through the machine to remove adhesive residue from the rollers.
- **Storage:** When not in use, store the laminator in a clean, dry place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Laminator does not turn on.	No power supply.	Check power cord connection and wall outlet. Ensure rear power switch is ON and front power button is pressed.
Pouch jams in the laminator.	Pouch inserted incorrectly, wrinkled, or too thick.	Press and hold the ABS (reverse) button to release the pouch. Ensure pouch is flat and inserted sealed-edge first. Use correct pouch thickness for selected mode.
Laminated document is cloudy or bubbly.	Incorrect temperature setting or low-quality pouch.	Ensure correct temperature setting for pouch thickness. Use high-quality lamination pouches.
Laminated document is not sealed properly.	Temperature too low or laminator not fully warmed up.	Wait for the laminator to fully warm up. Ensure correct temperature setting is selected.

9. SPECIFICATIONS

Technical specifications for the HP Pro Laminator 600 A4.

Feature	Specification
Brand	HP
Model Number	3163
Dimensions (L x W x H)	50 x 50 x 28 cm (approximate product dimensions)
Weight	2.24 Kilograms
Color	Black
Sheet Size	A4 (max. 230 mm input width)
Warm-up Time	60 seconds
Number of Rollers	2
Lamination Temperature	130-160°C (for hot lamination)
Pouch Thickness Support	75/80 micron, 125 micron
Lamination Speed	Up to 600 mm/min
Special Features	ABS (Anti-Blocking System) for jam release, Cold Lamination function
Manufacturer	'GO Europe

10. WARRANTY AND SUPPORT

The HP Pro Laminator 600 A4 comes with a manufacturer's warranty. Based on available information, spare parts availability is indicated for 1 year. For specific warranty terms and conditions, please refer to

the warranty card included with your product or contact HP customer support.

For technical assistance, troubleshooting beyond this manual, or to inquire about spare parts, please visit the official HP support website or contact their customer service department in your region. Keep your purchase receipt and product model number (3163) handy when contacting support.