

[Manuals.plus](#) /

› [Barbie](#) /

› Barbie Color Reveal Surprise Party! Set (Model GXJ88) Instruction Manual

Barbie GXJ88

Barbie Color Reveal Surprise Party! Set (Model GXJ88) Instruction Manual

Your guide to unboxing, revealing, and playing with your Barbie Color Reveal Surprise Party! Set.

1. INTRODUCTION AND OVERVIEW

The Barbie Color Reveal Surprise Party! Set (Model GXJ88) offers an exciting unboxing experience with over 50 surprises. This set includes a Barbie Color Reveal doll, a Chelsea Color Reveal doll, and two Color Reveal pets, all featuring metallic coatings with colorful confetti stars. The packaging itself transforms into various play elements, enhancing the overall play experience.

Key features include:

- Two Color Reveal dolls (Barbie and Chelsea) and two Color Reveal pets.
- Over 50 hidden surprises, including fashions, hair accessories, and party decorations.
- Water-activated color-change features for dolls and pets.
- Transformable packaging that becomes a playmat, DJ booth, and party props.



Image 1: The Barbie Color Reveal Surprise Party! Set packaging.

2. SETUP

Follow these steps to set up your Barbie Color Reveal Surprise Party! Set:

1. **Unbox the Surprises:** Open the gift set to find a double-sided unboxing game and playmat. Play the game to discover and open the 21 mystery boxes containing various surprises like fashions, hair accessories, and party decorations.
2. **Prepare for Doll Reveal:** Locate the Barbie Color Reveal doll and Chelsea Color Reveal doll, which are covered in a metallic confetti star print. You will also find two metallic pets.
3. **Transform Packaging:** The packaging pieces can be punched out and folded to create a DJ booth, party props, and a puzzle. The playmat can be used to set up a dance floor for the dolls.



Image 2: All included components and accessories.

Your browser does not support the video tag.

Video 1: A demonstration of the unboxing and setup process for the Barbie Color Reveal Surprise Party! Set.

3. OPERATING INSTRUCTIONS

Experience the magic of color reveal and transformation:

1. Doll and Pet Reveal:

- Fill the provided tube (or a similar container) with warm water.
- Insert one confetti-covered doll into the warm water and swirl her around. The water will change to a metallic silvery color with shimmery swirls as the doll's features are revealed.
- Remove the doll to see her unique appearance.
- Repeat this process for the Chelsea doll and both pets.




Swirl dolls & pets in water to reveal looks!

Image 3: Swirling dolls and pets in warm water for color reveal.

2. Color-Change Activations:

- Dip the star-shaped sponge (included) in ice-cold water.
- Apply the cold sponge to Barbie doll's lips and hair, Chelsea doll's hair, both pets, and the punch bowl to activate six color-change features.
- Use warm water to revert the colors, allowing for repeated transformations.

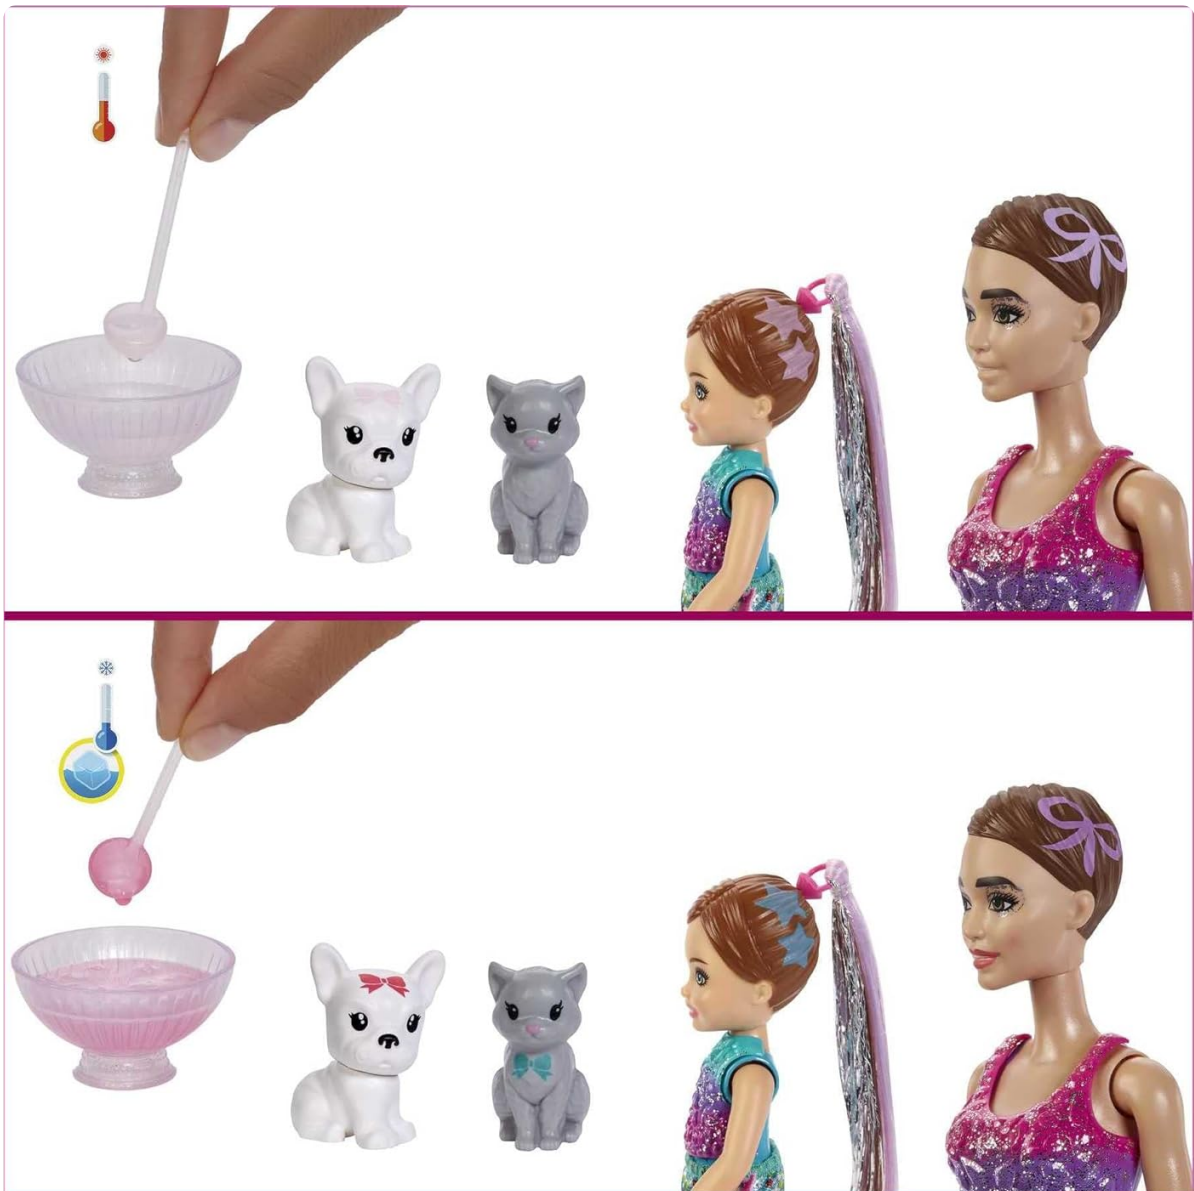

Water activates repeat color-change transformations!

Image 4: Activating color-change features with ice-cold water.

3. Party Play:

- Dress the dolls in their revealed fashions and accessories.
- Set up the transformed packaging pieces, such as the DJ booth and party props, on the playmat.
- Arrange the dolls and pets for a dance party scene.

4. MAINTENANCE

To ensure the longevity of your Barbie Color Reveal Surprise Party! Set:

- **Cleaning Dolls and Accessories:** Wipe dolls and plastic accessories with a damp cloth and mild soap if necessary. Rinse thoroughly and air dry.
- **Drying:** Ensure all dolls and accessories are completely dry before storing to prevent mold or damage.
- **Storage:** Store the set and its components in a clean, dry place away from direct sunlight and extreme

temperatures.

- **Packaging Elements:** Cardboard play pieces should be handled with care and stored flat or in their original configuration to prevent bending or tearing.

5. TROUBLESHOOTING

If you encounter any issues with your set, refer to the following common solutions:

- **Color Reveal Not Working:**
 - Ensure the water used for the initial reveal is sufficiently warm. Cold water will not activate the reveal process effectively.
 - Ensure the dolls are fully submerged and swirled for enough time to allow the metallic coating to dissolve.
- **Color-Change Features Not Activating:**
 - Verify that the water used with the sponge is ice-cold. The colder the water, the more pronounced and immediate the color change will be.
 - Apply the sponge firmly to the designated areas (lips, hair, pets, punch bowl).
- **Packaging Pieces Not Assembling Correctly:**
 - Refer to the visual instructions on the packaging for proper folding and assembly of the DJ booth, playmat, and other props.
 - Ensure all perforations are fully separated before attempting to fold.
- **Water Play Mess:**
 - Always conduct water play on a protected surface or in an area where spills are easily managed.
 - Have towels ready for quick cleanup.

6. SPECIFICATIONS

Feature	Detail
Brand	Barbie
Model Number	GXJ88
Age Range	3 years and up
Material	Plastic

Item Weight	3.4 Pounds
Item Dimensions	3.31 x 12.8 x 3.31 inches
Number of Pieces	43
Included Components	1 Color Reveal Barbie doll with color-change make-up and hair, 1 Color Reveal Chelsea doll with color-change hair, 2 Color Reveal pets each with color-change feature, 1 Barbie wig, 1 Chelsea ponytail hair extension, 1 Barbie clip-on bodice, 1 Barbie skirt, 1 Chelsea clip-on bodice, 1 Chelsea skirt, 1 brush, 1 sponge, 1 pair of Barbie shoes, 1 pair of Chelsea shoes, 1 Barbie purse, 2 party hats, 1 cupcake platter, 3 cupcakes, cake pops, macaroon dish, 1 punch bowl with color-change, 1 ladle, 4 punch cups, 1 table, 2 balloons, 1 tripod, 1 camera, 1 Chelsea backdrop frame, 1 microphone, 1 speaker, 1 laptop, 1 disco ball, 1 bag of confetti, decorating fabric, 2 Chelsea backdrops, 8 photo prop pieces, 1 DJ booth, 7 speaker boxes, 3 table tops, 1 double-sided game and playmat, 1 arrow spinner, 1 party mask, 3 party floor areas, 6 puzzle pieces and 5 boxes / chairs.

7. WARRANTY

This product is sold without a manufacturer's warranty. Please refer to the retailer's return policy for any issues upon purchase.

8. SUPPORT

For further assistance or inquiries regarding the Barbie Color Reveal Surprise Party! Set (Model GXJ88), please contact the manufacturer, Mattel, through their official customer support channels.