

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Claymore](#) /

› [Claymore V600+ Portable Fan Instruction Manual](#)

Claymore V600+

Claymore V600+ Portable Fan Instruction Manual

Model: V600+

1. INTRODUCTION

Thank you for choosing the Claymore V600+ Rechargeable Portable Fan. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your fan. Please read it thoroughly before first use and keep it for future reference.



Image: The Claymore V600+ Portable Fan in Warm Gray, showcasing its compact design.

2. PRODUCT FEATURES

- **Long-Lasting Battery:** Equipped with a 7,800 mAh Li-ion battery, providing up to 32 hours of wireless operation on the ultra-low setting.
- **Powerful & Quiet Airflow:** Features a BLDC motor with 4 wind speed levels, delivering a maximum airflow of 5.8 m/s while maintaining an ultra-quiet operation (as low as 15 decibels).
- **USB-C Charging:** Conveniently recharges via USB Type-C. Full charge takes approximately 6.5 hours.
- **Adjustable Design:** The fan head can be adjusted vertically up to 45 degrees to direct airflow.
- **Versatile Mounting:** Includes a tripod stand and a built-in 1/4-inch tripod socket for flexible positioning on various surfaces or hanging.
- **Easy Maintenance:** The front safety cage is removable for quick and safe cleaning of the fan blades.

- **Integrated Timer:** Features a 1-4 hour timer setting for automated shut-off.

3. PACKAGE CONTENTS

Ensure all items are present upon unboxing:

- Claymore V600+ Portable Fan
- Tripod Stand
- USB Type-C Charging Cable
- Carry Case

REMOVABLE FRONT GRILL FOR EASY CLEANING

Detachable grill is washable wipe main body dry. Blades are non-removable.



Image: The Claymore V600+ fan, tripod, and charging cable neatly stored within its included carry case.

4. SETUP

4.1 Attaching the Tripod Stand

1. Locate the 1/4-inch tripod socket at the bottom of the fan unit.
2. Unfold the legs of the tripod stand.
3. Screw the tripod stand clockwise into the socket until it is securely fastened.

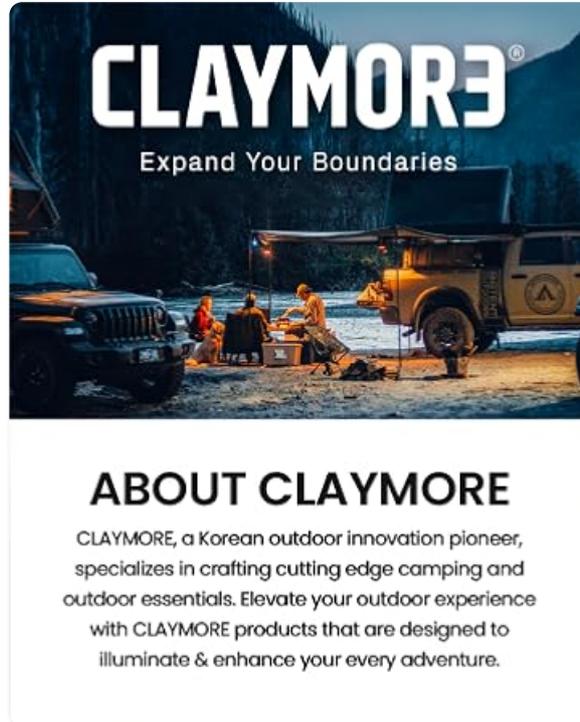


Image: A user demonstrating how to attach the tripod stand to the base of the fan.

4.2 Adjusting Fan Angle

The fan head can be manually tilted up to 45 degrees vertically. Gently adjust the fan head to your desired angle. Do not force rotation beyond the specified range, as this may cause damage.



Image: A visual representation of the fan head's 45-degree vertical adjustment capability.

4.3 Initial Charge

For optimal performance, fully charge the fan before its first use. Refer to the "Charging" section for detailed instructions.

5. OPERATION

5.1 Power On/Off and Speed Control

The fan features a control panel with buttons for power and speed adjustment. There are 4 fan speed levels: Ultra-Low, Low, Medium, and High.

1. Press the power button (usually marked with a fan icon) once to turn the fan on to the Ultra-Low speed.
2. Press the power button repeatedly to cycle through the speed settings: Low, Medium, High.
3. After the High setting, pressing the button again will turn the fan off.

Your browser does not support the video tag.

Video: Demonstrates how to cycle through the four fan modes (Ultra-Low, Low, Medium, High) and turn the fan off using the control button.

5.2 Setting the Timer

The fan includes a timer function for automatic shut-off.

1. With the fan powered on, press the timer button (usually marked with a clock icon).
2. Each press will cycle through the available timer settings: 1 hour, 2 hours, 3 hours, 4 hours.
3. The corresponding indicator lights will illuminate to show the selected timer duration.
4. Pressing the timer button after the 4-hour setting will deactivate the timer.

Your browser does not support the video tag.

Video: Illustrates the process of setting the sleep timer on the fan, showing the indicator lights for each duration.

6. CHARGING

The Claymore V600+ fan is equipped with a 7,800mAh rechargeable battery.

1. Locate the USB-C charging port on the back of the fan, covered by a protective flap.
2. Open the flap and insert the provided USB Type-C cable into the port.
3. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a power source.
4. A small blue indicator light next to the charging port will illuminate, indicating that the fan is

charging.

5. Charging takes approximately 6.5 hours for a full charge. The indicator light will turn off once charging is complete.
6. The fan can be operated while it is charging.

UP TO 45° ADJUSTABLE HEAD TO DIRECT BREEZE

Direct airflow precisely where you need it, though **left/right** rotation is **not available**

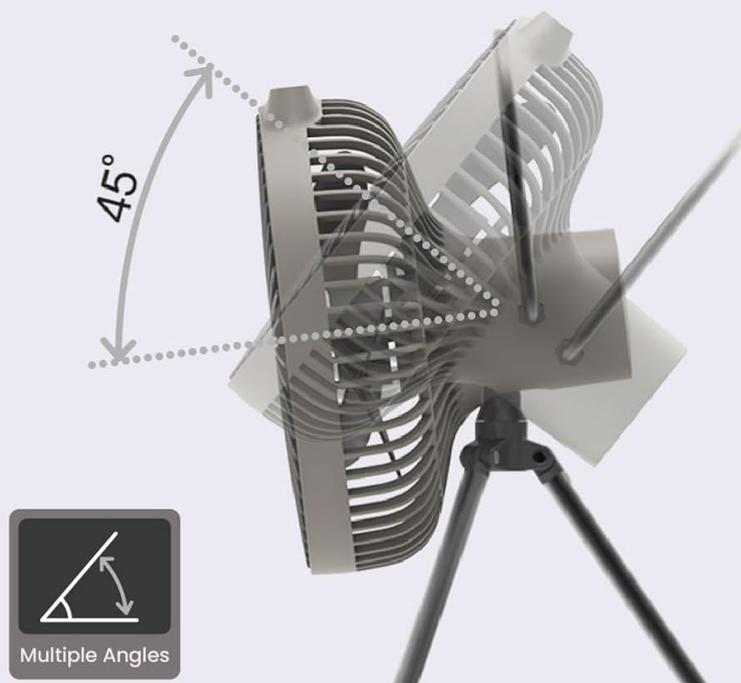


Image: A detailed view of the USB-C charging port on the back of the fan, with the protective flap open.

Your browser does not support the video tag.

Video: Shows the charging process, including plugging in the USB-C cable and the charging indicator light.

7. MAINTENANCE

7.1 Cleaning the Fan Blades

Regular cleaning ensures optimal performance and extends the lifespan of your fan.

1. Ensure the fan is turned off and unplugged from any power source before cleaning.
2. To remove the front safety cage, gently twist it counter-clockwise until it unlocks and detaches.
3. Wipe the fan blades with a dry or slightly damp cloth. The blades are not removable.
4. The detached front grill can be washed under running water. Ensure it is completely dry before reattaching.
5. To reattach the front grill, align the arrows and grooves, then twist clockwise until it clicks into place.

MULTIPLE SETUP OPTIONS

Use with Tripod, Light Stand, or On Its Own

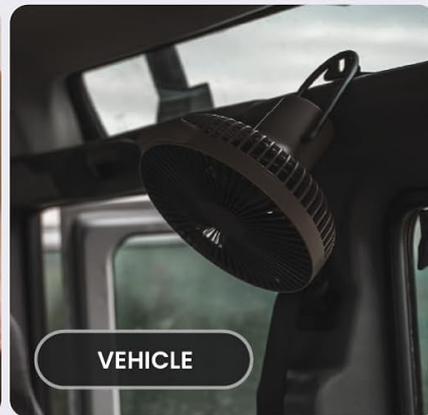
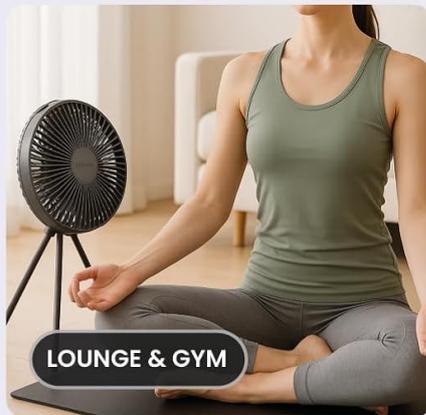


Image: A user removing the front grill of the fan to access the blades for cleaning.

8. SPECIFICATIONS

Feature	Detail
Brand	Claymore

Model Name	V600+
Color	Warm Gray
Power Source	Battery Powered (7,800mAh Li-ion)
Charging Type	USB Type-C
Charging Time	Approx. 6.5 hours
Runtime (Max)	Up to 32 hours (Ultra-Low speed)
Fan Speeds	4 levels
Max Airflow	5.8 m/s
Noise Level	Down to 15 Decibels
Adjustable Angle	45° Vertical Tilt
Dimensions (with tripod)	5.47"D x 7.08"W x 13.78"H
Item Weight	1.3 Pounds
Mounting Type	Tripod Mount
Manufacturer	Prism Co., Ltd

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan using the provided USB-C cable.
Fan is not charging.	Charging cable or adapter is faulty; port is obstructed.	Ensure the USB-C cable is securely connected. Try a different USB power adapter. Check the charging port for any debris.
Reduced airflow or unusual noise.	Fan blades or grill are dirty.	Refer to the "Maintenance" section to clean the fan blades and grill.

10. SAFETY INFORMATION

- Do not immerse the fan in water or expose it to heavy rain.

- Keep the fan out of reach of children and pets.
- Do not insert fingers or any objects into the fan grill while it is operating.
- Use only the provided USB-C cable for charging.
- Do not attempt to disassemble or repair the fan yourself. Contact customer support for assistance.
- Avoid placing the fan near heat sources or in direct sunlight for extended periods.

11. WARRANTY AND SUPPORT

For warranty information, product support, or service inquiries, please contact Claymore customer service or visit the official Claymore website. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: Prism Co., Ltd