

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Midea](#) /

› [Midea Combo Washer Dryer User Manual](#)

Midea MFK1280WDS

Midea Combo Washer Dryer User Manual

Model: MFK1280WDS

INTRODUCTION

This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your Midea Combo Washer Dryer. Please read this manual thoroughly before using the appliance and retain it for future reference.

SAFETY INFORMATION

Always adhere to the following safety precautions to prevent injury or damage to the appliance:

- Ensure the appliance is properly grounded before use.
- Do not allow children to play with or operate the appliance.
- Keep flammable materials away from the appliance.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances such as gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Ensure adequate ventilation around the appliance.
- Unplug the appliance before cleaning or performing any maintenance.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your Midea Combo Washer Dryer.



Figure 1: Angled front view of the Midea Combo Washer Dryer. This image shows the overall design, including the silver finish and the dark control panel at the top.



Figure 2: Direct front view of the Midea Combo Washer Dryer. This perspective highlights the large circular door and the detergent dispenser drawer located at the bottom right.



Figure 3: Top view of the Midea Combo Washer Dryer's control panel. This image details the touch controls, digital display, and program selection dial.

Key Components:

- **Control Panel:** Features a program selection dial, touch controls, and a digital display for cycle information.
- **Detergent Dispenser:** Located at the top left, for adding detergent and fabric softener.
- **Drum:** The main compartment for washing and drying clothes.
- **Door:** Front-loading door for accessing the drum.
- **Drain Pump Filter:** Located at the bottom right, accessible for cleaning.

SETUP

Proper installation is crucial for the performance and longevity of your appliance.

1. Unpacking:

- Carefully remove all packaging materials.
- Inspect the appliance for any shipping damage.

2. Removing Transit Bolts:

Before operation, it is essential to remove the four transit bolts located at the rear of the machine. These bolts secure the drum during transport and must be removed to prevent excessive vibration and noise during operation. Refer to the installation guide for detailed instructions on removal.

3. Leveling the Appliance:

Use the adjustable leveling feet to ensure the machine is perfectly level on the floor. An unlevel machine can cause vibration and noise.

4. Water Connection:

Connect the water inlet hoses to the appropriate hot and cold water taps and to the corresponding inlets on the back of the machine. Ensure all connections are tight to prevent leaks.

5. Drain Hose Connection:

Securely connect the drain hose to a suitable drain pipe or sink, ensuring it is properly positioned to prevent backflow.

6. Electrical Connection:

Plug the power cord into a grounded 220V electrical outlet. Do not use extension cords or adapters.

7. Initial Run:

Before washing clothes, run an empty wash cycle with a small amount of detergent to clean the drum and internal components.

OPERATING INSTRUCTIONS

Follow these steps for effective washing and drying:

1. Loading Laundry:

- Open the door and load clothes loosely into the drum. Do not overload the machine.
- Close the door firmly.

2. Adding Detergent:

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment and fabric softener to its designated compartment.
- Push the drawer back in gently.

3. Selecting a Program:

- Turn the program selection dial to choose the desired wash or wash+dry cycle (e.g., Normal, Cotton, Synthetics).
- The digital display will show the estimated cycle time and other relevant information.
- Adjust additional options (e.g., temperature, spin speed, delay start) using the touch controls if available for the selected program.

4. Starting the Cycle:

- Press the Start/Pause button to begin the cycle.
- The machine will automatically proceed through the selected wash and dry phases.

5. After the Cycle:

- Once the cycle is complete, the machine will signal.
- Open the door and remove the laundry.
- Leave the door slightly ajar to allow the drum to air dry and prevent odors.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your appliance.

1. Cleaning the Detergent Dispenser:

- Remove the dispenser drawer and rinse it under warm water to remove any detergent residue.
- Clean the housing of the dispenser with a brush.

2. Cleaning the Drum:

- Run a drum clean cycle (if available) or a hot wash cycle with no laundry and a descaling agent periodically.

3. Cleaning the Drain Pump Filter:

- Regularly check and clean the drain pump filter to prevent blockages. Refer to the manual for specific instructions on accessing and cleaning the filter.

4. Exterior Cleaning:

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Excessive noise/vibration	Transit bolts not removed; appliance not level; uneven load.	Remove transit bolts (see Setup); adjust leveling feet; redistribute laundry.
Water leaking from detergent drawer	Detergent drawer not fully closed; excessive water pressure; clogged dispenser.	Ensure drawer is fully closed; check water pressure; clean dispenser.
Clothes not drying completely or drying takes too long	Overloaded dryer; lint filter clogged; incorrect program selected.	Reduce load size; clean lint filter; select appropriate drying program.
Machine does not start	Power cord unplugged; door not closed properly; power outage.	Check power connection; ensure door is latched; check household circuit breaker.

For issues not listed here or if problems persist, please contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	Midea
Model Number	MFK1280WDS
Capacity (Wash)	12 Kilograms
Capacity (Dry)	8 Kilograms (inferred from product title)
Color	Silver
Product Dimensions (D x W x H)	66 cm x 68.5 cm x 106.5 cm
Item Weight	46 Kilograms
Annual Energy Consumption (Washing)	150 kWh
Estimated Annual Energy Consumption	165 kWh per year
Noise Level	62 dB
Installation Type	Under Counter
Control Type	Fully Automatic, Touch
Voltage	220 Volts
Maximum Spin Speed	1400 RPM
Special Features	Adjustable leveling feet
Door Hinges	Right
Loading Type	Front Load

WARRANTY AND SUPPORT

For installation services or technical support, please contact Midea customer service at the following numbers:

- **Riyadh:** +966 -11- 4094006 Ext – 113
- **Jeddah:** +966- 12- 6577714
- **Dammam:** +966-13- 8343691
- **Qassim:** +966 581044198
- **Abha:** +966 593322785

Please retain your purchase receipt for warranty claims. Specific warranty terms and conditions may vary by region and are typically provided with the product documentation.

